

Philips audio player

SA4000
SA4005
SA4010
SA4015
SA4020
SA4025

Quick start guide



- 1 Install
- 2 Connect
- 3 Transfer
- 4 Enjoy

PHILIPS

Need help?

Please visit

www.philips.com/usasupport

where you can access to a full set of supporting materials such as user manual, flash tutorial, the latest software upgrades and answers to frequently asked questions.

Or call our Customer Care Helpline,

[1-888-744-5477](tel:1-888-744-5477)

where our professional support team will be pleased to assist you in solving any issues you may have with your player.

Need help?

Look up our Support Centre website

www.philips.com/usasupport

or

Call our Customer Care helpline in your country

Besoin d'aide ?

Visitez la page Web de notre centre
d'assistance à l'adresse

www.philips.com/usasupport

ou

Appelez le centre client de votre pays

¿Necesita ayuda?

Consulte nuestra página Web de Soporte técnico,

www.philips.com/usasupport



Llame a nuestra Línea de atención al cliente de su país

Support?

Besuchen Sie unser Support Center auf

www.philips.com/usasupport

oder

wenden Sie sich einfach an den telefonischen Kundendienst
Ihres jeweiligen Landes

Country	Helpdesk	Tariff / min	Keep ready
Europe			
Austria	0820 901115	€0.20	Das Kaufdatum, Modellnummer und Serial nummer
Belgium	070 253 010	€0.17	La date d'achat la référence et le numéro de série du produit
Czech Republic	800142100	Místní tarif	Datum zakoupení, číslo modelu a sériové číslo
Denmark	3525 8761	Lokal tarif	Indkøbsdato, type-, model- og serienummer
Finland	09 2290 1908	Paikallinen hinta	Ostopäivä ja tarkka mallinnumero ja sarjanumero
France	08 9165 0006	€0.23	La date d'achat la référence et le numéro de série du produit
Germany	0180 5 007 532	€0.12	Das Kaufdatum, Modellnummer und Serial nummer
Greek	0 0800 3122 1223	1 αστική μονάδα	Την ημερομηνία αγοράς και τον ακριβή κωδικό μοντέλου και τον αριθμό σειράς του προϊόντος σας
Hungary	06 80 018544	Helyi tarifa	A vásárlás dátuma, modell szám és szériaszám
Ireland	01 601 1161	Local tariff	Date of Purchase, Model number and Serial number
Italy	199 404 042	€0.25	La data di acquisto, numero di modello e numero di serie
Luxemburg	26 84 30 00	Tarification locale	La date d'achat, la référence et le numéro de série du produit
Netherlands	0900 0400 063	€0.20	De datum van aankoop, modelnummer en serienummer
Norway	2270 8250	Lokal tariff	Datoen da du kjøpte produktet & modellnummer & serienummeret
Poland	022 3491504	Cena połączenia lokalnego	Data zakupu, Numer modelu i numer seryjny
Portugal	2 1359 1440	Preço local	A data de compra, número do modelo e número de série
Russia	(495) 961-1111 8 800 200-0880	по России звонок бесплатный	Дата покупки, Номер модели и Серийный номер
Slovakia	0800004551	Miestna tarifa	Dátum zakúpenia, číslo modelu a sériové číslo
Spain	902 888 785	€0.15	Fecha de compra y número del modelo y número de serie
Sweden	08 632 0016	Lokal kostnad	Inköpsdatum, modellnummer och serienummer
Switzerland	02 2310 2116	Ortstarif	Das Kaufdatum, Modellnummer und Serial nummer
UK	0906 1010 017	£0.15	Date of Purchase, Model number and Serial number
North America			
Canada	0820 901115 (Francophone) 1-888-744-5477 (English / Spanish)	Free	Date of Purchase, Model number and Serial number
USA	1-888-744-5477	Free	Date of Purchase, Model number and Serial number
South America			
Argentina	11 4544 2047	Tarifa local	Fecha de compra y número del modelo y número de serie
Brazil	0800 701 02 03 (Except Sao Paulo) 2121 0203 (Sao Paulo)	Grátis Preço local	A data de compra, número do modelo e número de série
Chile	600 744 5477	Tarifa local	Fecha de compra y número del modelo y número de serie
Mexico	01 800 504 6200	Gratis	Fecha de compra y número del modelo y número de serie
Asia			
China	4008 800 008	本地费率	购买日期、型号及序号
Hong Kong	2619 9663	本地费率	購買日期、型號及序號
Korea	02 709 1200	관세	구매일자, 모델 번호, 시리얼 번호

- 2 Is there a manual?
- 2 Register your product
- 2 Don't forget about upgrades
- 3 What's in the box
- 4 Overview of controls and connections
- 5 Install
- 5 Connect
 - 5 Insert the battery
 - 5 Read the battery level indication of your player
- 6 Transfer
 - 6 Music transfer using Windows Media Player 10
- 7 Enjoy
 - 7 Power on and play
 - 7 Navigate the menu
- 8 Music mode
- 8 Recordings
 - 8 Make recordings
 - 9 Play back recordings
- 9 Troubleshooting
 - 9 How do I recover my player?
 - 9 How do I reset my player?
- 9 Disposal of your old product

Is there a manual?

You have a detailed user manual and FAQ on the CD by-packed with your player. You can also download the same file from this website: www.philips.com/usasupport

Register your product

Since it is possible for you to upgrade your product, we recommend that you register your product on www.philips.com/usasupport so we can inform you as soon as new free upgrades become available.

Don't forget about upgrades

We know you will enjoy your product for a long time. For best performance, we recommend that you regularly check in to www.philips.com/usasupport for free upgrades of the latest software and Firmware Manager for your product. These downloads will help you to optimize your product's performance and to take advantage of our future support of new audio formats.

Enjoy your new music experience.

What's in the box



Headphones



USB cable



AAA battery



CD-ROM



Quick Start Guide


What else you'll need?



Computer

A computer with:
Windows XP (SP2 or above)
Pentium Class 150MHz processor or higher
CD-ROM drive
128 MB RAM
500MB Hard Disk space
USB Port
Internet connection (preferable)
Microsoft Internet Explorer 6.0 or later

Overview of controls and connections

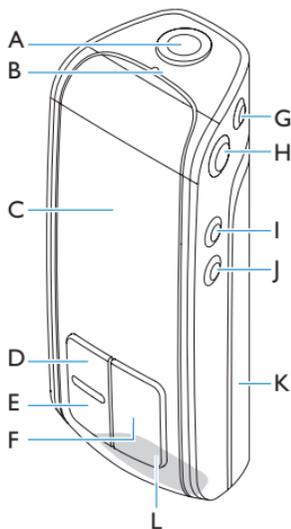


A 	Headphones jack
B	Microphone
C Display	Dynamically display menu, options and track information
D 	Press to return to a previous song, press and hold to fast rewind. In menu mode, press to navigate through the menu.
E 	Press to skip to the next song, press and hold to fast forward. In menu mode, press to navigate through the menu.
F 	Power on/off and Play/Pause, confirm a menu setting
G REC	Start or stop voice recording
H MENU/ 	Press to access the menu / Return to previous menu Press and hold to disable or enable the player's controls
I Vol -	Volume down
J Vol +	Volume up
K	Battery door
L	USB connector

1 Install

- 1 Insert the CD supplied with your product into the CD ROM drive of your PC.
- 2 Follow the on-screen instructions to complete the installation of **Windows Media Player 10** and **Philips Device Manager**.

2 Connect

 A Insert the battery



- 1 Remove the battery door by sliding it in the direction of arrow.
- 2 Insert the supplied AAA battery into the battery compartment.

B Read the battery level indication of your player

The approximate power levels of your battery are indicated as follows:



Full



Two-thirds full



Half full



Low



Empty

TIP When the batteries are almost empty, the low battery screen  blinks. Your player will power down in less than 60 seconds. Your player will save all settings and un-finished recordings before it powers down.

3 Transfer

You can organize files and transfer music to your player during a USB connection session using **Windows Explorer** and **Windows Media Player 10**.

A Music transfer using Windows Media Player 10



- 1 Connect the player to your computer using the supplied USB cable.
- 2 Start **Windows Media Player 10**.
- 3 Choose **Manual** in Device Setup Wizard screen. (you can also do an automatic synchronization, refer to user manual on the CD for instructions).
- 4 Select the **Sync** tab. In the pull down menu on the right pane, select **Philips SA40XX** as the destination. If they are not in the list, press **F5** to refresh and try again.
- 5 Select the **Library** tab to access the media library.
Click to highlight a song you want to copy. Right click on the item and select **Add to > Sync List**.
OR
Drag and drop the song into the **Sync List** on the right pane.
- 6 Click the **Start Sync** button to start synchronization. The progress will be displayed.
- 7 When the transfer is completed, you can disconnect your player from the computer.

4 Enjoy

A Power on and play

To power on, press ►|| until the **PHILIPS** welcome screen appears.
To power off, press and hold ►|| until there is no display on the screen.

B Navigate the menu

Your player has an intuitive menu navigation system to guide you through various settings and operations. Use ◀◀ and ▶▶ to browse through menus. Press ▶|| to confirm your selection. You can press **MENU** to access the menu and return to previous level. When your player powers up, you can see the Root menu. It includes:

🎵 Music	Play your digital music tracks
📁 Recordings	Play your recordings
⚙️ Settings	Change the playmode, equalizer, backlight or language settings, display the player information

From the main menu, select **Music** to enter music mode.
You can search from the following music options:

All songs	▶	Alphabetically listed artists
Artists	▶	Playlists collections
Playlists		

Music mode (also applicable to playback of recordings)

You can do the following actions during music playback:

To	Do this
Play / Pause music	Press ►
Skip to next song	Press ►►
Return to previous song	Press ◀◀
Fast forward	Press and hold ►►

To	Do this
Fast rewind	Press and hold ◀◀
Return to browsing	Press MENU key
Increase volume	Press Vol +
Decrease volume	Press Vol -

Recordings

Your player allows you to make voice recordings and play back your recordings.

Make recordings

- 1 Press and hold **REC** to start voice recording.
> Your player displays the recording progress.
- 2 Press and hold **REC** again to stop voice recording
> Your player displays the saving progress. The voice recording will be saved on your player. (Filename format: VOICEXXX.WAV where XXX is the recording number which is automatically generated.)

TIP You can pause and restart a recording anytime with ►||.

Play back recordings

You can find your recordings in the Recordings mode.

- 1 From the root menu, select **RECORDINGS** to enter the Recordings mode. Your player will play all your recordings alphabetically and playback will start with the latest recording made.
- 2 Press ►|| to pause the current recording on playback.
- 3 Press ◀◀ or ►► to play the next or previous recordings.
- 4 Press and hold ◀◀ or ►► to fast forward or fast rewind the current recording on playback.

Troubleshooting

How do I recover my player?

In the event of a device error, please follow the following procedures:

- 1 Make sure the player is disconnected from PC and turned off.
- 2 Launch the **Philips Device Manager** at **Start > Programs > Philips Device Manager > Philips Device Manager**.
- 3 Press and hold **▶▶**.
- 4 Connect the player to the computer USB port.
- 5 Keep holding **▶▶** until the **Philips Device Manager** acknowledges your player and goes into recovery mode.
- 6 After the repair process is completed, click **OK** and disconnect your player.
- 7 The player is ready for use again after a restart.

WARNING When the first time you connect the device to PC in recovery mode, a hardware wizard will be popped up to install the software. Please select "install the software automatically" and click Next, and then click Finish to complete the installation. During the installation, a warning message stating "The Software you are installing for this hardware has not passed Windows Logo testing." , please select "Continue Anyway", this installation will not affect your PC.

How do I reset my player?

In case the player does not react on any key press, did hang up or freeze up, please remove and insert the battery again.

Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.



Be responsible
Respect copyrights

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V.
or their respective owners
2006 © Koninklijke Philips Electronics N.V. All rights reserved.

www.philips.com

wk6403



Printed in China