

Philips GoGEAR MP3 Player

GoGEAR

SA4MIN 02
SA4MIN 04




Quick start guide
Краткое руководство
快速入門指南
Hızlı başlangıç kılavuzu
Guía de configuración rápida

Quick start guide

Register your product and get support at
www.philips.com/welcome


PHILIPS

Unpack Распакуйте Ambalajı açın
打開包裝 Sáquelos de la caja

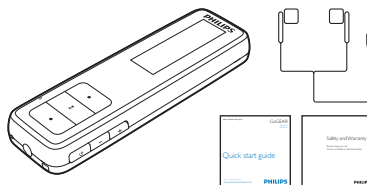


To get the latest Philips Device Manager and user manuals, download from www.philips.com/support | Последнюю версию ПО Philips Device Manager и руководства пользователя можно загрузить на веб-сайте www.philips.com/support. | 要取得最新 Philips Device Manager 及用戶手冊，請於 www.philips.com/support 下載。 | En güncel Philips Device Manager uygulamasını ve kullanım kılavuzlarını www.philips.com/support adresinden indirebilirsiniz. | Para obtener la versión más reciente de Philips Device Manager y los manuales de usuario, descárguelos en www.philips.com/support.

2 Sync Синхронизация
同步 Synchronizacija
Sincronización

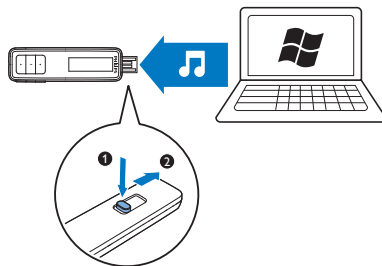


1 Install Установка
安裝 Kurun
Instalación

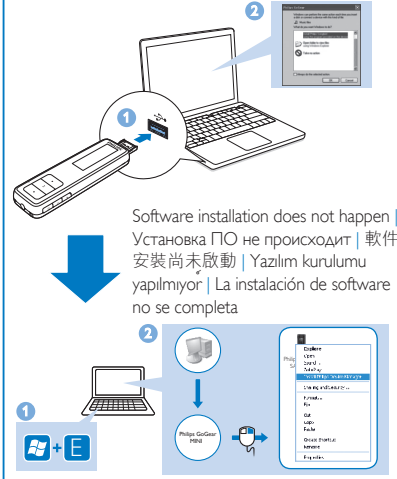

Software installation does not happen |
Установка ПО не происходит | 軟件
安裝尚未啟動 | Yazılım kurulumu
yapılmıyor | La instalación de software
no se completa

3 Use Использование
使用 Kullanım
Uso

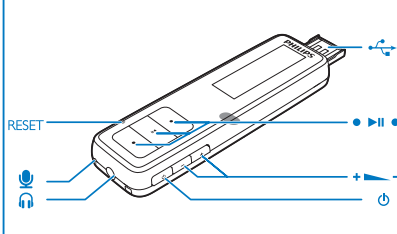

*1GB = 1 billion bytes; available storage capacity will be less.
*1GB = 十億位元組；可供使用的儲存容量可能會少於此數。
*1 GB = 1000 millones de bytes; la capacidad de almacenamiento disponible será menor.

** With 4 minute 128 kbps MP3 songs
** 包含 4 分鐘 128 kbps MP3 歌曲
** Con canciones MP3 de 4 minutos a 128 kbps

*** Battery life varies by use and settings.
*** 電池壽命會依使用方式及設置而異。
*** La duración de la batería varía en función del uso y los ajustes.

PC requirements
電腦規格
Requisitos del equipo
Windows XP (SP3 or higher) or
superfuer/ oder höher/ o superior/ 或
更高) / Vista / 7

 
This player does not support copyright protected (DRM) WMA tracks bought from on-line music stores.
播放器不支援從音樂網站購買、加入數碼版權管理(DRM)的 WMA 曲目。
Este reproductor no admite pistas WMA protegidas por leyes de derechos de autor (DRM) compradas en tiendas de música en línea.



Specifications are subject to change without notice
© 2012 Koninklijke Philips Electronics N.V.
All rights reserved.
SA4MIN_97_QSG_V2.0
wkt1211.3




On/Off Включение/выключение Açma/kapama 開啟/關閉 Activar/desactivar



Press and hold to switch on/off | Нажмите и удерживайте для включения/выключения. | 按住以開啟/關閉 | Açmak/kapatmak için basılı tutun | Manténgalo pulsado para encender/apagar el dispositivo

 Navigate Перемещение по меню Geziniş 導覽 Navigar



Navigate through the list of options | Перемещение по списку параметров | 從選項清單中瀏覽 | Seçenek listesi içinde gezin | Permiten navegar por la lista de opciones



Select options | Выбор параметров | 選擇選項 | Seçenekleri belirleme | Selecciona opciones



Press to go back one level | Нажмите для перехода на уровень назад | 按鍵以返回上一級
◦ Bir seviye geri gitmek için basın | Púlselo para volver al nivel anterior.

View options Просмотр параметров Seçenekleri görüntüleme 檢視選項 Ver opciones



On the list of options, or the play or pause/ stop screen, press and hold to view the options menu. | В списке параметров, в режиме воспроизведения или паузы/остановки воспроизведения нажмите и удерживайте для просмотра меню параметров. | 在選項清單中，或在播放或暫停/停止畫面中，按住以檢視選項功能表。 | Seçenek listesinde veya çalma ya da duraklatma/durdurma ekranında basılı tutarak seçenek menüsünü görüntüleyin. | En la lista de opciones o la pantalla de reproducción o pausa/detención, manténgalo pulsado para ver el menú de opciones.



Press to start, pause, or resume play | Нажмите для запуска, приостановки или возобновления воспроизведения. | 按下以開始、暫停或恢復播放。 | Oynatmayı başlatmak, duraklatmak veya devam ettirmek için basın | Púlselo para iniciar, pausar o reanudar la reproducción




On the play screen, press to skip songs; press and hold to fast forward or rewind. | На экране воспроизведения: нажмите для перехода к следующей песне; нажмите и удерживайте для быстрой перемотки вперед или назад. | 於主屏幕按下可跳過歌曲；按住以倒帶或快進。 | Oynatma ekranında şarkıyı geçmek için basın; hızlı ileriye veya geriye almak için basılı tutun. | En la pantalla de reproducción, púlselo para saltar canciones; manténgalo pulsado para avanzar o retroceder rápidamente.



Help

Справка
說明

 Yardım
Ayuda



Device does not respond to the pressing of keys | Устройство не реагирует на нажатие кнопок | 裝置對按鍵操作沒有響應 | Cihaz tuşlara yanıt vermiyor | El dispositivo no responde al pulsar los botones

Go to www.philips.com/support for support information. | Информацию о поддержке см. по адресу www.philips.com/support. | 請到 www.philips.com/support 獲取有關支持信息。 | Destek bilgisi almak için www.philips.com/support adresini ziyaret edin. | Vaya a www.philips.com/support para obtener información de asistencia.