




Philips
CD lens cleaner

CD and DVD

SAC2560

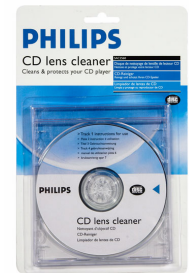

Clean and protect your CD and DVD player

Regular cleaning of your CD and DVD player's lens ensures optimum performance of your equipment. It is important to keep a CD and DVD player optical laser lens clean and dust-free. This dry brush system safely removes dust and debris.

Maintain original sound quality

- Safe dry brush cleaning system

Easy to use

- Voice instructions in 14 languages

PHILIPS
sense and simplicity

Specifications

Storage Media

- Supported formats: CD-Audio, CD-ROM, DVD-ROM

Accessories

- User Manual: 14 languages

Packaging Data

- Quantity: 1
- EAN/UPC/GTIN: 87 10895 95904 9
- Gross weight: 0.12 kg
- Tare weight: 0.04 kg
- Net weight: 0.08 kg
- Width: 159 mm
- Height: 19 mm
- Length: 248 mm

Outer Box

- EAN/UPC/GTIN: 87 10895 95980 3

- Quantity: 72
- Gross weight: 11.08 kg
- Tare weight: 1.1 kg
- Net weight: 9.98 kg
- Width: 395 mm
- Height: 290 mm
- Length: 549 mm

Inner Box

- EAN/UPC/GTIN: 87 10895 95979 7
- Quantity: 6
- Gross weight: .84 kg
- Tare weight: 0.14 kg
- Net weight: 0.70 kg
- Width: 95 mm
- Height: 265 mm
- Length: 173 mm

Highlights

Dry brush system

The dry brush cleaning system safely removes dust, debris and other contaminants from the CD/DVD player's laser lens, leaving it clean and performing optimally.

Voice instructions

The voice instructions on this easy-to-use CD lens cleaner guide you through the cleaning process in one of the 14 languages provided.



Issue date 2009-05-31

Version: 3.0.11

12 NC: 9082 100 07897
EAN: 87 10895 95904 9

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com