



Philips
CD lens cleaner

CD and DVD

SAC2560W



Clean and protect your CD and DVD player

Regular cleaning of your CD and DVD player's lens ensures optimum performance of your equipment. It is important to keep a CD and DVD player optical laser lens clean and dust free. This dry-brush system safely removes dust and debris.

Maintain original sound and video quality

- Safe dry brush cleaning system

Easy to use

- Voice instructions in 14 languages

PHILIPS

Specifications

Storage Media

- Supported formats: CD-Audio, CD-ROM, DVD-ROM

Accessories

- User Manual: 14 languages

Packaging dimensions

- Packaging dimensions (W x H x D): 15.8 x 24.7 x 1.2 cm
- Nett weight: 0.08 kg
- Gross weight: 0.108 kg
- Tare weight: 0.028 kg
- EAN: 87 12581 51331 3
- Number of products included: 1
- Packaging type: Carton
- Packaging dimensions (W x H x D):

- 6.2 x 9.7 x 0.5 inch
- Gross weight: 0.238 lb
- Nett weight: 0.176 lb
- Tare weight: 0.062 lb

Outer Carton

- Outer carton (L x W x H): 54.9 x 38.2 x 30.1 cm
- Nett weight: 5.76 kg
- Gross weight: 10.347 kg
- Tare weight: 4.587 kg
- EAN: 87 12581 51332 0
- Number of consumer packagings: 72
- Gross weight: 22.811 lb
- Outer carton (L x W x H): 21.6 x 15.0 x 11.9 inch
- Nett weight: 12.698 lb
- Tare weight: 10.113 lb

Highlights

Voice instructions

The voice instructions on this easy to use CD lens cleaner guide you through the cleaning process in one of the 14 languages provided.

Dry brush system

The dry brush cleaning system safely removes dust, debris and other contaminants from the CD/DVD players laser lens, leaving it clean and performing optimally.



Issue date 2014-02-13

Version: 1.0.2

12 NC: 8670 000 57835
EAN: 87 12581 51331 3

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com