

Philips
CD lens cleaner



SBCAC300

Clean and protect your CD player

Regular cleaning of your CD player's lens ensures optimum performance of your equipment. It is important to keep a CD player optical laser lens clean and dust free. This dry brush system safely removes dust, debris and other contaminants.

Clean & protect your equipment

- Lens is dry-cleaned without the use of fluids

PHILIPS

Specifications

Storage Media

- Supported formats: CD-Audio, CD-ROM, Photo

CD, Laser disc

Highlights

Dry cleaning

A disc with little brushes attached to it used to clean lenses inside electronic devices.



Issue date 2014-02-05

Version: 2.0.3

12 NC: 9082 100 00043
EAN: 87 10101 63536 1

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com