

Regulations according to R&TTE

English	Hereby, Philips Consumer Electronics, Remote Control Systems , declares that this ProntoPro NG is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Finnish	Philips Consumer Electronics, Remote Control Systems vakuuttaa täten että ProntoPro NG tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Dutch	Hierbij verklaart, Philips Consumer Electronics, Remote Control Systems dat het toestel ProntoPro NG in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
French	Par la présente, Philips Consumer Electronics, Remote Control Systems , déclare que l'appareil ProntoPro NG est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Swedish	Härmed intygar, Philips Consumer Electronics, Remote Control Systems , att denna ProntoPro NG står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Danish	Undertegnede Philips Consumer Electronics, Remote Control Systems erklærer herved, at følgende udstyr ProntoPro NG overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF
German	Hiermit erkläre Philips Consumer Electronics, Remote Control Systems die Übereinstimmung des Gerätes ProntoPro NG mit den grundlegenden Anforderungen und den anderen relevanten Festlegungen der Richtlinie 1999/5/EG.
Greek	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Philips Consumer Electronics, Remote Control Systems ΔΗΛΩΝΕΙ ΟΤΙ ProntoPro NG ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
Italian	Con la presente Philips Consumer Electronics, Remote Control Systems dichiara che questo ProntoPro NG è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Spanish	Por medio de la presente, Philips Consumer Electronics, Remote Control Systems , declara que el ProntoPro NG cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Portuguese	Philips Consumer Electronics, Remote Control Systems declara que este ProntoPro NG está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

Declaration of Conformity (DoC) can be found at
<http://www.pronto.philips.com/products/DoC>.

This device can be used in:								
AT ✓	BE ✓	CH ✓	DE ✓	DK ✓	GR ✓	ES ✓	FI ✓	FR ✓
IRE ✓	ISR ✓	IT ✓	LU ✓	NL ✓	NO	PT ✓	SE ✓	UK ✓

CE 0682 !

© 2003 Royal Philips Electronics NV

All rights are reserved. Reproduction in whole or in part is prohibited without prior consent of the copyright owner.

Table of Contents

Taking a First Look	4
ProntoPro NG: The Home Theatre Control Panel	4
The Device	5
The Touch Screen	7
The Docking Station	8
What's New for ProntoPro Next Generation?	9
Before You Start	10
Installing the Battery Pack	10
Charging the ProntoPro NG	11
Getting Started	13
Turning on ProntoPro NG	13
Setting Time and Date	14
Changing the Time Format	14
Changing the Time	14
Changing the Date	15
Setting the Language	16
Operating ProntoPro NG	17
Device Overview	17
Page Overview	18
Customising ProntoPro NG	19
Using the Tools	19
Defining the Brand for a Device	20
Learning Commands	23
Labelling Elements	25
Adding Devices	28
Deleting Elements	30
Moving Devices	31
Adjusting the Settings	32
Setting the Brightness of the Backlight	33
Setting the Timeout of the LCD Screen	33
Setting the Volume Level	34
Setting the Navigation for ProntoPro NG	34
Setting the Animation Mode	35
Calibrating the Touch Screen	35
Adjusting the Screen Activation Settings	36

Using the Power Features	38
Creating and Editing Macros	38
Creating a Macro	38
Editing a Macro	40
Creating and Editing Timers	51
Activating Timers	41
Creating and Editing Timers	42
Operating ProntoPro NG with the Cursor	48
Operating ProntoPro NG with RF	50
Selecting RF to Operate your Devices	51
Selecting IR to Operate your Devices	52
ProntoProEdit NG	53
FAQ	55
Troubleshooting	57
General Problems	57
Customising Problems	58
Memory Storage Problems	59
ProntoPro NG error messages	61
Connection to the PC	59
Maintaining ProntoPro NG	60
Important Notices	60
Cleaning ProntoPro NG	60
Upgrading ProntoPro NG	60
List of Symbols	61
Specifications	64
Glossary	65
Index	68

ProntoPro NG: The Home Theatre Control Panel

ProntoPro NG is a Home Theatre Control Panel that allows maximum flexibility and customisation for even the most sophisticated home entertainment system. It can control almost any device that works with infrared (IR) remote control signals. Its intuitive interface makes it a perfect remote control for every user.

ProntoPro NG is easy to configure. It contains a huge universal database where IR codes are stored to control different brands for all kinds of video, audio devices and even home automation equipment. By default ProntoPro NG is set up to control Philips and Marantz devices. For other brands you simply choose the brands of your devices when you use ProntoPro NG for the first time.

Furthermore the ProntoPro NG is equipped with a colour touch screen. This TFT-display supports 65536 colours so you can upload any colour picture.

ProntoPro NG offers you some extra powerful features:

- You can create and edit macros, allowing you to send a series of commands with one single touch.
- You can set timers for certain actions to be carried out at predefined times, e.g. switching on your lights or recording your favourite daily TV-show with your VCR.
- You can choose to have ProntoPro NG working with radio frequency (RF) signals to operate devices from a distance or from an adjacent room. To do this, you need an optional RF Extender that converts ProntoPro NG RF signals into IR signals.

With ProntoProEdit NG software you can create your own screens and define a personal look. ProntoProEdit NG's Online Help system (accessible via the 'Help' icon in ProntoProEdit NG) will guide you through the process.

See 'ProntoProEdit NG' on page 53 for more information. You can find ProntoProEdit NG on the included CD-ROM and on the Philips website www.pronto.philips.com. In the Downloads section of the website you can also find the latest upgrades for your ProntoPro NG software.

The Device

ProntoPro NG has several hard buttons. Most are freely programmable, some have a predefined function:


- The buttons on the left side of the ProntoPro NG screen have predefined functions: Page up, Page down and Backlight.
- The 4 firm keys below the touch screen are freely programmable. You can reprogram the function of these buttons and change the label on the touch screen.
- The cursor and the Home button on the right side of the cursor are programmed to operate devices (e.g. navigating through the on screen menu of your TV). With the Toggle button you can change the working of the cursor. The free programmable and the OK button are meant for future purposes. The buttons on the right side of the screen are used to control the volume and channel: Channel up, Channel down, Mute, Volume up and Volume down. Although these buttons each have a predefined function, you can program them yourself. If you learn one of these buttons or assign a macro to it, its predefined function will be permanently lost.



Taking a First Look



The Touch Screen

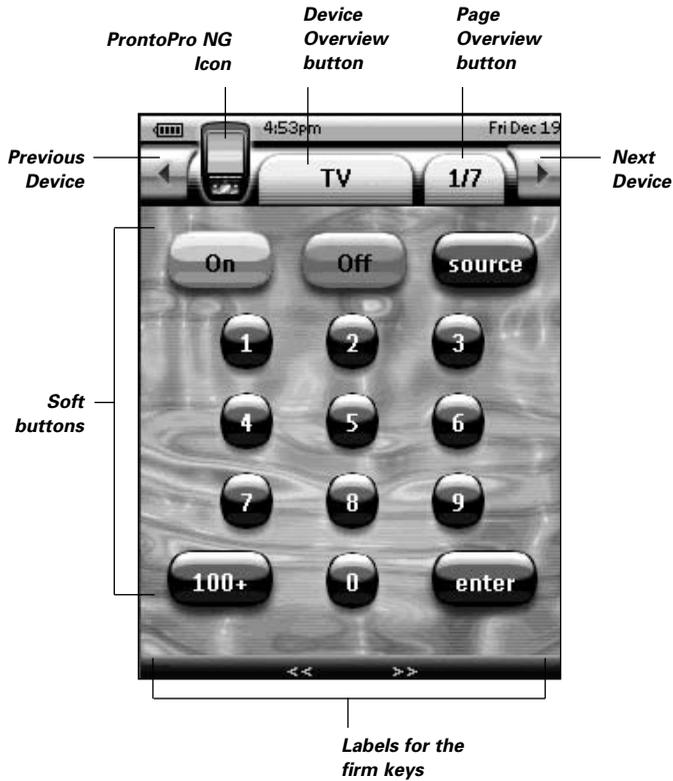

The Docking Station

The docking station is used to charge the ProntoPro NG's battery pack. When your ProntoPro NG is placed in the docking station, you can connect ProntoPro NG to your computer via the USB port of the docking station, instead of the USB port of the ProntoPro NG.



What's New for ProntoPro Next Generation?

This new ProntoPro NG (SBC RU980) offers several new features compared to the previous model of ProntoPro. The most important ones are:

■ **Transparency**

ProntoPro NG supports transparency in buttons and other objects. This makes it easier to create complex user interfaces. You can now place buttons with a transparent background on top of a background image, let transparent buttons overlap or create transparency effects within buttons.

■ **65536 colours**

The number of colours has increased from 256 to 65536 (64k). Therefore the buttons look much more natural.

■ **USB**

ProntoPro NG has a USB port to make downloading much easier.

■ **32 MB of Memory**

ProntoPro NG has 32 Megabyte of memory. This enables you to download larger configuration files to ProntoPro NG.

■ **Integrated Macros**

Macros are now better integrated in the configuration file. Each button can be a macro, this means each button can contain more than one action.

■ **More advanced Timers**

Your ProntoPro NG is able to set timers for certain actions to be carried out at any time you choose. Timers are not an entirely new feature of ProntoPro NG, but they are easier to use and better integrated with the configuration file. You can activate and deactivate the timers you created and you can also set them to repeat daily or weekly. For instance, you can have the lights switched on every day at sunset. You can also create a timer to set your VCR to record your favourite TV-show on Wednesday and Saturday.

■ **Page Overview**

The Page Overview offers you a list of all the pages for one device. Every device comes with a Page Overview, making it easier and faster to browse through the device pages.

■ **Cursor Navigation**

By default the cursor is programmed to operate devices. The functions assigned to the cursor button depend on the device active on ProntoPro NG. ProntoPro NG also offers you the possibility to use the cursor for navigating through devices and pages on the screen. The Left and Right cursor buttons allow you to scroll through the devices, with the Up and Down cursor buttons you scroll through the different pages.

■ **Animation Mode**

ProntoPro NG provides navigation feedback through graphical animations of mode transitions and page transitions. You can enable and disable the animations of your ProntoPro NG in the Settings Pages.

■ **Multi Language Support**

ProntoPro NG now supports besides English also Spanish, French, German and Dutch.

Before You Start

When you use ProntoPro NG for the first time, you will have to:

- install the battery pack;
- place ProntoPro NG in the docking station and charge it.

Attention Use the docking station only with the Philips NiMH rechargeable battery pack. Never plug other appliances (like mobile phones, PDAs, ...) into the docking station. This causes damage to the connector and the appliance.

Installing the Battery Pack


- 1 Press the latch on the battery cover with your thumb and then slide the cover forward firmly.
- 2 Lift up the battery cover.



- 3 Place the battery pack in the battery compartment.



- 4 Plug the cable of the battery pack in the connector.

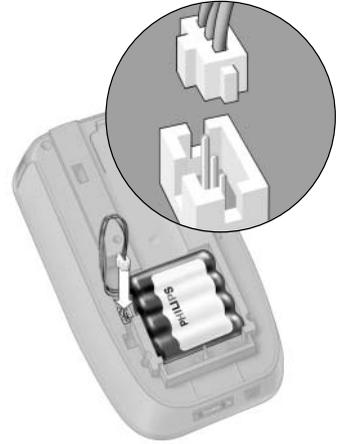

- 5 Slide the battery cover back on.

Make sure the wires of the battery pack do not get stuck while sliding the cover on.

After a few seconds, the ProntoPro NG starts up automatically and an introduction screen appears. The ProntoPro NG beeps twice to indicate that it has finished starting up.

Because the battery pack is not fully pre-charged, you need to charge it as described below.

Charging the ProntoPro NG

For charging the ProntoPro NG, you have to place it in the docking station. When the battery pack is running low, the Low Battery icon will appear on the ProntoPro NG.

You can charge the ProntoPro NG at any time; the battery pack does not have to be entirely empty before recharging.

Note *You can continue using the ProntoPro NG while it is being charged.*

When the battery pack is empty, the ProntoPro NG's settings are retained. You only need to set the clock. However, you should recharge the ProntoPro NG as soon as possible to ensure perfect performance.

Before You Start

- 1 Plug the power adapter into a wall outlet and connect it to the docking station.
- 2 Slide the ProntoPro NG in the docking station until it clicks.



Charging starts immediately. The blue charging LEDs on the front of the docking station indicate that the battery pack is being charged.

When the ProntoPro NG is fully charged, the charging LEDs switch off. Normal charging time is 2 to 3 hours, depending on the condition of the battery pack.

When the charging LEDs are flashing, an error has occurred. Try one of the following:

- Make sure the battery pack is properly installed in your ProntoPro NG.
- Make sure the ProntoPro NG is placed properly in the docking station.
- Check if the connector in the docking station is clean and free of obstructions.
- Cool down the battery pack.

- 3 When the ProntoPro NG is fully charged, take it out of the docking station.

Make sure that you first tilt the ProntoPro NG to an angle of 30° to 45° and then take it out of the docking station.



Turning on ProntoPro NG

ProntoPro NG can be turned on in four different ways:

■ **Tap the touch screen.**

Note Only use your finger, a stylus or a blunt soft object like a pencil eraser to operate the touch screen.

■ **Press one of the 4 firm keys** below the screen to activate the display (default setting).

For more information, see 'Adjusting the Firm Keys Settings' on page 36.

Note When you press a hard button on ProntoPro NG, the according function will be executed immediately, while the 4 firm keys below the touch screen will activate the display.

■ **Press the Backlight** button.

■ **Tilt ProntoPro NG more than 50 degrees** (default setting).

For more information, see 'Adjusting the Pickup Sensor Settings' on page 37.



Setting Time and Date

When you have installed the battery pack and turned on ProntoPro NG, you have to set the current time.

Attention Every time you reset your ProntoPro NG you will have to set the time again.

Changing the Time Format

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds. The Tools Menu appears.
- 2 Tap **Settings** button in the Tools Menu.
The first Settings Page appears.



- 3 Tap the **Time Format** button **AM/PM** in the first Settings Page.
The Time Format button toggles between the three time formats:
 - 12 hour (AM/PM): This is the default format;
 - 24 hour;
 - No time.
- 4 Tap the **ProntoPro NG** icon  to exit the Tools Menu.

Changing the Time

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds. The Tools Menu appears.
- 2 Tap **Settings** in the Tools Menu.
The first Settings Page appears.
- 3 Tap the **Time** button in the first Settings Page.
The Time button is selected. The labels '+' and '-' appear for the two middle firm keys.

- 4 To increase the time, press (and hold) the firm key labelled '+'.
-or-
To decrease the time, press (and hold) the firm key labelled '-'.
- 5 Tap the **Time** button again.
The new time is set.
- 6 Tap the **ProntoPro NG** icon  to exit the Tools Menu.

Changing the Date

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds. The Tools Menu appears.
- 2 Tap  in the Tools Menu.
The first Settings Page appears.

To change the day

- 1 Tap the **Day** button in the first Settings Page.
The Day button is selected. The labels '+' and '-' appear for the two middle firm keys.
- 2 To increase the days, press (and hold) the firm key labelled '+'.
-or-
To decrease the days, press (and hold) the firm key labelled '-'.
- 3 Tap the **Day** button again.
The new day is set.
- 4 When you have changed the date, tap the **ProntoPro NG** icon  to exit the Tools Menu.

To change the month

- 1 Tap the **Month** button in the first Settings Page.
The Month button is selected. The labels '+' and '-' appear for the two middle firm keys.
- 2 To increase the months, press (and hold) the firm key labelled '+'.
-or-
To decrease the months, press (and hold) the firm key labelled '-'.
- 3 Tap the **Month** button again.
The new month is set.
- 4 When you have changed the date, tap the **ProntoPro NG** icon  to exit the Tools Menu.


To change the year

- 1 Tap the **Year** button in the first Settings Page.
The Year button is selected. The labels '+' and '-' appear for the two middle firm keys.
- 2 To increase the years, press (and hold) the firm key labelled '+'.
-or-
To decrease the years, press (and hold) the firm key labelled '-'.
- 3 Tap the **Year** button again.
The new year is set.
- 4 When you have changed the date, tap the **ProntoPro NG** icon  to exit the Tools Menu.

Setting the Language

You can change the language used on your ProntoPro NG.

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds. The Tools Menu appears.
- 2 Tap  in the Tools Menu.
The first Settings Page appears.
- 3 Press the **Page down** hard button.
The second Settings Page appears.

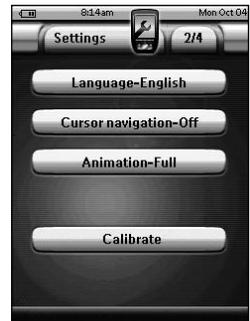


- 4 Tap  in the second Settings Page.
The **Language** button toggles between five languages:
 - English;
 - German;
 - French;
 - Dutch;
 - Spanish.
- 5 Tap the **ProntoPro NG** icon  to exit the Tools Menu.

Operating ProntoPro NG

ProntoPro NG contains a series of customisable devices, each consisting of several device pages. All active devices on your ProntoPro NG are listed in the Device Overview. All the available device pages are listed per device in the Page Overview.

Device Overview

The Device Overview offers you a list of all the devices you can control with ProntoPro NG. To view the Device Overview, press the **Device Overview** button at the top of the touch screen.

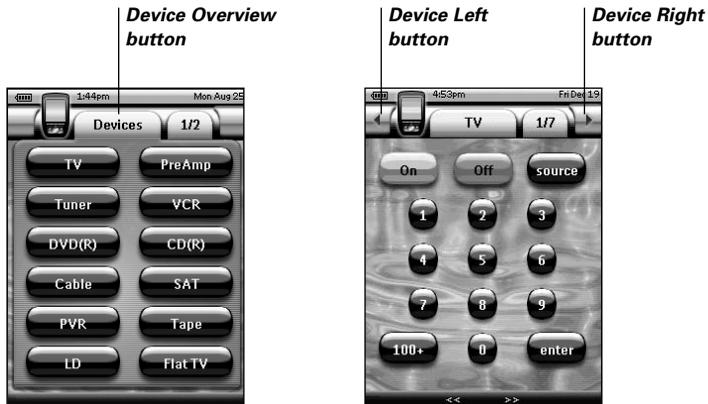

You can navigate between the devices in two different ways:

- Tap the device you want to operate from the Device Overview.
- Tap the **Device Left** button  at the top of the touch screen to navigate to the previous device.
- Tap the **Device Right** button  at the top of the touch screen to navigate to the next device.

By default you navigate through ProntoPro NG, using this touch screen navigation. When cursor navigation is enabled, the Device Left and Device Right button disappear and the **Cursor Navigation** icon  appears at the top left. You then navigate through the devices and pages using the cursor. For more information on changing the touch screen navigation to cursor navigation, see 'Operating ProntoPro NG with the Cursor' on page 48.

Page Overview

The Page Overview offers you a list of all the pages for one device. To view the Page Overview, tap the **Page Overview** button, which displays the page number in the upper area of touch screen.



You can navigate between the different pages in two different ways:

- Tap the page you want to operate from the Page Overview.
- Press the **Page Up** or **Page Down** hard button on the left side of ProntoPro NG.

What makes ProntoPro NG so powerful is the ability to extend its functionality in multiple ways, like programming additional functions, adding supplementary devices and changing the interface as it suits you best.

For full editing you can use ProntoProEdit NG software. See 'ProntoProEdit NG' on page 53 for more information.

Using the Tools

ProntoPro NG provides different tools. For customising ProntoPro NG you have to switch to the appropriate tool. ProntoPro NG offers 10 different tools in the Tools Menu, each providing different functionalities:

 Settings Tool: Defining the settings of your ProntoPro NG (p. 32)	 Timer Tool: Defining timer actions to be carried out at predefined times (p. 41)
 Brand Tool: Defining the brands of your audio/video equipment (p. 20)	 Learn Tool: Learning IR codes from other remote controls (p. 23)
 Label Tool: Labelling buttons, devices and pages (p. 25)	 Add Tool: Adding new devices or copying existing devices (p. 28)
 Delete Tool: Deleting buttons or devices (p. 30)	 Move Tool: Moving devices in the Device Overview (p. 31)
 Macro Tool: Programming a sequence of commands for one single button (p. 38)	 RF IR Tool: Defining to operate ProntoPro NG with IR signals or RF signals (p. 50)

To enter the Tools Menu, you have to tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds.

You can exit all Tools by tapping the **ProntoPro NG** icon . Keep in mind that your latest changes to the current page will not be saved automatically.

In the Tools:

- Tap  to start using the Tool.
- Tap  to go back to the Tools Menu.
- Tap  to confirm an action and save the changes you made.
- Tap  to cancel an action without saving the changes.
- Press the firm key labelled  to end a series of actions and go back to the Tools Menu.

Defining the Brand for a Device

ProntoPro NG contains a huge list of brands and their corresponding IR codes in its database. ProntoPro NG uses these IR codes to control devices. Because there are several brands using specific IR codes, you have to define the brands and the corresponding code sets for each device. You can either have ProntoPro NG autosearch the brand or select it yourself. If a device's brand contains more than one IR code set, you also have to select it.

On the Device Overview you find buttons for the most common video and audio devices. ProntoPro NG is set by default to operate Philips and Marantz devices. For all devices other than Philips or Marantz, you first have to define the brand before you can operate them with ProntoPro NG.

Selecting the Brand and Code Set for your Device

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds.
The Tools Menu appears.
- 2 Tap  in the Tools Menu.
The 'Brand Tool' screen appears.
- 3 Tap  in the 'Brand Tool' screen.
The Device Overview appears.
- 4 In the Device Overview, tap the Device for which you want to define the brand.
A message screen appears.
- 5 Tap .
The 'Brands' screen appears.

Selecting the brand

- 1 Tap the **Scroll Down** button  or the **Scroll Up** button  next to the **Brands** list.

The Brands list scrolls down/up.

Note You can also select the brand via the virtual keyboard by tapping one or more of the brand's name characters.

- 2 Tap the **brand** for the selected Device in the **Brands** list.

- 3 Tap  in the 'Brands' screen.

If there is only one code set, the 'Installing the Brand' screen appears.
Go to 'Installing the brand' below.

-or-

If there is more than one possible code set, a message screen appears.

- 4 Tap .

The 'Code sets' screen appears.

Selecting the code set

- 1 Tap the **Scroll Down** button  or the **Scroll Up** button  next to the **Code Sets** list.

The Code Sets list scrolls down/up.

- 2 Tap the **code set** for the selected Device in the **Code Sets** list.

- 3 Tap  in the 'Code Sets' screen.

The 'Installing the Brand' screen appears.

Installing the brand

- 1 Tap  in the 'Installing the Brand' screen.

The first Page of the selected Device appears.

- 2 Tap different buttons to see if the device is responding to the IR codes for the selected brand and code set.

- 3 Press the left firm key, labelled **Previous**.

The 'Installing the Brand' screen appears again.

- 4 Tap  in the 'Installing the Brand' screen.

The IR codes for the selected brand and code set are installed.

Selecting the Brand and searching the Code Set for your device

Note Make sure the device for which you are searching the brand is turned on.

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds. The Tools Menu appears.
- 2 Tap  in the Tools Menu.
The 'Brand Tool' screen appears.
- 3 Tap  in the 'Brand Tool' screen.
The Device Overview appears.
- 4 In the Device Overview, tap the Device for which you want to define the brand.
A message screen appears.
- 5 Tap .
The 'Brands' screen appears.
- 6 Select the brand of your device as described in 'Selecting the brand' on page 21.

Searching the code set

- 1 Tap  in the 'Code Sets' screen.
The 'Searching the Code Set' screen appears.
- 2 Tap  and point ProntoPro NG at the device.
The 'Searching' screen appears. ProntoPro NG searches through the list of code sets for the selected brand, by sending out an IR code for each code set.
- 3 When the device for which you are defining the brand, turns off,
tap  in the 'Searching' screen.
The 'Installing the Brand' screen appears.
- 4 To install the brand and code set, follow the instructions described in 'Installing the brand' on page 21.

Searching the Brand and Code Set for your device

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds. The Tools Menu appears.
- 2 Tap  in the Tools Menu.
The 'Brand Tool' screen appears.
- 3 Tap  in the 'Brand Tool' screen.
The Device Overview appears.

- 4 In the Device Overview, tap the Device for which you want to define the brand.
A message screen appears.

- 5 Tap **OK**.
The 'Brands' screen appears.


Searching the brand

- 1 Tap **Search** in the 'Brands' screen.
The 'Searching the Brand' screen appears.
- 2 Tap **OK** and point ProntoPro NG at the device.
The 'Searching' screen appears. ProntoPro NG searches through the list of brands, by sending out an IR code for each brand.
- 3 When the device for which you are defining the brand, turns off, tap **OK** in the 'Searching' screen.
The 'Installing the Brand' screen appears.
- 4 To install the brand and code set, follow the instructions described in 'Installing the brand' on page 21.

Learning Commands

If an IR code is not in the database, you can program ProntoPro NG commands by transmitting IR signals from your existing remote control to ProntoPro NG's learning eye.

The Learn Tool allows you to learn a **button** or a **device action**. A device action is an action that is executed automatically when you select a device. E.g. when you select TV, your ProntoPro NG can learn to switch on the TV at the same time. You can also use the Learn Tool to relearn commands that do not work properly.

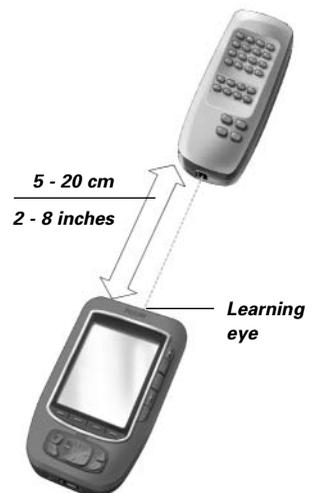

Note Changing the Brand in the Brand Tool will not have an impact on the learned codes.

Learning a Button

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds.
The Tools Menu appears.
- 2 Tap  in the Tools Menu.
The 'Learn Tool' screen appears.
- 3 Tap .
The last page you have visited appears.
- 4 Navigate to the Device and the Page that contains the button you want to learn.
- 5 Position ProntoPro NG and the remote control as illustrated above.

Note *Make sure that you aim ProntoPro NG's **learning eye** at the remote control's IR window.
The **distance** between ProntoPro NG and the remote control should be between 5 and 20 cm (2 and 8 inches).*

- 6 Tap the button you want to learn.
A Learning indication appears in the upper right corner of the touch screen.
- 7 Press and hold the key on the other remote control for 1 second.
Make sure you press the key within 5 seconds.
If learning succeeded, you will get an OK message.
If learning failed, you will get a Failure message.
See 'ProntoPro NG will not learn commands' on page 58 for more information.
- 8 When you want ProntoPro NG to learn other buttons, repeat steps 6 and 7.
- 9 Press the left firm key labelled  below the touch screen to stop learning.

Learning a Device Action

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds.
The Tools Menu appears.
- 2 Tap  in the Tools Menu.
The 'Learn Tool' screen appears.
- 3 Tap .
The Device Overview appears.

- Position ProntoPro NG and the remote control as illustrated above.


Note Make sure that you aim ProntoPro NG's **learning eye** at the remote control's IR window.

The **distance** between ProntoPro NG and the remote control should be between 5 and 20 cm (2 and 8 inches).


- Tap the Device for which you want to learn a Device Action.
A Learning indication appears in the upper right corner of the touch screen.
- Press and hold the key on the other remote control for 1 second.
Make sure you press the key within 5 seconds.
If learning succeeded, you will get an OK message.
If learning failed, you will get a Failure message.
See 'ProntoPro NG will not learn commands' on page 58 for more information.
- When you want ProntoPro NG to learn other device actions, repeat steps 5 and 6.
- Press the left firm key labelled **Done** below the touch screen to stop learning.

Labelling Elements

The Label Tool allows you to label a **button**, a **device** or a **page**. In the Label Tool you can find a virtual keyboard. This keyboard zooms in when you tap a character.

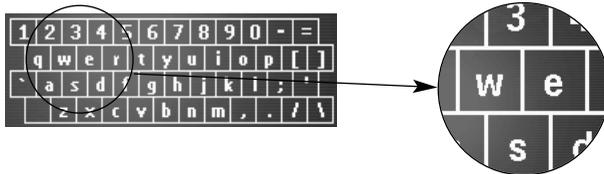

 The keyboard contains five different character sets, including a series of symbols you can use for labelling. You use the **Shift** button to switch between the five character sets on the keyboard.



For a complete list of the symbols, see 'List of Symbols' on page 61.

Labelling a Button

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds. The Tools Menu appears.
- 2 Tap  in the Tools Menu.
The 'Label Tool' screen appears.
- 3 Tap .
The page you last visited appears.
- 4 Navigate to the Device and the Page that contains the button you want to label.
- 5 Tap the button you want to label.
The 'Labelling' screen appears.
- 6 Tap the keyboard.
The keyboard zooms in.
- 7 Tap the character you want to add to the label.
The character is added to the label. The keyboard automatically zooms out again.
 - 1 To zoom out without adding a character to the label, press **Unzoom**.
The character is not added to the label. The keyboard is zoomed out.
 - 2 To use other characters and symbols, press **Shift**.
The character set on the keyboard switches.
You can choose from four different character sets.
 - 3 To remove characters, press the firm key labelled **Delete**.
The character in front of the cursor is removed.
- 8 You can add other characters to the label.
- 9 Tap .
The label of the selected button is changed. The last visited page appears again.

-or-

Tap .
The last visited page appears again, without changing the label of the selected button.
- 10 You can select other buttons on ProntoPro NG to label.
- 11 Press the left firm key labelled **Done** below the touch screen to exit the Label Tool.

Labelling a Device

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds.
The Tools Menu appears.
- 2 Tap  in the Tools Menu.
The 'Label Tool' screen appears.
- 3 Tap .
The Device Overview appears.
- 4 Tap the Device you want to label.
The 'Labelling' screen appears.
- 5 Follow the instructions 6 to 8 of 'Labelling a Button' on page 26.
- 6 Tap .
The label of the selected Device is changed. The Device Overview appears again.

-or-
Tap .
The Device Overview appears again, without changing the label of the selected device.
- 7 You can select other Devices in the Device Overview to label.
- 8 Press the left firm key labelled  below the touch screen to exit the Label Tool.

Labelling a Page

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds.
The Tools Menu appears.
- 2 Tap  in the Tools Menu.
The 'Label Tool' screen appears.
- 3 Tap  in the 'Label Tool' screen.
The Page Overview appears.
- 4 Tap the Page you want to label.
The 'Labelling' screen appears.
- 5 Follow the instructions 6 to 8 of 'Labelling a Button' on page 26.

- 6 Tap .
The label of the selected Page is changed. The Page Overview appears again.

-or-
Tap .
The Page Overview appears again, without changing the label of the selected page.
- 7 You can select another Page in the Page Overview to label.
- 8 Press the left firm key labelled  below the touch screen to exit the Label Tool.

Adding Devices

The Add Tool allows you to **add a new device** or **copy an existing device**. When you add a new device, a device template stored on your ProntoPro NG is used to create the device pages, buttons and functions. By default Philips IR codes are used when you add a new device. For your brand of device, you then have to program the new device using the Brand Tool (page 20) or the Learn Tool (page 23). Copying an existing device saves time. The personal settings you defined for that device will also be copied. For instance, if you want to add a second CD player, you do not have to define the Brand, learn or create macros again. You can just copy them from the existing CD player already programmed on your ProntoPro NG.

Adding a New Device

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds.
The Tools Menu appears.
- 2 Tap  in the Tools Menu.
The 'Add Tool' screen appears.
- 3 Tap  in the 'Add Tool' screen.
The 'Adding' screen appears.
- 4 Tap the device template you want to add in the **Device Templates** list.
The 'IR Code' screen appears.
- 5 Tap .
The 'Actions' screen appears.

- 6 Tap **Create With Actions** in the 'Actions' screen.
The Device is added to ProntoPro NG with its actions like IR codes, beeps and delays.

-or-

- Tap **Create Without Actions** in the 'Actions' screen.
The Device is added to ProntoPro NG without its actions like IR codes, beeps and delays. To operate this device, you have to learn every button of the device with the Learn Tool.

Note *Added devices are automatically positioned at the end of the Device Overview. You can move devices with the Move Tool. See 'Moving Devices' on page 31 for more information.*

Copying an Existing Device

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds.
The Tools Menu appears.
- 2 Tap **Add** in the Tools Menu.
The 'Add Tool' screen appears.
- 3 Tap **Copy Existing Device** in the 'Add Tool' screen.
The 'Adding' screen appears.
- 4 Tap the Device you want to copy in the **Devices** list.
The 'IR Code' screen appears.
- 5 Tap **Select**.
The 'Actions' screen appears.
- 6 Tap **Copy with actions** in the 'Actions' screen.
The Device is copied to ProntoPro NG with its actions like IR codes, beeps and delays.

-or-

- Tap **Copy without actions** in the 'Actions' screen.
The Device is copied to ProntoPro NG without its actions like IR codes, beeps and delays. To operate this device, you have to learn every button of the device with the Learn Tool.

Note *Added devices are automatically positioned at the end of the Device Overview. You can move devices with the Move Tool. See 'Moving Devices' on page 31 for more information.*

Deleting Elements

The Delete Tool allows you to delete a **button** or a **device**.

Deleting a Button

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds. The Tools Menu appears.
- 2 Tap  in the Tools Menu.
The 'Delete Tool' screen appears.
- 3 Tap .
The last visited page on the ProntoPro NG appears.
- 4 Navigate to the Device and the Page that contains the button you want to delete.
- 5 Tap the button you want to delete.
A message screen appears.
- 6 Tap .
The button is deleted.
- 7 You can select other buttons on ProntoPro NG to delete.
-or-
Press the right firm key labelled  to undo the deletion.
The button is restored.
- 8 Press the left firm key labelled  below the touch screen to exit the Delete Tool.

Deleting a Device

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds. The Tools Menu appears.
- 2 Tap  in the Tools Menu.
The 'Delete Tool' screen appears.
- 3 Tap .
The Device Overview appears.
- 4 Tap the Device you want to delete.
A message screen appears.
- 5 Tap .
The Device is deleted.

- 6 You can select other Devices on ProntoPro NG to delete.

-or-

Press the right firm key labelled **Undo** to undo the deletion.
The Device is restored.

- 7 Press the left firm key labelled **Done** below the touch screen to exit the Delete Tool.

Moving Devices

The Move Tool allows you to move a device up or down the Device Overview, enabling you to put your most used devices at the top of the list.

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds.
The Tools Menu appears.
- 2 Tap **Move** in the Tools Menu.
The 'Move Tool' screen appears.
- 3 Tap the Device you want to move in the Devices list.
- 4 Tap the **Move Up**  or **Move Down** button  in the 'Moving' screen.
The selected Device moves up/down in the Device List.
- 5 Tap **OK** in the 'Moving' screen.
The Device is moved.


Adjusting the Settings

In the **Settings Pages** you can adjust several settings. You can:

- Set the time and date as described earlier, on page 14.
- Set the brightness of the backlight;
- Set the timeout of the LCD screen;
- Set the volume level;
- Set the language of the ProntoPro NG, as described earlier, on page 16.
- Set ProntoPro NG to operate with the Cursor;
- Set the animation mode;
- Calibrate the touch screen;
- Adjust the screen activation settings.



In the fourth Settings Page you can consult the version information and the available memory.

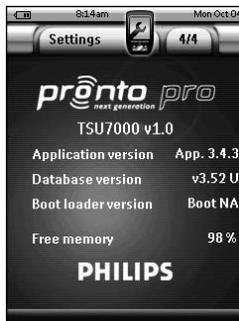

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds. The Tools Menu appears.
- 2 Select **Settings** .
The first Settings Page appears.

Setting the Brightness of the Backlight

You can adjust the intensity of the LCD backlight. There are 4 levels of backlight brightness.

- 1 Tap the **Brightness**  button in the first Settings Page.
The Brightness button is selected. The '+' and '-' labels appear on the two middle firm keys below the touch screen.
- 2 To increase the brightness, press (and hold) the firm key labelled '+'.
-or-
To decrease the brightness, press (and hold) the firm key labelled '-'.
To increase the brightness, press (and hold) the firm key labelled '+'.
To decrease the brightness, press (and hold) the firm key labelled '-'.
- 3 Tap the **Brightness**  button again.
The new Backlight Brightness is set.

Setting the Timeout of the LCD Screen

The timeout of the LCD screen determines how long the LCD touch screen stays active before turning off. Shortening the active time will increase ProntoPro NG's battery life.

Note *The LCD screen will only time out when you are not using ProntoPro NG.*

- 1 Tap **LCD Timeout 40 sec**  in the first Settings Page.
The LCD Timeout button is selected. The '+' and '-' labels appear on the two middle firm keys below the touch screen.
- 2 To increase the timeout, press (and hold) the firm key labelled '+'.
-or-
To decrease the timeout, press (and hold) the firm key labelled '-'.
To increase the timeout, press (and hold) the firm key labelled '+'.
To decrease the timeout, press (and hold) the firm key labelled '-'.
- 3 Tap **LCD Timeout 40 sec**  again.
The new LCD screen timeout is set.

Setting the Volume Level

You can set the volume level for the hard buttons as well as for the touch screen buttons. The volume of the button refers to the loudness of the beep you hear when you press or tap a button.

Setting the Volume Level of the Hard Buttons

To adjust the volume of the hard buttons, tap  in the first Settings Page.

You can either select 1 of the 3 volume levels or choose to mute. Every time you press, the volume level increases with one step up to level 3.

Setting the Volume Level of the Touch Screen

To adjust the volume level of the touch screen, tap  in the first Settings Page.

You can either select 1 of the 3 volume levels or choose to mute. Every time you tap, the volume level increases with one step up to level 3.

Setting the Navigation for ProntoPro NG

The cursor is used by default to operate your devices. You then navigate the ProntoPro NG with the touch screen buttons. However, you can also set the cursor to browse through ProntoPro NG's devices and pages. For more information on operating the ProntoPro NG with the cursor, see 'Operating ProntoPro NG with the Cursor' on page 48.

To set the navigation for the ProntoPro NG, tap  in the second Settings Page:

- You can select **Cursor Navigation-Off** to navigate the ProntoPro NG with the touch screen buttons.
- You can select **Cursor Navigation-On** to navigate the ProntoPro NG with the cursor.

Setting the Animation Mode

ProntoPro NG provides navigation feedback through graphical animations. Switching pages is done with a page transition, switching from Use Mode to one of the Tools is accompanied with a mode transition. You can enable and disable the animations of your ProntoPro NG in the second Settings Page:

- You can disable the animations by choosing '**None**' (no animations). By disabling all animations you use the absolute maximum of your ProntoPro NG's processing speed.
- When changing pages with the '**Page Only**' animation, one page seems to slide out of the screen, while the second page slides in.
- The '**Mode Only**' animation shifts the ProntoPro NG icon at the top area of the touch screen.
- With the option '**Full**' you can enable both animations at the same time.

Calibrating the Touch Screen

When you first use your ProntoPro NG, the touch screen is already calibrated. However, if you notice that your ProntoPro NG does not send out the commands in accordance with what is indicated on the touch screen, it is advised to recalibrate the touch screen.

Attention *Never use an actual pen, pencil or other sharp object on the touch screen. Use a pointy object like a plastic-tipped pen or a stylus intended for use with touch screens.*

- 1 Tap  in the second Settings Page.
The 'Calibration' screen appears.
- 2 Tap the upper left corner on the touch screen.
- 3 Tap the lower right corner of the touch screen.
- 4 Tap the upper right corner of the touch screen.
- 5 Tap the lower left corner on the touch screen.
The touch screen is calibrated.

Adjusting the Screen Activation Settings

In the third Settings Page you can adjust the screen activation settings. You can define when or if you want the LCD backlight to be activated. You can also set when or if you want the ProntoPro NG to send out IR codes or perform button actions.

You can adjust the following screen activation settings:

- **Firm keys** settings;
- **Cursor keys** settings;
- **Pickup sensor** settings.



Tip You can adjust the timeout for the LCD backlight. For more information, see 'Setting the Timeout of the LCD Screen' on page 33.

Adjusting the Firm Keys Settings

You can set the firm keys settings to 3 different states. The firm keys are located below the touch screen of your ProntoPro NG.

To adjust the firm keys settings of the ProntoPro NG, tap  in the third Settings Page. You can now toggle between the following 3 firm keys states:

- : This setting implies that when you press one of the 4 firm keys, your ProntoPro NG will send out the IR code or perform the action assigned to this key.
The LCD backlight will *not* be activated when pressing a firm key.
- : This setting implies that when you press one of the 4 firm keys, the LCD backlight will be activated *and* your ProntoPro NG will send out the IR code or perform the action assigned to this key.
- : This is the default setting of your ProntoPro NG. It implies that when you press one of the 4 firm keys, the LCD backlight will be activated.
The ProntoPro NG will *not* send out an IR code nor perform the button action.

Adjusting the Cursor Keys Settings

You can set the cursor keys settings to 3 different states.

For more information on the cursor keys, see 'Operating ProntoPro NG with the Cursor' on page 48.

To adjust the cursor keys settings of the ProntoPro NG, tap  in the third Settings Page. You can now toggle between the following 3 cursor keys states:

-  : This setting implies that when you press one of the cursor keys, the LCD backlight will be activated.
The ProntoPro NG will *not* send out an IR code nor perform the button action.
-  : This setting implies that when you press one of the cursor keys, your ProntoPro NG will send out the IR code or perform the action assigned to this key.
The LCD backlight will *not* be activated when pressing a cursor key.
-  : This is the default setting of your ProntoPro NG. It implies that when you press one of cursor keys, the LCD backlight will be activated *and* your ProntoPro NG will send out the IR code or perform the action assigned to this key.

Adjusting the Pickup Sensor Settings

You can set the pickup sensor settings of your ProntoPro NG to 2 different states. This implies that you can choose whether or not the backlight should be activated when tilting your ProntoPro NG.

To adjust the pickup sensor settings, tap  in the third Settings Page. You can now toggle between the following 2 states:

- **Pickup sensor-Off:** This setting deactivates the LCD backlight when tilting the ProntoPro NG.
- **Pickup sensor-On:** This is the default setting. It activates the LCD backlight when tilting the ProntoPro NG.

Creating and Editing Macros

A macro allows you to send a sequence of commands when tapping **one single button**. You can for instance switch on your TV, turn on a movie channel and prepare your VCR for recording by rewinding the videotape. The macro contains an **action list**. The action list can be created and edited in the Macro Tool.

Note Once you have programmed a macro, the button actions will not be changed when you select another brand in the Brand Tool.

In the Macro Tool you first have to select the button that will contain the macro, also called the **target button**. Then, one by one, you create an action list by adding actions to this target button. You can do this by:

- Selecting another button and **adding its actions** to the action list of your target button.
- Adding a **delay** to the action list.
- Adding a **beep** to the action list.

After creating the macro, all actions you added to the action list are executed when you tap the button.

Creating a Macro

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds. The Tools Menu appears.
- 2 Tap  in the Tools Menu. The 'Macro Tool' screen appears.
- 3 Tap  in the 'Macro Tool' screen. The last visited page appears.
- 4 Navigate to the Device and the Page that contains the target button you want to use for a macro.
- 5 Tap the button you want to select as a target button.

If you can use the button to program a macro, the 'Macro' screen appears.

-or-

If you cannot use the button to program a macro, you hear a *Failure beep*.



Note You can assign a macro to most buttons of your ProntoPro NG. Only the hard buttons on the left side of ProntoPro NG (Backlight, Page Up and Page Down) cannot be programmed.

To add an action to the action list

- 1 Tap **Add** in the 'Macro' screen.
The last visited page appears again.
- 2 Navigate to the Device and the Page that contains the button you want to add to the macro.
- 3 Tap the button with the action(s) you want to add to the macro.
The 'Macro' screen appears.
The name of the selected button is added at the bottom of the Action List.
The macro will execute all the actions that are assigned to this button.
- 4 You can select other buttons to add to the macro.

To add a delay to the action list

You can add a delay to the action list e.g. to insert a short pause between turning on a device and sending commands to it, allowing the device to warm up.

- 1 Tap **Delay** in the 'Macro' screen.
The '+' button and '-' button appear on the two middle firm keys below the touch screen.
- 2 To increase the delay, tap (and hold) the firm key labelled '+'.
-or-
To decrease the delay, tap (and hold) the firm key labelled '-'.

Note You can still change the delay later on.

To add a beep to the action list

To determine when the macro execution is finished, it is useful to add a beep as final command in the action list.

- 1 Select the action in the action list, where you want to add a beep.
The action is selected.
- 2 Tap **Beep** in the 'Macro' screen.
A default beep is added to the action list, after the selected action.

To test the macro

You do not have to exit the Macro Tool to try out the macro you created or edited. From within the Macro Tool you can test the macro. ProntoPro NG executes all actions as you defined them in the action list.

In the 'Macro' screen, press the left firm key labelled **Test**.
ProntoPro NG executes the actions in the action list.

Note *Make sure that you keep ProntoPro NG aimed at your Home Theatre equipment during the macro execution.*

To finish the macro

Tap **OK** in the 'Macro' screen.
The macro is created and assigned to the button you selected as a target.

-or-

Tap **Cancel** in the 'Macro' screen.
The Tools Menu appears again without creating the macro.

Editing a Macro

Moving an action in the action list

- 1 To display the 'Macro' screen with the action list assigned to the button, follow the instructions 1 to 5 as described in 'Creating a Macro' on page 38.
- 2 Tap the action in the action list you want to move in the 'Macro' screen.
The selected action is highlighted.
- 3 In the 'Macro' screen, tap the **Move Up** button  or the **Move Down** button .
The selected action moves up/down in the action list.
- 4 You can select other actions to move.

Deleting an action from the action list

- 1 To display the 'Macro' screen with the action list assigned to the button, follow the instructions 1 to 5 as described in 'Creating a Macro' on page 38.
- 2 Tap the action in the action list you want to delete in the 'Macro' screen.
The selected action is highlighted.
- 3 In the 'Macro' screen, press the right firm key labelled **Delete**.
The selected action is deleted from the action list.
- 4 You can select other actions to delete.

Creating and Editing Timers

With the Timer Tool you can define actions to be carried out at predefined times. For instance, you can switch on the lights or program your VCR to record your favourite daily TV-show.

Note When a timer is executed, you will hear a beep and a Timer message appears on screen.

If ProntoPro NG is performing another task (sending out IR codes, testing a macro, ...) when a timer is due to be executed, ProntoPro NG first continues performing the current task.

Activating Timers

1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds. The Tools Menu appears.

2 Tap **Timer** in the Tools Menu.
The 'Timer Tool' information screen appears.

3 Tap **Go** in the 'Timer Tool' information screen.
The 'Timer' screen appears.



4 Tap the check box in front of the timer that you want to activate.
The timer is activated.

5 In the 'Timer' screen, tap **OK**.
The 'Timer' screen closes and the Tools Menu appears again. The Timer icon appears next to the time indication.

-or-

In the 'Timer' screen, tap **Cancel**.
The Timer screen closes without activating the timer.

Note In the Timers list, activated timers are displayed first, followed by the not-activated timers. Both activated and not-activated timers are listed chronologically.

Creating and Editing Timers

Adding a Timer

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds. The Tools Menu appears.
- 2 Tap **Timer** in the Tools Menu.
The 'Timer Tool' information screen appears.
- 3 Tap **Go** .
The 'Timer' screen appears.

- 4 In the 'Timer' screen, tap **Add** to add a new timer to the list.
A new timer is added to the Timers list.
By default a new timer is labelled Timer and a number. It has no start and stop actions defined.

- 5 To label the timer, tap **Label** , as described in 'Labelling a Timer' on page 43.

- 6 To define the start and stop actions for the timer, tap **Edit** , as described in 'Editing a Timer' on page 44.

- 7 In the 'Timer' screen, tap **OK** .
The 'Timer' screen closes and the Tools Menu appears again. The timer is added.

-or-

- In the 'Timer' screen, tap **Cancel** .
The Timer screen closes without adding the timer.

Deleting a Timer

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds. The Tools Menu appears.
- 2 Tap **Timer** in the Tools Menu.
The 'Timer Tool' information screen appears.
- 3 Tap **Go** .
The 'Timer' screen appears.





- 4 Tap the label of the timer you want to delete.
The timer is highlighted.
 - 5 In the 'Timer' screen, tap **Delete** .
A message screen appears.
 - 6 In the message screen, tap **Delete**.
The timer is deleted from the list.
 - 7 In the 'Timer' screen, tap **OK** .
The 'Timer' screen closes and the Tools Menu appears again. The timer is deleted.
- or-
- In the 'Timer' screen, tap **Cancel** .
The Timer screen closes without deleting the Timer.

Labelling a Timer

The default name for a timer is 'Timer' followed by a number, for example Timer 5.

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds. The Tools Menu appears.
- 2 Tap **Timer** in the Tools Menu.
The 'Timer Tool' information screen appears.
- 3 Tap **Go** .
The 'Timer' screen appears.
- 4 Tap the label of the timer you want to label.
The timer is highlighted.
- 5 In the 'Timer' screen, tap **Label** .
The 'Labelling' screen appears.

- 6 Label the timer as described in 'Labelling Elements' on page 25.
- 7 In the 'Labelling' screen, tap .
The 'Timer' screen appears again and the timer is relabelled.
- 8 In the 'Timer' screen, tap .
The Tools Menu appears again.

Editing a Timer

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds. The Tools Menu appears.
- 2 Tap  in the Tools Menu.
The 'Timer Tool' information screen appears.
- 3 Tap .
The 'Timer' screen appears.
- 4 Tap the label of the timer you want to edit.
The timer is highlighted.
- 5 In the 'Timer' screen, tap .
The 'Editing Timer' screen appears.



- 6 To edit the timer, execute the following steps:
 - 1 Set the Start Date. See 'Setting the Start Date' on page 45 for more information.
 - 2 Set the Start Time. See 'Setting the Start Time or Stop Time' on page 45 for more information.
 - 3 Define the Start Action. See 'Defining the Start Action or Stop Action' on page 46 for more details.
 - 4 Set the Stop Time. See 'Setting the Start Time or Stop Time' on page 45 for more information.
 - 5 Define the Stop Action. See 'Defining the Start Action or Stop Action' on page 46 for more details.
 - 6 Define the Repeat Settings. See 'Defining the Repeat Settings' on page 46 for more information.

- 7 In the 'Editing Timer' screen, tap  .
The timer settings are defined. The 'Timer' screen appears again.
- 8 In the 'Timer' screen, tap  .
The Tools Menu appears again.

Setting the Start Date

When you add a new timer the Start Date is the current date by default. The Stop Date is calculated automatically based on the Start Date, the Start Time and the Stop Time.

To change the Start Date:

- 1 In the 'Editing Timer' screen, tap the **Day** button.
The Day button is selected. The labels '+' and '-' appear for the two middle firm keys.
- 2 To increase the value, press (and hold) the firm key labelled '+'.
-or-
To decrease the value, press (and hold) the firm key labelled '-'.
- 3 Tap the **Day** button again.
The Day is set.
- 4 Repeat step 1 to 3 for the **Month** and the **Year** button.
The Start Date is set.

Setting the Start Time or Stop Time

- 1 In the 'Editing Timer' screen, tap the **Start Time** button or **Stop Time** button.
The **Start Time** button or **Stop Time** button is selected. The labels '+' and '-' appear for the two middle firm keys.
- 2 To increase the time, press (and hold) the firm key labelled '+'.
-or-
To decrease the time, press (and hold) the firm key labelled '-'.
- 3 Tap the Time button again.
The new Start Time or Stop Time is set.

Note *If the Stop Time lies before the Start Time, the Stop Date automatically jumps to the next day.*

Defining the Start Action or Stop Action

ProntoPro NG uses a similar procedure to define the Action List for the Start Action or the Stop Action of the selected timer as in the Macro Tool. See 'Creating and Editing Macros' on page 38 for more information.

Example Some examples of timer actions are: switching on your lights at a specific time or recording your favourite daily TV-show with your VCR.

- 1 In the 'Editing Timer' screen, tap the **Start Action** or **Stop Action** button. The 'Timer' screen appears.



- 2 In the 'Timer' screen, tap **Add**. The last visited page appears again.
- 3 Navigate to the Device and the Page that contains the button you want to add to the macro.
- 4 Tap the button you want to add to the action list of the timer. The 'Macro' screen appears. The name of the selected button is added at the bottom of the Action List. The macro will execute all the actions that are assigned to this button.
- 5 In the 'Macro' screen, tap **OK**. The Start Action or Stop Action is defined. The 'Editing Timer' screen appears again.

Defining the Repeat Settings

If you want the timer to repeat itself on more than one occasion, you can use the repeat settings.

- 1 In the 'Editing Timer' screen, tap the **Repeat Settings** button. The 'Repeat Settings' screen appears.



Repeat toggle

- 2 Tap the repeat toggle button  .
By default 'No' is selected.

The **Repeat** button toggles between the three settings:

- No: This is the default setting;
- Daily;
- Weekly.

- 1 To change the setting to **'Daily'**, tap the button again.
Every day of the week is automatically selected.
- 2 If you want to set an end date for the repeating timer, select the **End Date** check box.
The End Date is enabled.
- 3 Define the End Date, as described in 'Setting the Start Date' on page 45.
The End Date is defined.

-or-

- 1 To change the setting to **'Weekly'**, tap the button again.
The current day is selected.
- 2 Select or deselect the different days of the week on which the timer has to be executed.
- 3 If you want to set an end date for the repeating timer, select the **End Date** check box.
The End Date is enabled.
- 4 Define the End Date, as described in 'Setting the Start Date' on page 45.
The End Date is defined.


-or-

■ To change the setting to 'No', tap the button again.
The timer will not be repeated.

- 3 In the 'Repeat Settings' screen, tap  .
The 'Editing Timer' screen appears again. Feedback about the repeat settings is provided below the  button.

Operating ProntoPro NG with the Cursor

The cursor is set by default to operate the devices, e.g. to navigate through an on-screen TV menu. The cursor contains 4 cursor keys: Right, Left, Up and Down. Each cursor key contains an action list. This list depends on the device that is being operated.

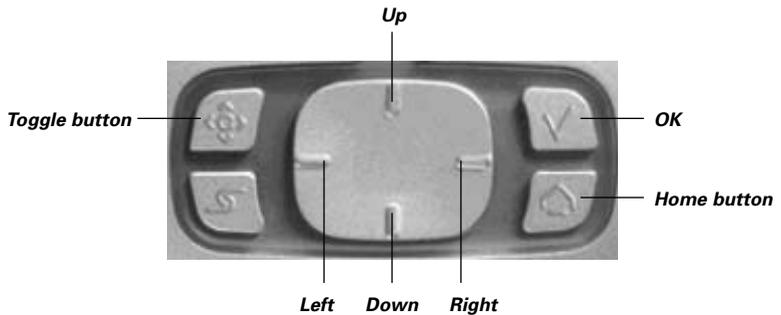

The cursor can also be used to navigate through devices and pages on ProntoPro NG's touch screen.

When you enable the **cursor navigation** in the Settings Pages, the **touch screen navigation** with the Left Device and Right Device buttons at the top area of the touch screen disappears and the **cursor navigation icon**  appears in the top left corner. You use the cursor for navigating, and not for operating your devices, until you disable the cursor navigation again.

To set the cursor navigation:


- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds. The Tools Menu appears.
- 2 Select the  .
The first Settings Page appears.
- 3 Press the **Page Down** hard button at the left side of the ProntoPro NG.
The second Settings Page appears.
- 4 Tap  in the second Settings Page.
The cursor navigation is enabled. The Toggle hard button is activated.
- 5 Tap the **ProntoPro NG** icon  in the top centre of the touch screen to exit the Settings Tool.

To use the cursor for navigating the ProntoPro NG:

- 1 Press the **Left** and **Right** buttons of the cursor.
ProntoPro NG navigates through the devices.
- 2 Press the **Up** and **Down** buttons of the cursor.
ProntoPro NG navigates through the pages.
- 3 Press the **Toggle** button to easily switch from navigating on ProntoPro NG to control audio/video equipment.
The **Device Left** and **Device Right buttons** appear in the top area of the touch screen and the cursor is used for controlling audio/video equipment.
- 4 Press the **Toggle** hard button again to switch back to cursor navigation.


Operating ProntoPro NG with RF

By default, ProntoPro NG uses **infrared** (IR) signals to operate devices. IR signals have an operating distance of approximately 10 m (33 ft).

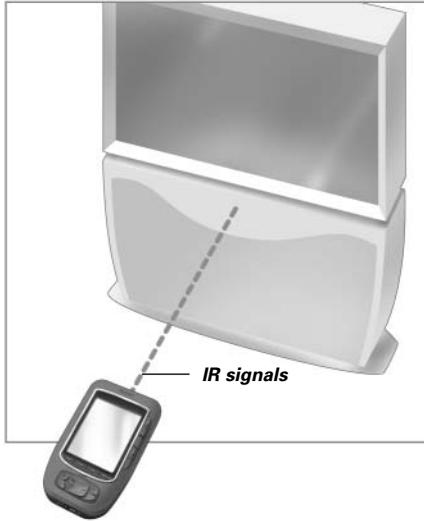

However, you can choose to have ProntoPro NG working with radio frequency (RF) signals to operate devices from a distance or from an adjacent room. An RF Extender (not included) is therefore required.

The SBC Li900 is an RF Extender that can be used in combination with ProntoPro NG. The RF Extender receives RF signals from ProntoPro NG and converts them into IR signals, sent out to the device. Therefore, the RF Extender has to be placed near the device you are operating with the RF Extender's sending eye pointed towards the device.

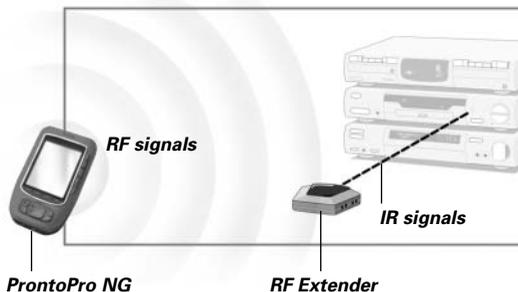

Selecting RF to Operate your Devices

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds. The Tools Menu appears.
- 2 Tap  in the Tools Menu.
The 'RF IR Tool' screen appears.
- 3 Tap .
The Device Overview appears.
- 4 Tap the Device for which you want to select RF.
The 'Select IR or RF' screen appears. By default IR is selected in the Sending Signals list.
The Define RF button is disabled.
- 5 Choose **RF** in the **Sending Signals** list.
The **Define RF** button is enabled.
- 6 Tap .
The 'RF Settings' screen appears.
- 7 Select the RF Channel in the **RF Channel** list you use for the RF Extender.
The RF Channel on the SBC Li900 has to be the same as the RF Channel on ProntoPro NG.
- 8 Select the Extender ID in the **Extender ID** list you use for the RF Extender.
The Extender ID on the SBC Li900 has to be the same as the Extender ID on ProntoPro NG.

Note *You can use several RF Extenders with your ProntoPro NG. For each RF Extender you use for your devices, you need to set the RF Channel and the Extender ID.
The RF Channel is identical for all RF Extenders. The Extender ID on the SBC Li900 is unique for each RF Extender.*

- 9 Tap  in the 'RF Settings' screen.
The RF settings are saved.
- 10 Tap  in the 'Select IR or RF' screen.
ProntoPro NG will send out RF signals for the selected device.

Note *Try to keep ProntoPro NG and the RF Extender away from metal objects, as this will have a negative impact on the range.*

Selecting IR to Operate your Devices


- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds.
The Tools Menu appears.
- 2 Tap  in the Tools Menu.
The 'RF IR Tool' screen appears.
- 3 Tap .
The Device Overview appears.
- 4 Tap the Device for which you want to select IR.
The 'Select IR or RF' screen appears. RF is selected in the Sending Signals list.
- 5 Choose **IR** in the **Sending Signals** list.
The 'Define RF' button is disabled.
- 6 Tap  in the 'Select IR or RF' screen.
ProntoPro NG will send out IR signals for the selected device.

If you want to personalise your ProntoPro NG even more beyond its standard programming features, ProntoProEdit NG is the tool for you to use. ProntoProEdit NG is ProntoPro NG's companion software that you find on the included CD-ROM. Please check the website to make sure that you have the latest version. You can find more information on <http://www.pronto.philips.com>.

To learn how to work properly with ProntoProEdit NG, consult its online help system accessible via the Help menu or by pressing F1.

With ProntoProEdit NG you can:

- **Upload** and **download** new configurations to and from your ProntoPro NG. You do this with the PC cable included with your ProntoPro NG:
 - 1 Plug one end of the cable in the USB port on your computer.
 - 2 Plug the other end of the cable in the USB port on ProntoPro NG.

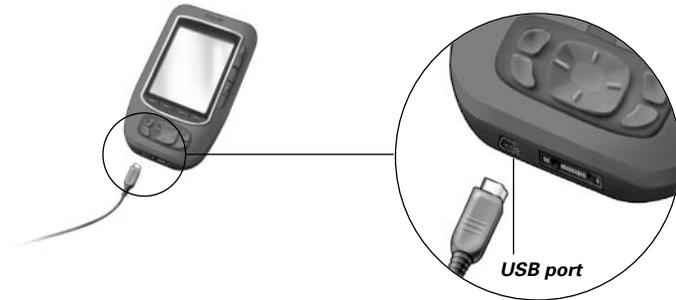

- **Add, delete, modify** and **move** control panels, devices and commands anywhere on the touch screen;
- **Save, duplicate** and **share** configuration files, codes or devices with other ProntoPro NG users;
- **Import** new graphics to create new buttons and designs;
- Use .PNG graphic files that support **transparency**. You can now place buttons with a transparent background on top of a background image, let transparent buttons overlap or create transparency effects within buttons. You can use the colour in the upper left corner of the bitmap as transparency colour.
- **Personalise** configuration files to optimise the use of your ProntoPro NG;
- **Copy, Paste** and **Edit** plain IR codes that you can exchange with other ProntoPro NG users;
- **Preview** new configuration files on ProntoProEdit NG Simulator, to check what ProntoPro NG's interface will look like;
- **Create** and **edit macros**. In ProntoProEdit NG you have access to the more advanced features for macros.

Some example screens of what you can accomplish with ProntoProEdit NG:



Note *When ProntoPro NG is connected to your PC, it uses more battery power. Therefore, it is recommended to disconnect the USB cable after uploading and downloading.*

Why don't my buttons work properly?

When you find that your ProntoPro NG does not send out the commands in accordance with what is indicated on the touch screen, it is advised to recalibrate the touch screen. Calibration is necessary when you notice that tapping a button activates one of the adjacent buttons or when you have to tap next to a button to activate it. Calibration enables ProntoPro NG to place the icons on the touch screen in line with their predefined functions.

Attention *Never use an actual pen, pencil or other sharp object on the touch screen. Use a pointy object like a plastic-tipped pen or a stylus intended for use with touch screens.*

How do I calibrate the touch screen?

- 1 Tap and hold the **ProntoPro NG** icon  in the upper left corner of the touch screen for 3 seconds. The Tools Menu appears.
- 2 Select  .
The first Settings Page appears.
- 3 Press the **Page Down** button at the left side of the ProntoPro NG.
The second Settings Page appears.
- 4 Tap  in the second Settings Page.
The 'Calibration' screen appears.
- 5 Tap the upper left corner on the touch screen.
- 6 Tap the lower right corner of the touch screen.
- 7 Tap the upper right corner of the touch screen.
- 8 Tap the lower left corner on the touch screen.
The touch screen is calibrated.
- 9 Tap the **ProntoPro NG** icon  again to exit the Settings Tool.

How do I reset ProntoPro NG?

Normally, resetting ProntoPro NG is not necessary. However, if ProntoPro NG's touch screen freezes or if you notice unusual behaviour, you need to perform a reset to get ProntoPro NG running again.

- 1 Press the latch on the battery cover with your thumb and then slide the cover forward firmly.

2 Lift off the battery cover.

You can find the Reset button in the battery compartment.



3 Use an unfolded paperclip or a sharp pencil to carefully press the Reset button.

ProntoPro NG restarts.

ProntoPro NG beeps twice to indicate it is ready for use.



4 Set the time again. See 'Changing the Time' on page 14 for more information.

Note *If you reset ProntoPro NG, all personal changes like saved and programmed commands, IR codes, timers and macros are retained.*

Why does a device respond to some RF signals and not to others?

Not all commands for all devices work properly with RF signals.

If a device does not respond properly to RF signals sent out by ProntoPro NG, you have to reconfigure ProntoPro NG to operate the device with IR signals.

General Problems

ProntoPro NG shuts off automatically

This is a timeout feature of ProntoPro NG to save power. You can change the time ProntoPro NG stays active in the Settings Tool.

See 'Setting the Timeout of the LCD Screen' on page 33 for more information.

The touch screen buttons on the ProntoPro NG do not respond properly

If the touch screen buttons on the ProntoPro NG do not respond properly, calibrate the touch screen.

See 'Calibrating the Touch Screen' on page 35 for more information.

Devices do not respond to commands from ProntoPro NG

- Make sure the ProntoPro NG's sending eye is pointed towards the device you are operating.
- Check if the Low Battery icon has appeared on the screen. If so, place the ProntoPro NG in the docking station and recharge the battery pack.
- Check if your device understands Philips-Marantz RC codes. Normally you can find this in the documentation of your device.
- Make sure you have defined the correct brands for your devices. (p. 20)
- Make sure you have defined the correct code set for your devices. (p. 21)
- Check if the button you are trying to use is assigned properly via Brand Tool or via Learn Tool. (p. 23)
- Check if your device is in RF mode. Switch your device back to IR mode. (p. 52)
- If you have set up your ProntoPro NG to operate devices with RF signals:
 - Check in the RF IR Tool if the devices you want to operate are set up properly. (p. 51)
 - Check if the Extender ID and the Channel ID on your ProntoPro NG match the Extender ID and the Channel ID on the RF Extender.
 - Make sure the RF Extender is placed near the devices you want to use with RF signals.
 - Make sure that the distance between the RF Extender and the ProntoPro NG is at least 1 metre.
 - Make sure that the RF Extender's sending eye is pointed towards the device.
 - Change the Channel if you notice interferences from other RF channels.
- If you want to use RF signals for devices on different locations, you need more than one RF Extender. See the User Guide of the RF Extender for more information.

Customising Problems

Buttons are not sending the correct commands

- Make sure you have defined the correct brands for your devices. (p. 20)
- Make sure you have defined the correct code set for your devices. (p. 21)
- Make sure you should calibrate your screen. (p. 35)
- Check whether the button of the device is learned properly. (p. 23)
- Check whether the macro recorded properly. (p. 38)

Macros do not work

- Make sure ProntoPro NG's sending eye is pointed towards the device the entire time the macro is being executed.
- The sending eye is located at the top of ProntoPro NG.
- Insert delays to allow devices to start up properly.
- Check for inactive buttons in your macro.
- Check if you did not reprogram the buttons. Macros do not store commands, they store buttons. If you reprogram a button, the macro executes the new command assigned to the button.

ProntoPro NG will not learn commands

- Make sure your ProntoPro NG and the remote control are positioned correctly.
 - When the sending eye of your existing remote control is not pointed towards the learning eye of the ProntoPro NG, ProntoPro NG might not receive the signals properly. Align the remote controls as correctly as possible.
 - When the distance between your existing remote control and the ProntoPro NG is too short or too long, ProntoPro NG might not receive the signals properly. Try out several distances between 5 and 20 centimetres (2 and 8 inches) to learn the commands.
- Avoid programming ProntoPro NG under bright fluorescent light, in sunlight or in a dark room: it might affect the infrared signals.
- Make sure the battery pack in the ProntoPro NG is not empty.
- Press and hold the key on the other remote control for more than one second.

The configuration file is corrupted

When the configuration file is corrupted, you can use ProntoProEdit NG to download a new configuration file. Taken into account that all your customised commands, devices and macros will be lost and you will have to reprogram your ProntoPro NG. Therefore it is recommended to save the configuration by uploading it to the PC with ProntoProEdit NG.

Timers do not work

- Check if the timer has been activated. (p. 41)
- Make sure a Start Action for the timer has been defined properly. (p. 46)
- Check whether the date and time of your ProntoPro NG are set properly. (p. 14)

Memory Storage Problems

Memory storage problems can be the cause of ProntoPro NG not saving a macro. Storage problems can be caused by a full memory or by a low battery pack.

- Consult the third Settings Page to see how much memory is available. (p. 32)
- Consult the first Settings Page or the battery icon at the top of your screen to check the battery status. Recharge if necessary. (p. 11)

ProntoPro NG error messages

If one of the following error messages occurs, please contact your dealer or the Philips customer service:

- Invalid CF version or corrupt flash;
- Incorrect software version.

When your ProntoPro NG does not respond and the screen stays blank:

- 1** Download the configuration file again.
- 2** When downloading the configuration file again does not work, download the firmware from <http://www.pronto.philips.com>.

Connection to the PC

- Make sure the ProntoPro NG battery pack is sufficiently charged while using ProntoProEdit NG to download or upload.
- Do not pull out the USB cable while uploading or downloading a configuration file.

Important Notices

Take care not to scratch the touch screen

Use your finger to tap the touch screen or use plastic-tipped pens intended for use with touch screen.

Never use an actual pen, pencil or other sharp object on the touch screen.

Protect ProntoPro NG from temperature extremes

Keep ProntoPro NG away from heaters and other heat sources.

ProntoPro NG is not waterproof

ProntoPro NG should not be exposed to rain or moisture.

Do not store or use ProntoPro NG in any location that is extremely damp or wet.

When you have spilled water on ProntoPro NG, you have to take out the battery pack and let ProntoPro NG dry for 48 hours before you insert the battery pack again.

The touch screen of ProntoPro NG contains a glass element

Do not drop ProntoPro NG or subject it to any strong impact.

Cleaning ProntoPro NG

- Use a soft, damp cloth to clean ProntoPro NG.
- If the touch screen of ProntoPro NG is spoiled, clean it with a soft cloth moistened with a diluted window-cleaning solution.
- Do not use a corrosive detergent or an abrasive sponge.
- Avoid the use of abundant water.

Upgrading ProntoPro NG

You can find the latest upgrades of your ProntoPro NG software (when available) on <http://www.pronto.philips.com>. Navigate to the Downloads section. If you are already registered you can enter your username and password to log in. Otherwise you can register and become a ProntoZone member for free.

List of Symbols

	Pause
	Stop
	Normal run; normal speed
	Normal run; normal speed
	Fast run; fast speed
	Fast run; fast speed
	Slow run; slow speed
	Slow run; slow speed
	Eject
	Recording, general
	Key
	Navigate
	Still mode
	Tape running direction
	Next track
	Previous track
	Fast forward to index
	Rewind to index
	Frame by frame, general
	Frame by frame, general
	Subtitle
	Cancel picture
	Picture-in-picture mode
	Menu
	Picture-in-picture shift
	Picture-in-picture swap
	Multi-picture display
	Picture-in-picture select
	Teletext mode

List of Symbols

	Page number up
	Page number down
	Page enlargement
	TV and text mixed
I-II	1st or 2nd language
P◀P	Last view; previous program
	Stand-by
	Zone focus: long distance
	Zone focus: very short distance
-/-	Single or multi-digit selection
	Brightness; brilliance
	Contrast
	Brightness/contrast
	Colour saturation
	Lamp; lighting; illumination
	Split screen freeze / double screen freeze
	Split screen swap / double screen swap
	Split screen / double screen
	Movie expand
	Personal preference
	Picture-in-picture freeze
	Main index page
	Picture freeze
	Programmable timer; general
	Enter
	Application assistance
	Actual time on screen
	EPG / Electronic Program Guide
	Video output

	Read data from store
	Write data into store
	Page hold
	Sound muting
	Additional information on screen
	Spatial sound effect
	Television; video
	Sound; audio
	Surround sound
	Dolby Digital
	Digital Theatre Systems
	Active control

Specifications

The specifications and design of this product are subject to change without notice.

<i>Display</i>	<i>64k colour TFT 3.8" touch screen LCD 320x240 pixels (QVGA) resolution White LED-backlight for LCD and buttons</i>
<i>Interface</i>	<i>USB 1.1-port connector</i>
<i>Software</i>	<i>Database with IR codes to operate more than 800 brands Built-in Philips IR codes Total number of devices only limited by memory</i>
<i>Infrared (IR)</i>	<i>4 high performance IR-sending LEDs, 1 receiver LED Operating distance of approximately 10 m (33 ft) Learning frequency up to 78 KHz and 455 KHz</i>
<i>Radio frequency (RF)</i>	<i>Band: 434 MHz 16 Extender ID's and 4 Channels</i>
<i>Memory</i>	<i>32 Mbytes</i>
<i>Power management</i>	<i>Power on by tapping the touch screen, by tilting the ProntoPro NG or by pressing a button Power off automatically</i>
<i>Dimensions (HxWxD)</i>	<i>154,2mm x 92,4mm x 27,8mm (6.07 inch x 3.64 inch x 1.10 inch)</i>
<i>Operating temperature</i>	<i>5° - 45° C (41° - 113° F)</i>
<i>Accessories</i>	Included: <i>USB cable for PC connection CD-ROM with ProntoProEdit NG software AAA rechargeable battery pack (4x1.2 V) Docking station</i> Not included: <i>RF Extender (SBC Li900)</i>
<i>ProntoProEdit NG</i>	PC requirements: <i>Windows 98SE, ME, 2000, XP 64 MB of RAM 75 MB of free hard disk space Free USB Port CD-ROM player</i>

IR-database information:

Redesigned by UEI Technology
Licensed under U.S. Patent 5,689,353
Portions © UEI 1999

Action	An action is a command that will be executed by ProntoPro NG. An action can be an IR code, a link, a delay or a beep. You can assign one or more actions to a button or a hard button. It is the same as a macro.
Action list	An action list is a list of actions assigned to a button or a hard button. An action list can contain up to 250 actions.
Animation mode	ProntoPro NG provides navigation feedback through graphical animations. These animations can be found in the Animation mode. You can enable and disable the animations of your ProntoPro NG in the Settings Pages.
Branding	ProntoPro NG contains a list of brands and their according IR codes in its database. ProntoPro NG uses IR codes to control devices. Because there are several brands using specific IR codes, you have to define the brand and code set for each device.
Button alias	See <i>Link</i> .
Button backlight	The Button backlight is a special light source that is placed behind the hard buttons on your ProntoPro NG, enhancing the visibility of these buttons.
Calibration	Calibrating the touch screen enables ProntoPro NG to exactly match the icons on the touch screen with their predefined functions.
Code set	A code set is a list of IR codes. Audio and video devices of different brands use different code sets. A device can only receive and execute functions from the correct code set.
Cursor navigation	There are two ways of navigating through ProntoPro NG: using the touch screen or using the cursor for navigation. When you select cursor navigation, the cursor can only be used for navigating through devices and pages on ProntoPro NG touch screen, not for controlling audio/video equipment.
Delay	A delay is a pause between two actions. A delay gives the device enough time to execute the first action before it receives an impulse to execute a second action.
Device	Every device in the configuration file appears on the Device Overview Page of ProntoPro NG and in the tree view in ProntoProEdit NG. A device represents the equipment you want to control with ProntoPro NG, for instance a TV, VCR, CD player, Amplifier, Satellite receiver or any device operated by an IR remote. The device contains a number of pages with buttons.
Device action	A device action is an action that is executed automatically when you select a device. E.g. when you select TV, you can learn your ProntoPro NG to switch on the TV at the same time.
Device Overview	You use the Device Overview on ProntoPro NG to access the different devices. The Device Overview contains buttons for each device in the configuration. By pressing these buttons you navigate to the first page of the selected device.

Device settings	The device settings are the type of device, the brand, the IR code set and the functions. In order to control a device with your ProntoPro NG, you first have to set the device settings.
Device template	You can create a template from a device in ProntoProEdit NG Advanced Mode. When you add a new device on ProntoPro NG, this template will be used.
Firm key	ProntoPro NG has 4 firm keys located below the touch screen. The label of a firm key is displayed at the bottom of the touch screen. You can configure the functions of the firm keys, just like most hard buttons and the buttons on the touch screen. The strength of the firm keys is that you can also configure their label, so they can always indicate the function assigned to them.
Hard button	A hard button is a button that can be pressed and generates an event. Hard buttons can be found on ProntoPro NG. Their layout and visual aspects cannot be changed. You can configure the functions of the hard buttons, just like the firm keys and the buttons on the touch screen.
IR	Short for infrared.
IR code	ProntoPro NG sends out infrared (IR) signals to operate devices. IR codes for all kinds of video and audio device brands are stored in ProntoPro NG's universal database. By selecting IR codes and assigning them to buttons and hard buttons, you can program your ProntoPro NG to operate your equipment. When IR codes are not present in the database, you can always learn them from the conventional remote control of your equipment.
Label	A label is the text you want to put on a soft button or a firm key.
LCD	Short for liquid crystal display.
LCD backlight	LCD backlight is a special light source that is placed behind the LCD screen, enhancing the visibility of this screen.
Link	A link, also called a <i>button alias</i> , is a shortcut from the action list of one button to the action list of another button. Instead of adding the same actions to several buttons or hard buttons, you can create a link and reuse the action list. When your ProntoPro NG is executing an action list and comes across a link, the action list referred to by that link is executed.
Macro	A macro is a sequence of actions executed when pressing a single button on ProntoPro NG. Every button or hard button can act as a macro and perform a list of commands. It is the same as an action list.
Mode animation	When you switch from using the ProntoPro NG to the Tools Menu, the ProntoPro NG icon shifts at the top area of the touch screen. This is called a 'mode animation'.
Page	A page of a device is the area of 320 by 240 pixels on ProntoPro NG's touch screen containing buttons or other objects.

Page animation	When you switch from one page to another, the first page slides out of the screen and the second page slides in the screen. This is called a 'page animation'.
ProntoPro NG	ProntoPro NG is a universal remote control with a touch screen. You can customise and fully configure ProntoPro NG to your personal needs: the devices you want to operate, the functions you want to perform and the layout on ProntoPro NG.
ProntoProEdit NG	ProntoProEdit is the visual editor for creating and configuring ProntoPro Configuration Files.
RF	Short for Radio Frequency.
RF code	You can choose to operate your devices with RF signals instead of IR signals. To use RF signals, you need an RF Extender. The advantage of RF is that it spreads in all directions and that it pervades walls. In other words, you can operate your devices from an adjacent room.
RF Extender	An RF Extender is a converter box that receives RF signals and turns them into IR signals to operate devices. When your ProntoPro NG sends out RF codes, the RF Extender receives them and sends out IR codes to your devices.
SBC Li900	The SBC Li900 is an RF Extender that can be used in combination with ProntoPro NG.
Settings Tool	The Settings Tool allows you to consult and adjust several settings, for instance consulting the battery level, setting the date and time, calibrating the touch screen, ...
Simulator	ProntoPro NG simulator is a separate application in ProntoProEdit NG package, which simulates every aspect of your ProntoPro NG. You use ProntoPro NG simulator to test your PCF without the need to download it to your ProntoPro NG. When you make changes in ProntoPro NG simulator, they will not be saved in the configuration file.
Soft button	A soft button is a button that can be found on the touch screen. The layout and the visual aspects of a soft button can be changed. You can also configure the functions of the soft buttons.
Timer	A timer allows you to define actions to be carried out at predefined times. For instance, you can set an alarm or program your VCR to record your favourite daily TV-show.
Touch screen	The touch screen of your ProntoPro NG is the centered area that contains soft buttons you can use to operate the remote control.
USB	USB (Universal Serial Bus) is a 'plug and play' interface between a computer and add-on devices (such as audio players, joysticks, keyboards, telephones, scanners, and printers).

A

- action, 39
- action list
 - action, 39
 - beep, 39
 - delay, 39
- activating timer, 41
- Add Tool, 28
- adding
 - action, 39
 - beep, 39
 - delay, 39
 - new device, 28
 - timer, 42
- adjusting
 - backlight brightness, 33
 - LCD screen timeout, 33
 - volume level, 34
- animation mode, 9
 - full, 35
 - mode, 35
 - none, 35
 - page, 35

B

- battery compartment, 6
- battery pack, 10
- battery pack installing, 10
- beep, 39
- brand
 - installing, 21
 - searching, 22
 - selecting, 20, 22
- Brand Tool, 20
- button, 5
 - backlight, 6
 - cursor, 5, 48
 - hard buttons, 5
 - labelling, 26
 - learning, 24
 - Page down, 6
 - Page up, 6
 - reset, 6
 - Toggle, 48
- button action deleting, 30

C

- calibrating the touch screen, 35
- changing
 - date, 15
 - language, 16
 - time, 14
 - time format, 14
- channel
 - channel down, 5
 - channel up, 5
- charging ProntoPro NG, 11
- clock settings. *See* time
- code set
 - searching, 22
 - selecting, 21
- colours, 8
- connection to docking station, 6
- copying existing device, 29
- creating macro, 38
- cursor, 5, 48
- cursor navigation, 9, 34

D

- date, 15
- delay, 39
- Delete Tool, 30
- deleting
 - action in a macro, 40
 - button action, 30
 - device, 30
 - timer, 42
- device
 - adding, 28
 - copying, 29
 - deleting, 30
 - labelling, 27
 - moving, 31
- device action learning, 24
- Device Overview, 17
- docking station, 8, 11
- download, 53

E

- editing
 - macro, 40
 - timer, 44
- error message, 49

H

- Home Theatre Control Panel, 4

I

- infrared, 50
- installing battery pack, 10
- installing brand, 21
- IR signals, 50, 51, 52

K

- keyboard, 25
 - symbols, 25, 61
 - zoom, 25

L

- Label Tool, 25
- labelling
 - button, 26
 - device, 27
 - page, 27
 - symbols, 25, 61
 - timer, 43
- language, 16
- LCD screen, 5
- LCD screen timeout, 33
- Learn Tool, 23
- learning
 - button, 24
 - device action, 24
 - remote control, 23

M

- macro, 9
 - action, 39
 - beep, 39
 - creating, 38
 - delay, 39
 - deleting action, 40
 - editing, 40
 - move, 40
 - testing, 39
 - troubleshooting, 58
- Macro Tool, 38
- memory, 9
- mode animation, 35
- move action in a macro, 40
- Move Tool, 31
- Moving a Device, 31
- multi language support, 9

N

- navigation
 - cursor, 9, 34, 48
 - touch screen, 34, 48

O

- operating the ProntoPro NG
 - cursor navigation, 48
 - RF signals, 50
 - touch screen navigation, 48
 - troubleshooting, 57
- Overview
 - Device, 17
 - Page, 18

P

- page animation, 35
- page labelling, 27
- Page Overview, 9, 18
- ProntoPro NG, 4
 - adjusting the settings, 32
 - appliance, 5
 - charging, 11
 - customising, 19
 - Device Overview, 17
 - docking station, 8
 - IR signals, 52
 - maintaining, 60
 - operating, 17
 - Page Overview, 18
 - resetting, 55
 - RF signals, 51
 - specifications, 64
 - touch screen, 7
 - turning on, 13
 - upgrading, 60
 - USB cable, 53
 - USB port, 53
- ProntoProEdit NG, 53
- ProntoProEdit Simulator, 53

R

- radio frequency, 50
- Remote Control, 4
- repeat settings, 46
- resetting the ProntoPro NG, 55
- RF Extender, 50
- RF IR Tool, 50
- RF signals, 50, 54

S

- screen, 5, 7
 - calibrating, 35
 - timeout, 33
- searching
 - brand, 22
 - code set, 22

- selecting
 - brand, 20, 22
 - code set, 21
 - settings, 32
 - animation mode, 35
 - backlight brightness, 33
 - calibrating the touch screen, 35
 - date, 14, 15
 - language, 16
 - LCD screen timeout, 33
 - time, 14
 - time format, 14
 - volume level, 34
 - Simulator, 53
 - specifications, 64
 - start action, 46
 - start date, 45
 - start time, 45
 - stop action, 46
 - stop time, 45
 - storage problems, 59
 - symbols, 25, 26, 61
- T**
- testing the macro, 39
 - time, 14
 - time format, 14
 - timer, 9
 - activating, 41
 - adding, 42
 - deleting, 42
 - editing, 44
 - labelling, 43
 - repeat settings, 46
 - start action, 46
 - start date, 45
 - start time, 45
 - stop action, 46
 - stop time, 45
 - Timer Tool, 41
 - Toggle button, 48
 - Tool, 19
 - Add, 28
 - Brand, 20
 - Delete, 30
 - Label, 25
 - Learn, 23
 - Macro, 38
 - Moving, 31
 - RF IR, 50
 - Timer, 41
 - touch screen, 5, 7
 - touch screen calibration, 35, 55
 - transparency, 9
 - turning on ProntoPro NG, 13
- U**
- upgrading, 60
 - upload, 53
 - USB, 9
 - USB cable, 53
 - USB port, 6, 53
- V**
- volume
 - mute, 5
 - volume down, 5
 - volume level, 34
 - volume up, 5
 - volume level
 - hard buttons, 34
 - touch screen buttons, 34