 
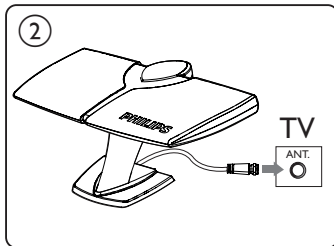 


PHILIPS

SDV3938

EN Philips indoor digital TV antenna

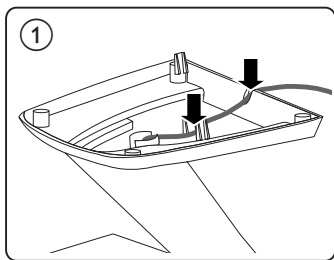

- 1 Route the coaxial cable and fix it by the cable clip on the bottom of antenna base (①).
- 2 Connect the other end of coaxial cable to the TV receiver or TV signal outlet (②).
- 3 Position the digital antenna on a flat surface near a window to aim at the TV transmitter.
- 4 Turn on the TV and scan to preset TV channels.
- 5 Make sure that the digital antenna faces the location of local transmitter. Turn the digital TV antenna slowly until the best reception is achieved.



Philips Consumer Lifestyle B.V.,
Tussendiepen 4, 9206 AD Drachten, The Netherlands
SDV3938_61_UM_V1.0



PHILIPS

SDV3938

  KO 필립스 실내용 디지털 TV 안테나

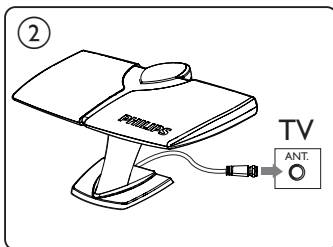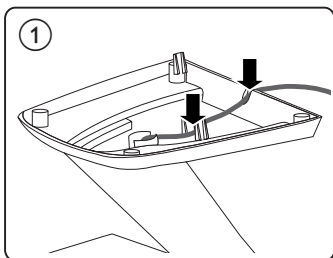

- 1 동축 케이블을 배선하고 안테나 베이스 하단에 있는 케이블 클립으로 고정합니다 (①).
- 2 다른쪽 동축 케이블을 TV 수신기 또는 TV 신호 단자에 연결합니다 (②).
- 3 디지털 안테나가 TV 송신기를 향하게 하여 창가 근처의 평평한 위치에 둡니다 .
- 4 TV 를 켜고 미리 설정된 TV 채널을 검색합니다 .
- 5 디지털 안테나가 근거리 송신기의 위치를 향하는지 확인합니다 .TV 수신이 최적화될 때까지 디지털 TV 안테나를 천천히 돌립니다 .

Philips Consumer Lifestyle B.V.,
Tussendiepen 4, 9206 AD Drachten, The Netherlands
SDV3938_61_UM_V1.0

