

Register your product and get support at
www.philips.com/welcome

Noise Canceling Headphone





SHN4600



EN	Quick Start Guide
DA	Lynvejledning
DE	Kurzanleitung
ES	Guía de inicio rápido
FR	Guide de mise en route
IT	Guida di avvio rapido
NL	Snelstartgids
SV	Snabbstartsguide
CS	Stručná příručka
EL	Οδηγίες γρήγορης εκκίνησης
FI	Pika-aloitusopas

LT	Greitojo įjungimo vadovas
LV	Īsā lietošanas pamācība
PL	Skrócona instrukcja obsługi
PT	Manual de início rápido
RU	Краткое руководство
TR	Hızlı Başlangıç Kılavuzu
ZH-CN	快速入门指南
ZH-HK	快速入門指南
JA	クイックスタートガイド
KO	요약 설명서

PHILIPS

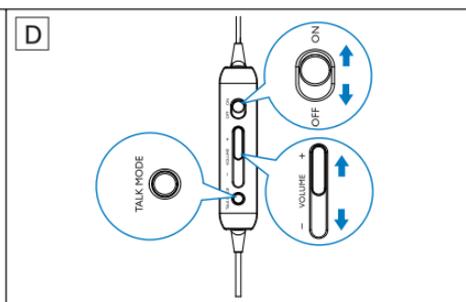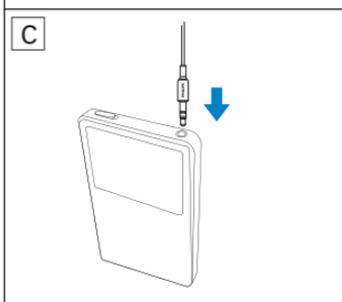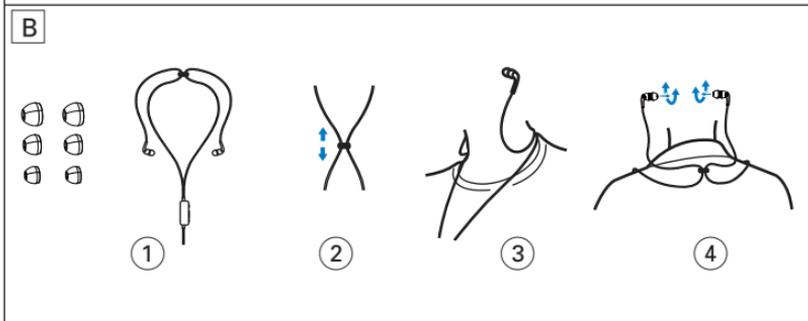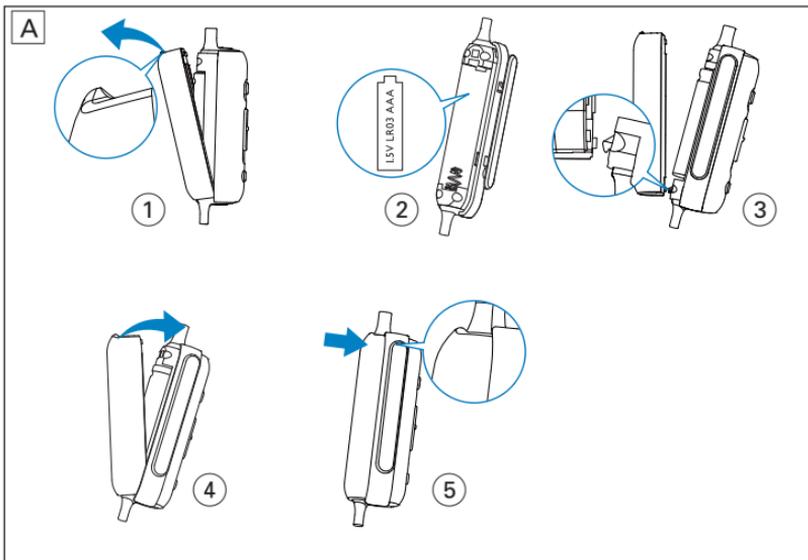

Important

No naked flame sources, such as lighted candles, should be placed on the apparatus.
The equipment will be used in moderate climate only.

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Disposal of batteries

Your product and/or accessories operate on batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health.



Use the headphones

To save battery power, adjust the switch to **OFF** after use.

- 1 Install the battery (Fig. A).
- 2 Try on each pair of caps (3 pairs supplied) for the most suitable one (Fig. B_1).
- 3 Adjust the slider position (Fig. B_2).
- 4 Put on the headphones in neck-strap style, with the slider behind your neck (Fig. B_3).
- 5 Twist ear buds gently to get the best fit (Fig. B_4).
- 6 Connect the audio plug to your music player (Fig. C).
- 7 Adjust the switch to **ON** to enable noise canceling (Fig. D).
↳ LED light turns orange.
- 8 Slide - **VOLUME +** to adjust the volume (Fig. D).
- 9 To listen to the background sound, press and hold **TALK MODE** (Fig. D).
↳ Music playback is paused and you can hear the background sound clearly.
- 10 To continue playing music when the battery is exhausted or removed, adjust the switch to **OFF** (Fig. D).
↳ LED light turns off.
- 11 Replace the battery when LED light blinks in orange continuously.

Control your headphones

ON OFF	Enable/disable noise canceling function
- VOLUME +	Adjust the volume
TALK MODE	Press and hold to pause the music and get the background sound Release to resume the music



© 2010 Koninklijke Philips Electronics N.V.
All rights reserved.

Specifications are subject to change
without notice.

Trademarks are the property of
Koninklijke Philips Electronics N.V. or
their respective owners.

V1.1

Printed in China

