

Save Code list for future reference Look up the 4 digit code for your brand of TV, DVD, etc., from the list below.

Refer to the User Manual for your remote for more information.

Garde esta lista de códigos para futura referencia.

Busque el código de 4 dígitos para su marca de TV, DVD, etc. Refiérase al Instrucciones de manejo de su control remoto para más información.

Enregistrez cette liste de codes pour une consultation ultérieure. Recherchez le code à 4 chiffres de la marque de votre téléviseur, DVD, etc. dans la liste ci-dessous.

Consultez le Mode d'emploi de votre télécommande pour obtenir de plus amples informations

TVs Including LCD, Plasma & Panel

ABEX	0120
ACER	1917
ADMIRAL	0603 0224 0701
ADVENT	1718 0213
.....	0318 0219 0893
ADVENTURA	0019
AIKO	0407
AIWA	0121 0221 0324 0528
AKAI	0112 0801 0309 1315
.....	1415 1112 1912 1515
ALLERON	0706
AMARK	0603
AMTRON	0906
ANAM NATIONAL	0906 0901
.....	0104 0805 0920
AOC	0002 0102 0502 1502
.....	0003 0217 0119 0320
APEX	0023 0223 0123 1814 0741
ARCHER	0603
ASPECT	0507
AUDIOVOX	1018 1118
.....	0906 1503 1313
AXION	0319
BANG & OLUFSEN	0620
BELCOR	0002
BELL & HOWELL	0704 0506
.....	0601 0701
BENQ	0709 0909 0711 1616

CURTIS MATHES	0704 0112 0614
.....	0002 0502 0601 0506
.....	0512 0437 0701 0103
CXC	0906 0805
CYBERVISION	0016
DAEWOO	0614 0002 0502 0611
.....	0102 0415 0905 0615
.....	0505 0046 0609 0805 0407
.....	0303 0602 0214 0403 0314
DAYTRON	0002 0502
DELL	0522 0404 0814
DIAMOND VISION	0622 0496
.....	0810 0291
DIGIMATE	1303
DIGISTAR	1503 0118 0413 0213
.....	0318 0814 1603 1716 1816
DIMENSIA	0704 0601
DISNEY	0417 0115
DUKANE	0507 0808
DUMONT	0713 0002
DURABRAND	0520 0115 0916
.....	0323 0317 1115
DYNASTY	0805
DYNEX	1718 0115
ELECTROBAND	0801 0003
ELECTROHOME	0002 0502
.....	0027 0901 0803
ELEKTRA	0701
ELEMENT	1918
ELITE VIDEO	0321
EMERSON	1818 0002 0502 0006
.....	0115 0506 0706 0520 0906
.....	0316 0505 0614 0622 0324
.....	0924 0027 0128 0228 0632
.....	0134 0247 0605 0705 0805
.....	0703 0903 0004 0519 0106 0104
.....	0520 0115 0701 0402 0805 0407
0304 0604 0804 0005 0105 0305	
ENVISION	1519 0002
.....	0502 0009 1502
ESA	0520
FISHER ...	0506 0612 0428 0619 0802
FLUID	1104 1204 1304
FUJITSU	1419 0321 0706 1202
FUNAI	0706 0520 0906
.....	0324 0247 0805
FUTURETEC	0906 0805
GATEWAY	0206
GE	0704 0312 0018 0002 0502
.....	0006 0007 0601 0835 0901
.....	0114 0103 0803 0806 0310
GIBRALTER	0713 0002
GOLDSTAR	0002 0502 0102 0324
.....	0435 0802 0307 0609 0217

GPX	0096
GRADIENTE	1902 0002
.....	0916 1617 1517
GRUNDY	0706 0906
GUESTVISION	0721
GVISION	1102
HAIER	0709 0223 0323
.....	0317 1316 0195
HALLMARK	0002 0502
HARVARD	0906
HAUPPAUGE	1421
HEWLETT PACKARD	1103 1002
HISENSE	1219 0908
.....	0819 0223 1203
HITACHI	0410 0507 0815 0607
.....	0808 0002 0502 0710
.....	1801 0701 0802 0707
.....	0315 0515 0715 0519 0324
HYUNDAI	1015
ILO	0421 1608 1004 1903
.....	0216 0520 1515 1912
IMA	0906
IN FOCUS	0601
INFINITY	0807 0430
INITIAL	1608 0216 1110 1512
INSIGNIA	1719 1619 1119 1718
.....	0911 0520 0323 0115
.....	0914 0213 0318 1416 0247
.....	0504 0192 1242 1342 1442
INTEGRA	0719
INTEQ	0216
JANEIL	0019
JBL	0807
JC PENNEY	0704 0002 0102 0502
.....	0112 0312 0512 0007 0601 0310
.....	0402 0802 0103 0803 0604 0806
JCB	0801
JENSEN	0002 0502 0914
JVC	0607 0204 0321 0508 0617
.....	0326 0993 0802 0108 0308 0715
KAWASAKI	0196
KAWASHO	0002 0502 0801
KAYPANI	0119
KEC	0805 0906
KENWOOD	0002 0502
KLH	0023
KLOSS NOVABEAM	0408 0019
KOGI	1102
KONKA	0906 0702 0203 0306
.....	0208 0911 0842 0942 0504
KTV	0906 0003 0703 0805 0608
KURAZAI	0701
LASONIC	0622 0496

LEGEND	0213
LG	0015 0002 0606 0502
.....	0102 0117 0814 0324
.....	0435 0802 0307 0609 0217
LIQUIDVIDEO	0319 0418
LODGENET	1618 0704
.....	0821 0601 0701
LOEWE	0722 0807
LOGIK	0704 0601 0701
LUCE	0107
LUXMAN	0002 0502
LXI	0704 0002 0502 0506 0807
.....	0312 0512 0601 0324 0103
MAGNASONIC	0706
MAGNAVOX	1019 0807 0002
.....	0502 0919 1914 0224 0430
.....	0247 0402 0408 0109 0715
MAJESTIC	0704 0601 0701
MARANTZ	0807 0719 0002 0502
MAXENT	0206
MEDION	0922 0421 0417
MEGATRON	0002 0502 0507
MEI	0003
MEMOREX	0002 0502 0506 0706
.....	0115 0704 0601 1302
.....	0428 0632 0701 0041
MGA	0002 0102 0502 0706
.....	0802 0803 0715 0619
MIDLAND	0704 0713
.....	0007 0312 0103
MINTEK	0216
MINUTZ	0806
MISAKAI	0520
MITSUBISHI	0102 0716 0706 0002
.....	0502 0027 0803 0715 0619
.....	0218
PRICE CLUB	0112
PRIMA	1503 0118 0213 0318 0219
PRINCETON GRAPHICS ..	0603 0511
PRISM	0007
PROSCAN	0704 0312 0103
.....	0601 0817 0917
PROTON	0820 0002 0502
.....	1602 0910 0119 0220
PROTRON	1303 1317
PROVIEW	1104 1204 1304
PULSAR	0713 0002
QUASAR	0718 0416 0007 0618
.....	0807 0039 0739 0901 0608
RADIO SHACK	0704 0002 0406
.....	0506 0906 0618 0502 0324
.....	0835 0601 0802 0705 0805 0111

NORCENT	0223 0905 0207
NTC	0407
OLEVIA	1304 1802
.....	1615 1815 1217
ONCOMMAND	0721 1717
ONKING	0805
ONWA	0906 0805
OPTIMUS	0618 0120 0039 0739
OPTOMA	1404
OPTONICA	0603 0111
ORION	0713 0115 0105
PANASONIC	1819 0718 0416
.....	0007 0618 0807 0039
.....	0739 0345 0696 0901 0608
PHILCO	0807 0002 0102 0502
.....	0919 0702 1417 0408
.....	0109 0715 0901 0402
PHILIPS	0017 1019 0807 0022
.....	0020 0422 0122 0222 0322
.....	0002 0520 0919 0521 0621
.....	0709 1516 1017 0430 0247 0901
.....	0402 0408 0109 0210 0310 0715
PHILIPS-MAGNAVOX	0807 0022
.....	0322 0919 0224 0430
PILOT	0002
PIONEER	0120 0719 0808
.....	0002 0502 0610 0519
PIVA	1109
PLANAR	1302
POLAROID	1319 1817 1104 0819
.....	0918 0914 1503 1215 0504
PORTLAND	0002 0102
.....	0502 0415 0614
PRECISION	0218
PRICE CLUB	0112
PRIMA	1503 0118 0213 0318 0219
PRINCETON GRAPHICS ..	0603 0511
PRISM	0007
PROSCAN	0704 0312 0103
.....	0601 0817 0917
PROTON	0820 0002 0502
.....	1602 0910 0119 0220
PROTRON	1303 1317
PROVIEW	1104 1204 1304
PULSAR	0713 0002
QUASAR	0718 0416 0007 0618
.....	0807 0039 0739 0901 0608
RADIO SHACK	0704 0002 0406
.....	0506 0906 0618 0502 0324
.....	0835 0601 0802 0705 0805 0111

RCA	0704 0002 0406 0007 0011
.....	0611 0811 0312 0514 0720
.....	0102 0502 0601 0817 0917
.....	0835 0901 0103 0803 0211
.....	0912 0114 0519 0320 0420
REALISTIC	0704 0002 0406
.....	0506 0906 0618 0502 0601
.....	0324 0802 0705 0805 0111
RHAPSODY	0003
RUNCO	0713 0719 0712
SAMPO	0014 0206 0002
.....	0502 0119 0802
SAMSUNG	0112 0309 0209
.....	0512 0302 0502 0002
.....	0102 0110 0818 0895 0437
.....	0802 0103 0609 0012 0212
SAMSUX	0502
SAMTRON	0112
SANSUI	0115 0632 0041
SANTECA	0021
SANYO	0506 0311 0612 0002
SCEPTRE	1318 1814 0516
SCOTCH	0002 0502
SCOTT	1515 0002 0502 0706
.....	0906 0004 0105 0805
SEARS	0704 0807 0506 0706
.....	0112 0002 0502 0312 0512
.....	0612 0520 0601 0812 0509
.....	0041 0247 0802 0103 0619
SELECTRON	1803 1603 1703
SEMP	1701
SHARP ...	0509 0913 0907 0603 0002
.....	0502 0224 0228 0202 0111 0813
SHOGUN	0002
SIGNATURE	0704 0601 0701 0903
SIMPSON	0402
SONIC	0003
SONY	0414 0902 0801
.....	0708 0639 0816
.....	0002 0502 0706
.....	0906 0402 0805
SOVA	1901 1111
SOYO	1614 1714
SPECTRA	0622
SPECTRAVISION	0921
SQUAREVISION	0520
SSS	0002 0906 0805
STAR SIGHT	0008
STARLITE	0906
SUPERSCAN	0812 0509 0247
SUPERSONIC	0096

SUPRA	0002 0809
SUPREMACY	0019
SUPREME	0801
SVA	0223 0822
SYLVANIA	0807 0002 0502 0115
.....	0520 0919 1715 0324 0247
.....	0402 0408 0109 0715 0717
SYMPHONIC	0906 0520
.....	0324 0247 0004
SYNTAX	1304 1615 1815
TANDY	0603
TATUNG	0709 0421 0901
TECHNICS	0007
TECHWOOD	0002 0502 0007
TEKNIKA	0704 0002 0102 0502
.....	0706 0906 0112 0512 0618
.....	0601 0019 0701 0402 0802 0805
TELECAPTION	0313
TELERENT	0704 0601 0701
TERA	0002 0220
TEVION	0421
TMK	0002 0502
TOSHIBA	0517 0419 0512
.....	0613 0719 0112 0506
.....	0111 0618 0627 0437 0041
.....	0094 0802 0111 0313 0715
TRUTECH	1504 1116 1713
UNIVERSAL	0806 0310
VENTURER	1919
VICTOR	0607
VIDEOCON	1218
VIDTECH	0002 0102 0502
VIEWSONIC	1519 0206
VIKING	0808 1003 1016
VIKING	0019
VIORE	1403
VIZIO	1518 1418 0709
.....	0812 0915 1702 0606
WARDS	0704 0807 0002 0102
.....	0502 0706 0601 0408 0109 0310
.....	0111 0513 0806 0701 0402 0004
WESTINGHOUSE	0915 0013 1216
WHITE WESTINGHOUSE ..	0611
.....	0614 0415 0215 1402 0324 0609
YAMAHA	0618 0002 0102 0502
ZENITH	0713 0502 0606 0409
.....	0710 0415 0507 0714 0405
.....	0712 0015 0916 0008 0002
.....	0115 0224 0324 0326 0228
.....	0430 0632 0435 0437 0903 0505

HDTV Set Top Boxes

CHARTER	0852
DIRECTV Models	0763 1506
.....	1278 1378 1478
GE HDSTB	1578
GO VIDEO HDT100	0662
HITACHI 61HDX98B	0864
HUGHES HIRD-E8 ...	0362 0864 0765
HUGHES HTL-HD ...	0362 0864 0765
LG HTL-HD	0362 0864 0765
LG LSS-3200A	0362 0864 0765
MINISUBISHI SRHD400	0864
MINISUBISHI SRHD500	0864
MINISUBISHI SR-HD5	0864
MOTOROLA HDT100	0463
PHILIPS DSHD800R	0864
PIONEER SH-D505	0062
PROSCAN PSHD105	0265
RCA HD65W20	0467
RCA DTC-100	0265
RCA DTC-210	0265
RCA PSHD105	0265
SAMSUNG SIR-T165	0959
SAMSUNG SIR-T351	0959
SAMSUNG SIR-TS160	0563
SAMSUNG SIR-TS360	0563
SONY SATHD200	0963
SONY SATHD300	0963
SONY SATHD100	0963
SYLVANIA 6900DTD	0759
TOSHIBA DST3100	0362 0765
TOSHIBA DW65X91	0362 0765
TOSHIBA DST3000	0362 0765
ZENITH DTV1080	0065
ZENITH HDSAT420	0065
ZENITH HDSAT520	0065

Cable

ABC	0747 0947 0048 0148 0248
ADELPHIA	0852 0752
ALLEGRO	0054 0154
AMERICAST	0354
ANTRONIX	0448 0548
ARCHER	0448 0548 0648 0748
AT&T	1976 0752
BELL	1177
BELL SOUTH	0354
CABLETENNA	0448
CABLEVIEW	0448

SAT/DTV/WebTV, cont.

Use codes (A) (B) etc. if you have 2 or more of the same device.

PHILIPS	0755	0259	0862	0763	
	0564	0664	0864	0465	
	0765	0565	0362	0162	
PHILIPS-MAGNAVOX	0259				
	0862	0565			
PIONEER		0347	0547	0495	0992 0741 0596
PRIMESTAR	0364	0665			
PROSAT		0957			
PROSCAN	1804	0265	0365	0866	
	0666	0966	0766	0866	
RCA	1804	0265	0566	0365	0863
	0467	0966	0666	0766	0866 0411
REALISTIC		0961	0358		
SAMSONIC		1078			
SAMSUNG	0061	0959	0962		
	0263	0563	0655		
SHARP		0062			
SIERRA III III		0757			
SKY NETWORK	0855	0755	0063		
	0163	0266	0355	0455	0555
SONY	0963	0367	0567	0160	0861
STAR SIGHT		0964			
STAR TRAK		0462			
STARCHOICE	0665	0166	0364		
STS	0458	0658	0758		
SUPER GUIDE		0562			
SYLVANIA		0759			
TELSAT		0356			
THOMSON		0755			
TOSHIBA	0765	0864	0465	0564	
	0664	0362	0858	0064	0164 0764
TVA		0756			
ULTIMATE TV		0966	0567		
UNIDEN	0964	0958	0762		
UNITED		0361			
VIDEO CIPHER II		0059			
VIEWSAT		1305			
VISIONTEC		0856			
V-TECH		1505			
WEB TV		0862	0160		
ZENITH	0363	0065	0267	0161	
	0266	0857	0059	0360	0165

DVD

ACESONIC	1513
ADVENT	0893

AFREEY	0343
AIWA	0043
AKAI	0141 0145 1112 1912
ALLEGRO	0126 0142
AMES	0095
AMW	0393 0493
ANABA	0797
APEX	0240 0640 0740 0840
	0044 0644 0245 0545 0146
	0347 0547 0495 0992 0741 0596
ASPIRE	0994
ASTAR	1910
A-TREND	0940
AUDIOVOX	1640 0793 1313
AXION	0793
B & K	0499
BLAUPUNKT	0644
BLUESKY	0143 0146 1114
BLU-RAY	1742 1941 1541 1441
	1341 1241 1540 1514 0142
BODYSONIC	0343
BOSE	0868
BOSS	0792
BOSTON ACOUSTIC	1411
BRITANIA	1141
BROKSONIC	0894 0398 0041
CAVS	1113
CENTRIOS	0796 1308 1408
	0793 1007 1107 1507 1607
	1707 1008 1108 1807 0546
CHANGHONG	0741
CINEVISION	0142
CITECH	1908
CITIZEN	1908
CLASSIC	0744 1706 0741
COBY	0294 0296 0396 0293
	0146 0494 0091 1710
	1711 1712 1812 1014
CONCEPT	0644
CONIA	0146
CONTEL	1741
CRITERION	0446
CURTIS INTERNATIONAL	0594
	0494 0091
CYBERHOME	1906 0940
	0100 0595
CYBERVISION	1740
CYTRON	0246 0440
DAEWOO	0645 0745
	0046 0798 0198
DENON	1742 0641 0743
DENZEL	0444

DESAY	0497
DIAMOND VISION	0496
	0890 0291
DIGITREX	0146
DIGIX	0095
DISNEY	0447
DRIVE	1011
DUAL	0346 0000 0297
	0444 0246 1810
DURABRAND	0546 0142 0246 1210
	0247 0193 0093 0598
DVD 2000	0841
EIGERVISION	1213
ELTA	0045 0145
EMERSON	0142 0695
	0591 0247 0447
ESA	0297
ESCIENT	1842
FARENHEIT	0697
FISHER	0243
FUNAI	0247 0447 0591
GE	0542 0644
GOLDSTAR	0142
GO-VIDEO	0744 0395 0798 0047
	0891 0791 0342 0244 0147
GPX	0295 0096
GRADIENTE	0143 1940 1041
GREENHILL	0644
HAASZ	0746 0846
HAIER	0195
HARMAN KARDON	0344
HD-DVD	1941 1541 1441 1341
	1241 1514 1612 0142
HITACHI	0042 0342 0444 0543 0340
HITEKER	0146
HUMAX	0892
ILO	0597 1608 1912
INFINITY	0343
INITIAL	0644 1608 1110 1512
INSIGNIA	1741 1608 1208
	0247 0793 0644 0192 0392
	0142 1242 1342 1442 1942
INTEGRA	0843
JBL	0344
JVC	0441 0242 0442 0098
	0691 1808 0443 0993
JWIN	0640 0990 0191 1412
KAWASAKI	0196 0546
KENWOOD	0641 0544
KISS	0444
KLH	0644 0292 0240
KONKA	0642 0742 0842 0942 0192

KOSS	0143	0440
KXD	0091	
LASONIC	1642	0746 0496
LENOXX	0794	0145 1310 1410
LG	1042	1641 0142 0898 0392
LINN	0945	
LIQUIDVIDEO	0793	
LITEON	0899	0891 0491 0597 1508
MAGNAVOX	1542	0441 0442
	0447	0599 0799 0699
	0247	0193 0093 0598
MARANTZ	0441	0142
MAXENT	0993	0991
MEDION	0792	0246
	0991	0291 0597
MEMOREX	0041	0246
	1606	1413 1913
MERIDIAN	0441	
MICROSOFT	0542	1611
MICROVISION	0792	
MINTEK	0644	
MITSUBISHI	0644	
MUSTEK	0744	
MYRON & DAVIS	0897	
NAD	1142	0142 0944
NAKAMICHI	0844	
NEC	0644	
NESA	0644	0897
NEXSTECH	1741	1208 0896 0097
	0197	0297 0095 1806 1007 1107
	1207	1307 1907 1008 0546 0596
NORCENT	0294	0899
	0394	0194 0494
ONKYO	0441	0843 0199
OPTIMUS	0042	0941
ORION	0041	
ORITRON	0143	1607
PACIFIC	0246	
PANASONIC	1541	0241 0641 0099
	0698	0345 0696 0340
PHILCO	1840	
PHILIPS	1514	0298 0093 1314 1414
	1214	0441 0442 0943 0177 0599
	0799	0699 0247 0447 0598 1211
PHILIPS-MAGNAVOX	0441	0442
	0943	0599 0699
PIONEER	1441	1341 0941 0042
	0299	0399 0498 0592 1010
PIVA	1109	
POLAROID	0140	0397 0596 1813
POLK AUDIO	0441	0442 0799

PORTLAND	0145	0896
POWER ACOUSTIK	1312	
PROLINE	0143	
PROSCAN	0542	0690
PROSONIC	0795	
PROTRON	0194	
PYLE	0692	
RADIO SHACK	0546	0946
	0593	0693
RCA	0542	0143 0644 0546
	0946	0693 0690 1913
REGENT	0794	1210
REOC	0746	
RIO	1841	0643
YAMAHA	0599	0699 0442
YAMAKAWA	0445	0444 1407
ZENITH	0441	0142 0392

THETA DIGITAL	0042
TIVO	0892 0592
TOSHIBA	1612 1013 1613 0041
PROSCAN	0441 0998 0094 0999
TREDEX	0795
TRUTECH	1906 0798 1713
UNITED	0546
VENTURER	1613 0546
WESTINGHOUSE	0300
WHARFEDALE	0845 0343
WHITE WESTINGHOUSE	0447
X-BOX	0542
XENIUS	0440
YAMAHA	1841 0643
	0599 0699 0442
YAMAKAWA	0445 0444 1407
ZENITH	0441 0142 0392

PIONEER	0592	0399 0252
POLAROID	1813	
PROSCAN	0966	
RCA	0542	0966
RCN	0954	
REPLAYTV	0938	
ROGERS	0252	
SAMSUNG	1440	0959
SCIENTIFIC ATLANTA	0252	
SONIC BLUE	0938	
SONY	0838	0367 0537
	0300	0400 0500 0567
TIME WARNER	0252	
TiVo	0738	0838 0036 0136
	0367	0999 0892 0592
TOSHIBA	1013	0999 0998
ULTIMATE TV	0966	0567
VERIZON	0954	
VIDEOTRON	0252	
ZENITH	0267	

DTV/ATSC - Digital To Analog Converter Boxes

ACCESS HD	1677
ALPHA DIGITAL	1677
AMTC	1677
APEX	0553
ARTEC	1577
CADENCE	1477
CHANNEL MASTER	1377
COSHIP	1477
DIGITALSTREAM	1776
DISH NETWORK	0067
ECHOSTAR	0067
GE	1578
GRIDLINK	1276
INSIGNIA	1676
KINGBOX	1577
LASONIC	1276
MAGNAVOX	0759
MICROGEM	1376
LG	1641
LITEON	0597
RCA	1804
SANSONIC	1276
SKARDIN	1576
SUNKEY	1775
PANSAT	1105
TIVAX	1677
VENTURER	1476
WINEGARD	1476
ZENITH	1605 1705 1805

AT&T	0938
BELL EXPRESSVU	0366 0167
CABLEVISION	0252
CHARTER	0954 0852
COMCAST	0954
COX	0954
DIRECTV	1506 1278 1378 1478
DISH NETWORK	0167 0366
DREAMBOX	0663
ECHOSTAR	0167 0366
EMTEC	1140 1240
EXPRESSVU	0366 0167
FORTEC STAR	0558 0157 0257
HUGHES	0659
HUGHES NETWORK	0763 0659
HUMAX	0892
ILLICO	0252
ILO	0597
JVC	1808
LG	1641
LITEON	0597
RCA	1804
SANSONIC	1276
SKARDIN	1576
SUNKEY	1775
PANSAT	1105
TIVAX	1677
VENTURER	1476
WINEGARD	1476
ZENITH	1605 1705 1805

KONKA	0842	0942
LASONIC	[0622 & 0496]	
LIQUIDVIDEO	[0319 & 0793]	
MAGNAVOX	0247	
MEMOREX	0041	
NEXSTECH	1806	
PANASONIC	0345	0696
	[1118 & 0793]	[1018 & 1640]
PHILIPS	0247 [0520 & 0447]	
PIVA	1109	
SAMSUNG	0895	
COBY	1710	1014
CHANGHONG	[0023 & 0741]	
CLASSIC	[0023 & 0741]	
DAEWOO	[0615 & 0046]	
DIAMOND VISION	[0622 & 0496]	
DURABRAND	[0810 & 0291]	
EMERSON	[0916 & 0142]	
FUNAI	0247	
SHARP	0391	
SONY	0300 (A) 0400 (B) 0500 (C)	
SYLVANIA	1212	0591
SYMPHONIC	0591	
TOSHIBA	0998	0441 1013
TRUTECH	1906	
YAMAHA	0599 (A) 0699 (B)	
ZENITH	0392	

DREAMBOX	0663	PIONEER	0592	0399
ECHOSTAR	0167	POLAROID	1813	
EXPRESSVU	0366	SAMSUNG	1440	
FORTEC STAR	0558	0157	0257	
HUGHES NETWORK	0763	0659		
NEOSAT	1777			
PANSAT	1105			
PHILIPS	0763			
PROSCAN	0966			
RCA	0966			
SAMSUNG	0959	AT&T	1976	
SEARS	0041	BELL	1177	
SHARP	[0509 & 0341]	CABLEVISION	0252	
SOVA	[1901 & 1111]	CHARTER	0852	0554
SUPERSONIC	0096	COMCAST	0954	
SYLVANIA	0247 [0520 & 0447]	COX	0554	
SYMPHONIC	0247	ILLICO	0252	
TOSHIBA	0041 0094	MOTOROLA	1077	0954
TRUTECH	1713	PIONEER	0252	
WESTINGHOUSE	[1216 & 0300]	RCN	0554	
		ROGERS	0252	
		SCIENTIFIC ATLANTA	0252	
		LG	1641	
		TIME WARNER	0252	0554
		LITEON	0597	
		VERIZON	0554	
		MEDION	0597	
		PANASONIC	0340	
		PHILIPS	1414	

DVR/SAT Combos

BELL EXPRESSVU	0366	0167
DIRECTV	1478	1378 1278 1506
DISH NETWORK	0167	0366

Combo Devices

In many cases a single code operates both parts of the device (e.g. the TV and the DVD). In other cases you need to set up two codes. For example, one for the TV and one for the DVD. Where codes are shown below as [### & ###] the first code operates the first part of the