

The example below (for TV) instructs you how to setup your remote using the given brand code. You can repeat the same steps for other devices which you want to operate.

Example of TV:

1 Turn on the TV (The TV should play).

2 Select TV on the remote (= Press the device key for which you are programming the remote) : keep the key pressed for 5 seconds until it blinks twice and then remains lit.

3 Enter the given four-figure code for your brand , using the digit keys .

– The TV key will now blink twice and then remains lit.

- If the TV key blinks once , the code has not been entered properly or the wrong code has been entered. Start again from step 2.

4 Press and hold the “ standby/power on” key and immediately release it when the TV switches off (standby).

– This may take up to 30 seconds.

5 Turn on the TV and check if you can operate all needed functions on your TV

– Make sure the receiving device is able to respond and accept the desired command .

- If a key does not function (properly), press the key that does not function, keep it pressed and immediately release it when the device responds. Repeat this for every key that does not function

6 Press the TV key twice to exit setup mode and save your settings.

– When no key is pressed for 2 minutes or more the remote control will exit setup mode automatically.

- If the device does not respond at all or not to all of the key commands or if you cannot find the code for your brand, enter ‘0, 0, 0, 0’ in step 3 and continue with step 4. The remote control will now search the full database for a code that works with your TV. Full database search may take up to 15 minutes.