



Philips  
Universal remote control

Icon

SRU4105



## Sticker icon model

### Direct access to channels

Most popular remote. Allows you to sticker your favorite icons to the remote, next to a button. When you want to go to a favorite channel, just press the button next to your favorite icon sticker. Do not have to know channel.

#### **Great convenience**

- Ready for use with Philips equipment
- 10 channels programmed recognized by the channel icon
- Stick an icon to the remote for your favorite channel

#### **Quick and easy set-up**

- Automatically searches for your equipment brand

# PHILIPS

# Specifications

## Packaging dimensions

- UPC: 6 09585 15691 3
- Number of products included: 1
- Packaging type: Blister
- Packaging dimensions (W x H x D):  
11 x 27.5 x 3.7 cm
- Nett weight: 0.125 kg
- Gross weight: 0.18 kg
- Tare weight: 0.055 kg

## Outer Carton

- GTIN: 2 06 09585 15691 7
- Number of consumer packagings: 6

- Outer carton (L x W x H): 30 x 24.5 x 14 cm
- Nett weight: 0.75 kg
- Gross weight: 1.6 kg
- Tare weight: 0.85 kg

## Inner Carton

- GTIN: 1 06 09585 15691 0
- Number of consumer packagings: 3
- Inner carton (L x W x H): 27.5 x 11 x 3.7 cm
- Nett weight: 0.375 kg
- Gross weight: 0.408 kg
- Tare weight: 0.033 kg

# Highlights

## Auto brand search

Getting your new remote control working is simply a case of having your remote automatically search for the most suitable code for your equipment.

## Pre-programmed for Philips

If you have Philips equipment, you can use your universal remote control without programming it because all keys are pre-set for Philips.

## 10 pre set channels

Forgot the channel number? By the time you entered 3 digits to change the channel, was the TV too fast and only picked up the first two numbers? Forget the channel numbers. Program the channels by channel icon, so to change channels all you have to do is recognize the icon for each channel. Some icon remotes offer 10 pre programmed channels, others 20, and the higher end LCD models, over 200.

## Sticker channel recognition

Forgot the channel number? Was the TV too fast and only picked up the first two numbers, by the time you entered 3 digits to change the channel? Forget the channel numbers. Program the channels by channel icon, so that all you have to do to change channels is to recognize the icon for each channel. Some icon remotes offer 10 pre programmed channels, others 20. These models use stickers to apply to the remote to recognize the channel.



Issue date 2014-03-14

Version: 1.1.6

12 NC: 8670 000 40821  
UPC: 6 09585 15691 3

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)