

Philips
DVD lens cleaner



SVC2520

Clean and protect your DVD player

Regular cleaning of your DVD player's lens ensures optimum performance of your equipment. It is important to keep a DVD player optical laser lens clean and dust free. This dry-brush system safely removes dust, debris and other contaminants.

Maintain original sound and video quality

- Safe dry brush cleaning system

Easy to use

- Voice instructions in 14 languages

PHILIPS

Specifications

Storage Media

- Supported formats: DVD-ROM, DVD/R, DVD/RW

Accessories

- User Manual: 14 languages

Packaging Data

- Quantity: 1
- EAN/UPC/GTIN: 87 10895 95887 5
- Gross weight: .12 kg
- Tare weight: .1 kg
- Net weight: .02 kg
- Width: 140 mm
- Height: 13 mm
- Length: 185 mm

Outer Carton

- EAN/UPC/GTIN: 87 10895 95889 9

- Quantity: 72
- Gross weight: 10.48 kg
- Tare weight: .86 kg
- Net weight: 9.62 kg
- Width: 350 mm
- Height: 360 mm
- Length: 430 mm

Inner Carton

- EAN/UPC/GTIN: 87 10895 95888 2
- Quantity: 6
- Gross weight: .80 kg
- Tare weight: .12 kg
- Net weight: .68 kg
- Width: 110 mm
- Height: 160 mm
- Length: 200 mm

Highlights

Dry brush system

The dry brush cleaning system safely removes dust, debris and other contaminants from the CD/DVD players laser lens, leaving it clean and performing optimally.

Voice instructions

The voice instructions on this easy to use CD lens cleaner guide you through the cleaning process in one of the 14 languages provided.



Issue date 2019-04-24

Version: 2.3.7

12 NC: 9082 100 07882
EAN: 87 10895 95887 5

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com