



**PHILIPS**

## **Safety information**

The **CE** marking on the product certifies its conformity with the technical regulations for user safety and electromagnetic disturbance which were applicable on the date of approval in accordance with European Union Directive No. N° 73/23/EEC, 89/336/EEC, 91/263/EEC and 93/68EEC.

### **Power requirements**

This product requires an electrical supply of 230 volts, alternating monophased current, excluding IT installations defined in standard EN 60-950.

### **Warning:**

The electrical network is classified as dangerous according to criteria in the standard EN 60-950.

The only way to power down this product is by unplugging the power cable from the electrical outlet. Make sure the electrical outlet is located close to the apparatus and is always easily accessible.

It is recommended that this telephone be used as a complement to another telephone which does not require mains power.

### **Safety precautions**

- Do not allow the handset to come into contact with water.
- Do not open the handset or the charger. This could expose you to high voltages. Contact our after-sales service for all repairs.
- Do not allow the charging contacts or the battery to come into contact with conductive materials such as keys, paper clips, rings, bracelets, etc.
- Make sure you insert the batteries with their polarities in the correct position.

# Contents

<b><i>Introduction</i></b>	<b>2</b>
<b><i>Installing your extra handset</i></b>	<b>3</b>
Deciding where to put the charger	3
Installing the charger on a horizontal surface	3
Mounting the charger on a wall	4
Charging your handset	5
Selecting the menu language	5
Registering your extra handset with your Onis base station	6
Changing the name of your base station	7
<b><i>Using your extra handset</i></b>	<b>8</b>
Making an outside call	8
Answering an outside call	9
Making an internal call	9
Answering an internal call	10
Using the handset loudspeaker	10
Managing the Baby Sit mode	10
Transferring calls	11
Managing a conference call	12
Locking the handset keypad	12
Using the battery saver	13
<b><i>Maintenance</i></b>	<b>14</b>
Changing the battery	14
Caring for your handset	15

# Introduction

Your **Onis** extra handset comprises:

- a charger,
- a handset,
- a power cable.
- 2 standard AA/R6 rechargeable batteries.

This guide shows you how to install and use your Onis extra handset.

Please refer to the corresponding Onis user manual for information on:

- using the phonebook,
- using the answering machine (Onis memo and Onis Vox only),
- troubleshooting.

## **Note:**

You should also refer to the manufacturer's handbook corresponding to the base station with which you are using this handset.


# Installing your extra handset

## Deciding where to put the charger

- Place the charger near a main outlet supplying 220-240V at 50Hz.
- To reduce to a minimum any interference with other electronic devices such as telephones, televisions, screens, etc. we advise you to place your charger at least 50 cm from any other electronic device.
- Place the charger on a flat surface as with the base station or mount it on a wall.
- Significant obstacles such as concrete walls or metallic supports (windows and door frames, partitions, etc.) will lessen the communication range between the base station and the handset.

## Installing the charger on a horizontal surface

- 1 Plug the power cable into the charger.

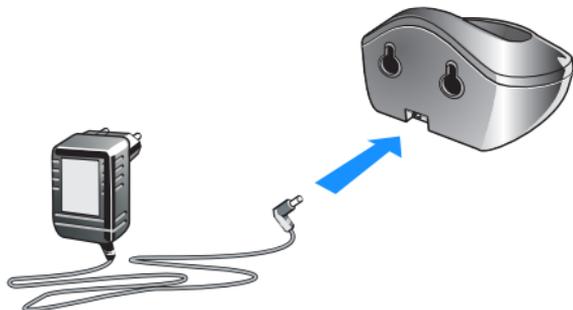



- 2 Plug the power cable into the wall socket.

- 3 Place the handset in the charger.

## Mounting the charger on a wall

1

Fix the screws (not supplied) according to the diagram below.

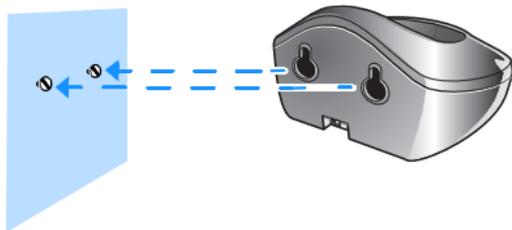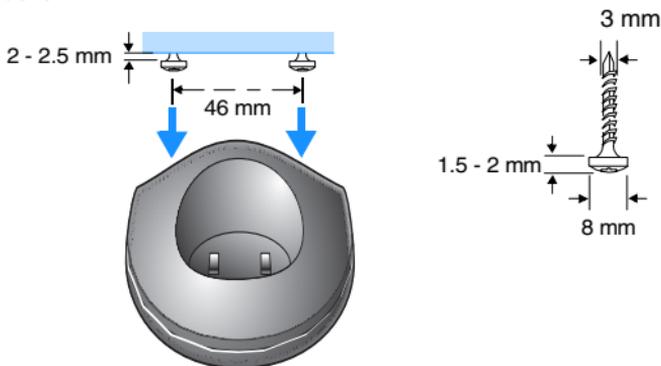

2

Plug the power cable into the charger as shown on page 7.

3

Mount the charger on the screws.

4

Plug the power cable into the wall socket.

5

Place the handset in the charger.

## Charging your handset

Your handset is powered by 2 rechargeable AA/R6 batteries.

**Before you use your handset for the first time, charge it for at least 16 hours.** This precaution helps to lengthen the life of the battery.

To charge the handset, place it on the charger or on the base station. The  symbol will appear on the display to indicate that the battery is charging.

When the  symbol disappears, your handset is fully charged.

The charger must be connected to a power supply using the power cable supplied.

### Tip

**To ensure an optimum handset charge, replace the handset on the charger regularly.**

## Selecting the menu language

- 1** Press **R/⏏**, then press **▼** until you reach **SETUP**.  
Press **OK**.  
**MENU LANG** is displayed.
- 2** Press **OK**.
- 3** Press **▼** or **▲** to scroll through the language options.  
Press **OK** to choose a language.  
A beep confirms that the language has been selected.

## Registering your extra handset with your Onis base station

To register your extra handset with your base station, proceed as follows:

- 1 Unplug the power cable of the base station, then plug it in again.**

The base station beeps to indicate that it is now in registration mode.

It is also possible to set the base station to registration mode using a handset that has already been registered. Instead of step 1 above, proceed as follows:

- Press **R/↵**, then press **▲** to display **SETUP**. Press **OK**.
- Press **▼** until **ADD HS** is displayed. Press **OK**.
- Enter the registration code (this is given on a sticker labelled "RC" under the base station). Press **OK**.  
Your handset beeps to indicate that the base station is now in registration mode.

- 2 Move the handset to be registered close to the base station and press R/↵ on the handset to enter menu mode.**

- 3 Press ▲ to display SETUP, then press OK.**

- 4 Press ▼ until REGISTER is displayed, then press OK. CODE? is displayed.**

- 5 Enter the registration code (this is given on a sticker labelled "RC" under the base station). Press OK.**

The handset will search for a base station that is in registration mode.

After a few seconds, the handset beeps and **REGISTER** is displayed. In this case go to the next step.

If the handset cannot find a base station, **FAILED** will be displayed, and you will need to try again.

- 6 Press R/↵ to leave menu mode.**

## Changing the name of your base station

The default name of your base station is "PHILIPS". You can change this name from your extra handset as follows:

- 1** Press **R/↵**, then press **▲** to display **SETUP**. Press **OK**.
- 2** Press **▼** until **BASE NAME** is displayed, then press **OK**.  
If the base station has a name, this will be displayed. You can delete the existing name using the **▲** key. If the base station has no name, **BASE NAME?** will be displayed.
- 3** Enter the new name (max. 8 characters) using the handset keypad.  
You can enter characters by pressing the key with the required character on it one or more times. These characters are engraved on the handset keypad. If you wish to enter two successive characters which are on the same key, you need to distinguish them by pressing the **▼** key between the two characters. You delete a character with the **▲** key.  
For example: to enter **PHILIPS** you would press the following keys.

**7   44 ▼ 444   555   444   7 ▼ 7777**

**P   H   I   L   I   P   S**

- 4** Press **OK**. Press **R/↵** to leave menu mode.

# Using your extra handset

## Making an outside call

### Direct dialling

1

**Press the  key on the handset.**

The  symbol is shown on the display and you hear the dial tone in the handset earpiece.

2

**Dial the number using the number keys.**

The number called is displayed for 10 seconds after the last key is pressed.

If the number you enter is longer than 10 digits, the display will scroll the number to the left to show the last digits.

3

**To hang up, press  or replace the handset in the charger.**

The duration of your call in minutes and seconds is displayed for 4 seconds.

### Dialling with number preparation

This way of dialling allows you to make corrections to the number before dialling.

1

**Dial the number (up to 23 digits) before pressing the  key. You can use the  key to make corrections by cancelling the last digit entered.**

If the number you enter is longer than 10 digits, the display will scroll the number to the left to show the last digits.

#### Tip

**If you want to see the whole number you have dialled so far, press OK. The number will scroll to the left if it is longer than 10 digits.**

**2****Press the  key on the handset.**

The number prepared is automatically dialled.

You can also press . The handset loudspeaker is activated and the number is dialled.

**3****To hang up, press  or replace the handset in the charger.**

The call duration is displayed for 4 seconds.

## **Answering an outside call**

When someone calls you, the base station and the extra handset ring, the  symbol blinks on the extra handset display and the green light on the base station flashes.

**1****Press the  key on the handset.**

The  symbol stops blinking on the handset. The green light on the base station blinks regularly to indicate that a call is in progress.

You can also press . The handset loudspeaker is activated and you can take the call.

**2****To hang up, press  or replace the handset on the base station.**

The call duration is displayed for 4 seconds.

## **Making an internal call**

When you have more than one handset, you can make internal calls free of charge between handsets registered with the same base station.

**1****Press  .**

You hear the internal dial tone and the  symbol is shown on the display.

**2****Dial the number of the handset you want to call, or press \* to call all your handsets.****3****To hang up, press  or replace the handset in the charger.**

### **Note:**

If you press \* to call all handsets, and one of your handsets is in Baby Sit mode, then this handset will take the call.

## Answering an internal call

When another handset calls you, your handset will ring with the internal call melody, the  symbol will blink on the display and the number of the handset calling you will be displayed.

- 1** Press .  
The  symbol is displayed.
- 2** To hang up, press  or replace the handset in the charger.

## Using the handset loudspeaker

Your extra handset is fitted with a loudspeaker as well, so that other people with you can listen to the conversation.

- 1** During a call, press .  
The sound is amplified through the loudspeaker at the back of the handset.
- 2** Adjust the volume of the loudspeaker when it is on, using  or .
- 3** To turn off the loudspeaker, press  again.

## Managing the Baby Sit mode

The Baby Sit mode allows you to monitor sounds coming from another room (e.g. the baby's room). Because the Baby Sit mode is a special type of inside call, it requires two handsets (of type Onis 6810 or 6816): one left in the baby's room (Baby Sit mode handset) and one you keep with you (Parents handset).

In order to use the Baby Sit mode, you must first set the handset to be left in the room to be monitored (e.g. the baby's room) in Baby Sit mode.

### Setting a handset in Baby Sit mode

- 1** Press R/, then press  until **BABY SIT** is displayed. Press **OK**.
- 2** Press  or  to select **ON**. Press **OK**.  
Your handset beeps to indicate that the setting has been changed.
- 3** Press R/ to exit menu mode.

## **Note:**

The handset in Baby Sit mode will not ring but can be used to make and receive calls.

To put the handset in Baby Sit mode back into normal mode, proceed as above. In step **2**, **ON** will be displayed. Press ▲ or ▼ to select **OFF**.

## **Using a handset in Baby Sit mode**

- 1 Place the handset set in Baby Sit mode, in the room you want to monitor (e.g. the baby's room).**
- 2 Using the Parents handset, press ◀▶ and the number of the Baby Sit mode handset.**  
The Baby Sit mode handset will not ring but its microphone will be activated to pick up surrounding sounds.
- 3 Turn on the loudspeaker of the Parents handset by pressing 🔊.**

## **Note:**

If you receive an outside call while using the Baby Sit mode, neither the Baby Sit mode or Parents handsets will ring, but the base station will.

Proceed with the outside call as usual and end it eventually by pressing 📞.

To switch back to the Baby Sit mode, press ◀▶ followed by the number of the Baby Sit Mode handset.

## **Transferring calls**

You can transfer an outside call from one handset to another handset registered with the same base station.

- 1 During the call, press ◀▶.**  
The outside call is put on hold.
- 2 Dial the number of the handset to which you wish to transfer the call, or press \* to call all the handsets.**  
The handset(s) called start(s) ringing.

**3**

**Once the other handset answers, you can either:**

- Transfer the call by pressing .
- Switch back and forth between the other handset and your outside call by using .

If the other handset does not reply, you can return to your outside call by pressing , or you can hang up both your outside and inside call by pressing .

## **Managing a conference call**

A conference call involves 3 persons in a common call.

**1**

**While an outside call is in progress, press  to call another handset.**

The outside call is put on hold.

**2**

**Dial the number of the handset with which you want to initiate a conference call, or press \* to call all the handsets.**

The handset(s) called start(s) ringing.

**3**

**Once the other handset answers, you can either :**

- initiate the conference call by pressing **OK**.
- switch back and forth between the other handset and your outside call by using .

If the other handset does not reply, you can return to your outside call by pressing , or you can hang up by pressing .

## **Locking the handset keypad**

To prevent unwanted key presses, you may want to lock the handset keypad. For example while you have the handset in your pocket.

**1**

**Press the  key and then the \* key for 2 seconds.**

The handset beeps to confirm the new setting and **LOCKED** is displayed on the handset.

If a key is pressed, while the keypad is locked, a help message will be displayed for 2 seconds, unless the handset is set in off mode.

**2**

**To unlock the handset keypad, press again \* key for 2 seconds.**

The handset beeps to confirm the new setting.

The handset keypad is automatically unlocked when an incoming call is received or when you place your handset on the base station.

## Using the battery saver

Use the battery saver if you want to use the handset away from the base station or charger for a long period of time.

### Switching on the battery saver

1

Press and hold the **OK** key until your handset beeps. Your handset switches to battery saver mode.

#### **Note:**

In battery saver mode, the handset will not ring. However, if someone calls, the base station will ring.

### Switching off the battery saver


- The battery saver mode will switch off as soon as you press a key.
- The battery saver mode will also switch off as soon as you place your handset back on the base station. Then, if necessary, the handset will start to recharge.

# Maintenance

## Changing the battery

Your handset is powered by 2 rechargeable AA/R6 batteries. In case of replacement, you must use the following approved batteries: PHILIPS R6 NC-P, Saft RC6. The manufacturer is not liable if these recommendations are not respected.

- 1 Slide down and lift off the battery cover.
- 2 Insert the new batteries as shown.
- 3 Replace the battery cover.

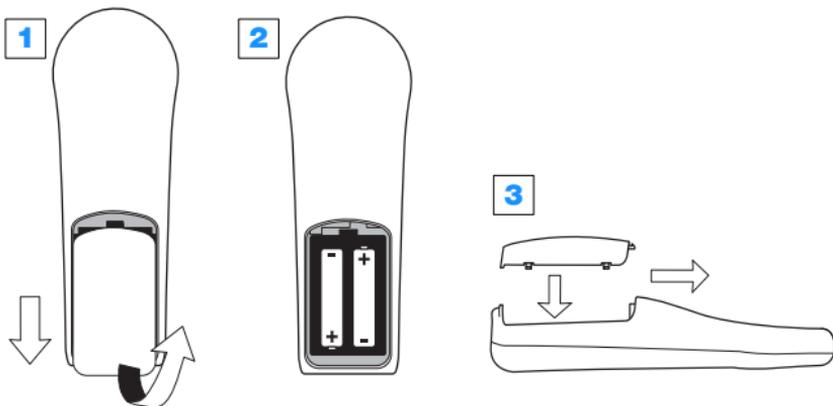

**NEVER USE NON RECHARGEABLE BATTERIES!**

## **Warning!**



Your handset batteries contain cadmium. Check your local regulations for special disposal instructions.

## **Caring for your handset**

To clean your handset or charger, first unplug the mains cable. Wipe with a cloth or chamois moistened slightly with soapy water, then with a dry cloth. This will help to keep your handset looking as good as new.

### **Note:**

Never spray your handset or charger with cleaning products or solvents.

Clean the charging contacts on the handset and the charger using a dry lint-free cloth.