



**Plug & Play with built-in Outgoing Messages**

**Permanent memories: no tape, no battery**

**14 minutes memory capacity**

**New-message audio reminder**

**One-touch Do Not Disturb function**

**Recordable ringer**

**Built-in selectable ringing melodies**

### Listening to incoming messages

The display will flash, indicating the number of new messages stored.

1. Press **[M]** to listen to the new messages. The messages will playback from first one recorded to the last one recorded.
2. If you wish to repeat the message, press **[R]** to repeat the message.
3. If you wish to skip the message, press **[S]**.
4. If you wish to erase the message, press the **[E]** button while the message is playing or before the next message.

**Note:** If there are new messages in both main store and mailboxes, the 2 digit LED will only signalled.

- If there are no new messages in the main store but in the mailboxes, a mail box symbol will flash in the display.
- If there are no new messages either in the main store or the mailbox, then the display will show the number of old messages in the main store but it will not flash.
- If there are no new or old messages at all, the display will show "0".

### To record Incoming message in Mailboxes

4 Mailbox are provided

The caller can choose to leave a message in a particular mail box by pressing the appropriate mail box number, or can leave a message in the main mailbox.

- 1) The OGM message will be played after the set number of rings
- 2) Press the mailbox key after the OGM e.g press (1) for Mailbox 1, press (2) for Mailbox 2. It is the same as Mailbox 3 & 4.
- 3) The machine will start recording incoming calls in the chosen mailbox

### Listening to Incoming messages from the mailboxes

There are 4 mailboxes.

**To listen to messages from mailbox:**

1. Press the **[M]**, then the display will show "01"
2. If there are any new messages, the mailbox symbol will flash.
3. After 2 seconds, the display will change to show a flashing number of new messages in the mailbox.
4. Press the **[R]** Button to skip back to the previous message or press the next button to forward to next message

**To listen to messages from other mailboxes:**

1. To listen to messages from mailbox 2, press the **[M]** again.
2. The display will show the mailbox symbol and the number 2.
3. Please follow the same procedure as stated above for all mailboxes

**To exit from the mailboxes and return to main menu:**

After listening to last message in mailbox 4, press the **[M]** return to main menu.

**Note:** To also exit from the mailboxes, press the **[M]** button when no messages are playing or a short press on **[M]** key during the 2 second time-out before the number of messages in the mailboxes are displayed.

- During the time-out after the playback of messages in a mailbox, if you do not press any keys for 30 seconds, the answering machine will return to the main menu.

### Erasing the messages

**To erase old messages:**

1. Press the erase key for 2 seconds while no messages are playing.
- Note:** No new messages will be erased in order to prevent accidental erase.

**To erase individual messages:**

1. Press the erase key while the message is playing or at the end of the message before the next message starts.

### Volume Control

If you wish to change the volume, just push the volume control up or down to the desired level.



### Recording a Memo

You are able to leave a message for your household members through this feature. During recording, the telephone line must be inactive and the machine must be in Answer Off mode.

1. Press Answer Mode Button to Answer Off mode and the Answer Off Indicator is light up.
2. Press Record button.
3. After the beep and the displays shows "uc", speak your memo.
4. Press Play/Stop or Record button to stop recording.
5. After the rotating "uc" stops, the memo will playback.
6. Press Answer Mode Button once or twice to restore to previous setting.

### Operating the New Message Indicator Function

When you have turned the REMIND "On", and you have received a new message. The "New Message Indicator" function will ring every 10 minutes to remind you that there is a new message.

1. Press the **[M]** to turn this function "On." The LED will light up.
2. Press the **[M]** again if you wish to turn this function off.

### Operating The Do Not Disturb Function

The Do Not Disturb function offers privacy and convenience.

This function switches off all audio functions from the answering machine, ringer and "New Message Indicator" function.

1. To turn on this function on, press the "Do Not Disturb" button, the LED **[M]** will light up.
2. If you wish to turn this function off and reactivate the other functions, press the "Do Not Disturb" button.

**Note:** When the Do Not Disturb function is "On", the "New Message Indicator" function is automatically deactivated, and the **[M]** LED is switched off.

### Operating the remote-control feature

You can give commands to your answering machine from another telephone by entering the 4-digit remote code.

1. Dial the telephone number.
2. The answer machine will answer after the number of set rings. (If it is set in Answer-Off mode, it will answer after 9 rings).
3. Press **[\*]** to activate the remote functions.
4. Enter your personal remote pin code then the messages will start to playback.
5. Once all the messages have been played, the voice prompt will say "No more messages"
6. Press **[\*]** to listen to the Help commands

**Note :** If an incorrect PIN code is entered, an error tone will be heard and the voice prompt will say "Incorrect code, please try again." Please enter your remote code again.

- There is no limit on the number of attempts to enter your PIN code.
- If silence is maintained for 7 seconds, the voice prompt will say "press the **[\*]** for help.
- Accessing your remote control, the display will show "OO"

### While listening to the message playback, you can do the following:

- Press **[7]** to repeat a message
- Press **[8]** to play/Stop message playback
- Press **[9]** to skip forward to next message
- Press **[7]** **[7]** to play previous message
- Press **[0]** to erase the message being played
- Press **[1]** to select Mailbox 1
- Press **[2]** to select Mailbox 2
- Press **[3]** to select Mailbox 3
- Press **[4]** to select Mailbox 4
- Press **[5]** to exit from a Mailbox
- Press **[6]** to access for other commands
- Press **[\*]** to listen to menu functions.
- Press **#[#]** to exit the remote control functions.

### The Help Commands

- Press **[1]** to switch to Answer Record mode.
- Press **[2]** to switch to Answer Only.
- Press **[3]** to switch the Answer off.
- Press **[4]** to record a new Answer Record message or to stop recording
- Press **[5]** to record a new Answer Only message or to stop recording
- Press **[6]** to activate the room monitoring function.
- Press **[7]** to change the PIN Code.
- Press **[8]** to stop/playback messages or to return to first set of commands.
- Press **[\*]** to listen Help Commands.
- Press **#[#]** to exit the remote control functions.

### Technical Specification

|                             |                |  |  |
|-----------------------------|----------------|--|--|
| <b>Power Requirement:</b>   |                | <b>Memory Capacity (total recording time):</b> |  |
| 9V AC, 400mA                |                | 14 minutes (approximately)                     |  |
| <b>Length of messages:</b>  | <b>minimum</b> | <b>maximum</b>                                 |  |
| Outgoing messages           | 3 seconds      | 3 minutes                                      |  |
| Incoming messages           | ---            | 3 minutes                                      |  |
| Memo                        | ---            | memory capacity                                |  |
| <b>Number of messages :</b> |                | <b>60 (max.)</b>                               |  |

#### Note:

Please use the power adaptor and telephone line cord provided in this package.

### IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, the following basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons.

1. Read and understand all instructions.
2. Follow all warning and instructions marked on the product.
3. Do not use this product during an electrical storm, as there is risk of electric shock.
4. Unplug this products from the wall telephone jack and power outlet before cleaning, and only use a damp cloth without detergents and sprays.
5. Do not use this product near water or when wet as this could result in electric shock.
6. Do not push objects into openings on this product as this could results in fire or electric shock.
7. Do not open this unit under any circumstances. This product has no user serviceable parts and the warranty conditions will not longer apply if the products is opened.
8. This product should be operated only with the power source provided with the unit. If you need assistance, please consult your retail store.

### Approved use

This telephone is approved for connection to direct exchange lines of the Public Switched Telephone Network (PSTN) and compatible PABX (please ask your supplier for an up-to-date list) but not for connection in the following manner:

- as an extension to a payphone
- on a shared service line or 1 + 1 carrier system.

This apparatus has been approved for the use of the following facilities:

- Call screening/intercept
- Memo recording
- Audible and visual indication of messages
- Power/message indicator
- Remote access

Any other usage will invalidate the approval of the apparatus if as a result it then ceases to conform to the standards against which the approval was granted. It cannot be guaranteed that this apparatus will operate correctly under all possible conditions of connection to compatible PABX. Any cases of difficulty should be referred in the first instance to your supplier. This apparatus is suitable for connection to PABX that return secondary proceed indication.

Please note that when connection is made to any PABX, the last number redial facility must not be used.

### UK & IRELAND your international guarantee

Dear Customer,

Thank you for purchasing this Philips product which has been designed and manufactured to the highest quality standards.

If, unfortunately, something should go wrong with this product Philips guarantees free of charge labour and replacement parts irrespective of the country where it is repaired during a period of 12 months from date of purchase. This international Philips guarantee complements the existing national guarantee obligations to you of dealers and Philips in the country of purchase and does not affect your statutory rights as a customer.

The Philips guarantee applies provided the product is handled properly for its intended use, in accordance with its operating instructions and upon presentation of the original invoice or cash receipt, indicating the date of purchase, dealer's name and model and production number of the product.

The Philips guarantee may not apply if:

- the documents have been altered in any way or made illegible;
- the model or production number on the product has been altered, deleted, removed or made illegible;
- repairs or product modifications and alterations have been executed by unauthorised service organisations or persons;
- damage is caused by accidents including but not limited to lightning, water or fire, misuse or neglect.

Please note that the product is not defective under this guarantee in the case where

modifications become necessary in order for the product to comply with local or national technical standards which apply in countries for which the product was not originally designed and/or manufactured. Therefore always check whether a product can be used in a specific country.

In case your Philips product is not working correctly or is defective, please contact your Philips dealer. In the event you require service whilst in another country a dealer address can be given to you by the Philips Consumer Help Desk in that country, the telephone and fax number of which can be found in the relevant part of this booklet.

In order to avoid unnecessary inconvenience, we advise you to read the operating instructions carefully before contacting your dealer. If you have questions which your dealer cannot answer or any related question please write or call:

**Philips Consumer Help Desk**  
PO Box 298  
420 London Road  
Croydon  
Surrey  
CR9 3QR  
UNITED KINGDOM.  
Phone : (018)-665 6350.  
Fax : (018)-689 4312.

**Philips Electronics Ireland Ltd**  
Newstead  
Clonskeagh  
Dublin 14  
IRELAND.  
Phone : (01)-7640000  
Fax : (01)-7640175



**Thank you for purchasing this digital answering system with voice prompt.**


You are guaranteed to experience the efficiency and quality set by Philips standard.

In this package you will find the following:

- one base unit
- one user manual
- one line cord
- one ac adaptor
- one remote control card

### Feature list of the equipment

- |                                 |  |
|---------------------------------|--|
| 1. Display                      | 10. Record Button                        |
| 2. Previous Button              | 11. Answer Mode Button                   |
| 3. Play/Stop Button             | 12. Answer/Record Indicator              |
| 4. Next Button                  | 13. Answer Only Indicator                |
| 5. Mailbox Button               | 14. Answer Off/ Memo Recording Indicator |
| 6. Menu Button                  | 15. Microphone                           |
| 7. Erase Button                 | 16. Speaker                              |
| 8. Do not Disturb Button        | 17. Volume Control                       |
| 9. New Message Indicator Button |  |

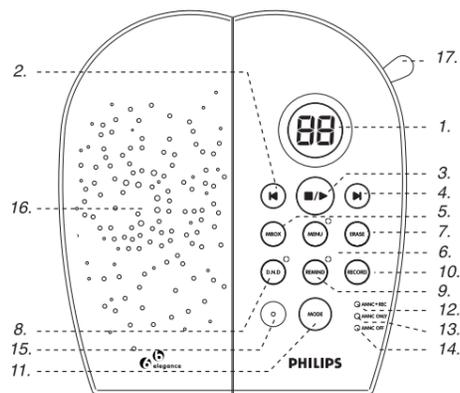


### Begin the MENU Set Up

**ELEGANCE 66** is designed with full PLUG & PLAY intelligence to take care of the incoming messages once connected. Please also refer to the section: Select Your Answering Mode.

It is recommended to turn on the clock and check the pre-setting.

Before you begin: please ensure the volume is set to maximum.

To begin, please press MENU:

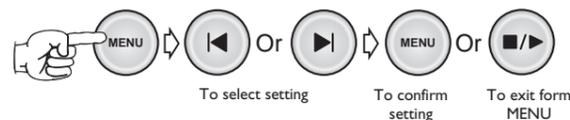

To change settings, press PREVIOUS or NEXT, then press MENU. To exit from MENU, press STOP.

**Note:** The clock will be reset whenever there is a power failure. The Day-Time Stamp will then be deactivated.

### Setting the time and day

Set the day first, followed by the hour, then the minutes.

#### Set Day

1. Press until hear the VoiceHelp
2. Press or until the Voice Announcement has announced the day required.
3. Press to confirm and go to next setting - the time.

#### Set Hour

1. Press or until the display indicates the correct hour.
2. Press to confirm and go to next setting - minutes.

#### Set Minute


1. Press or until the display indicates the correct minutes.
2. Press to confirm and go to next setting.

#### Set AM/PM

1. Press or until the voice announce the correct AM or PM.
2. Press to confirm and go to next setting.

### Setting the day-time stamp announcement status

If the time and the day are not set, the day-time announcement will not be included in the message even if it is turned on.

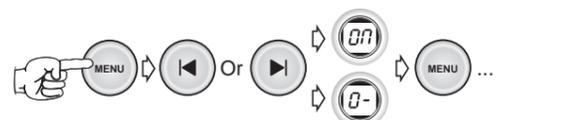

1. From the previous setting, or press until hear the VoiceHelp:
2. Press or to change the setting.
3. If you do want the day/time stamp on, press menu when the display shows "On"
4. If you do want the day/time stamp off, press menu once the display shows "Off"
5. Press to confirm and go to next setting.

### Setting Answer Delay

To set the number of rings before the Answering Machine picks up the call and announces the Outgoing Message.



1. From the previous setting, or press until you hear the VoiceHelp: (The Answering Machine is defaulted at Answer Delay 3. It will answer the incoming call after at the third ring)
2. Press or to select the desired Answer Delay: 2, 3, 4, 5 or "E" "E" stands for Economy mode (Toll Save). For this setting, the Answering Machine will pick up the incoming call at the second ring (Answer Delay = 2) if there are new messages in the machine. Otherwise, in case of no new message, it will pick up the line at the fifth ring (Answer Delay = 5). It allows the user to call back his Answering Machine and identify if there is any new message at the third and fourth rings without actually connecting the call.
3. Press to confirm and go to next setting.

### Setting the Ringer On/Off

**ELEGANCE 66** provides two extra pre-recorded and one user programmable ringer for the incoming calls. This feature takes over the ringer of your telephone.

To switch the ringer on:



1. From the previous setting, or press until hear the VoiceHelp:
2. The display will show "O-".
3. Press or then the display will show "On"
4. Press to confirm and go to next setting.

To switch the ringer off:



1. Same as the procedures as stated in above.
2. Press or to change the setting then the display will show "O-".
3. Press to confirm and go to next setting.

### Recording Ringer

To record your user programmable ringer,



1. From the previous setting, or press until hear the VoiceHelp:
2. The display will show "-".
3. Press .
4. Record the message or sound after the beep.
5. You will have four seconds for your programmable ringer. The display will count down from 4.
6. Press when finished. The recording will then playback.
7. Press if you want to replace the previous recording.
8. Press to confirm and go to next setting.

### Selecting Ringer



1. From the previous setting, or press until hear the VoiceHelp:
2. Press or to select your desired ringer from the two pre-recorded ringers and your personalized.
3. Press to confirm and go to next setting.

**Note:** In order to select into your own recorded ringer, you need to record it first.  
 - The pre-recorded ringers are shown in the display as : 1 and 2  
 - Your personalised ringer is shown as : P on the display.  
 - There is a maximum duration for the recorded ringer of 4 seconds.

### Setting the Remote Code

When using the answering machine for the first time, the remote code is "0000". To ensure the security of your messages, please record and use your own 4-digits Remote Code.

 


1. Press and the VoiceHelp will say " PIN Code is....." and the display will show "PC"
2. Press or to change each number in your code., then once the digit you desire is displayed, press to confirm. Repeat this step for all 4 digits.
3. After the fourth digit is selected, press to confirm.
4. Then the VoiceHelp will repeat the selected 4-digits New/Remote assess code is OK.. "
5. The system will exit the Menu setting mode and return to stand-by mode.

**Note :** During the setting, the system will exit the Menu mode in case of: receiving no subsequent command for more than 15 seconds, or pressing the PLAY / STOP key, or if there is an incoming call. Return to the Menu settings, press .

### Select your answering mode

**ELEGANCE 66** is defaulted to answer and record incoming calls, Answer/Record mode. To hear the default Outgoing Message (OGM), press the MODE key until the display shows "A1" and the Answer/Record Indicator is light up.



Thank you for calling. There is no one to answer your call now. Please leave your message after the beep.

Thank you for calling. There is no one to answer your call now. Please call later.

#### Answer/Record mode:

If you want the machine to answer as well as record the incoming calls:

1. Press once or twice, then LED - ANS /REC will light up.
2. After 2 seconds, the OGM will be played.

**Note:** During playback, the display shows "A1"

#### Answer Only:

If you want the machine to announce the outgoing message to the incoming calls without recording.

1. Press MODE once or twice until the LED - ANS ONLY is light up.
2. After 2 seconds, the OGM will be played.

**Note:** During playback, the display shows "A2"


#### Answer Off:

To turn off the Answering Machine:


1. Press once or twice until the LED - ANS OFF is light up.
2. The display shows "-"
3. VoiceHelp will announce: "Answer Off mode, to record your mode, please press , to stop recording, press STOP."
4. In case of no further command within 15 seconds, the display will show number of messages in the machine.

### Installation

1. Connect the answering machine to the telephone cord
2. Connect the AC adaptor plug to AC main outlet
- 2.1 You will hear the VoiceHelp
- 2.2 Just by means of this PLUG & PLAY action, simultaneously, **ELEGANCE 66** will take care your incoming messages. Please refer to the section: Select Your Answering Mode.

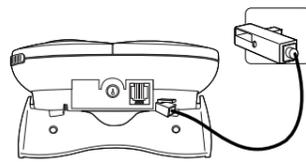

 Thank you for using PHILIPS Answering System. To begin the set up, please press MENU.



#### Wall Mounting

