

Wireless Music Station

WAS7000

Read Me First!

Quick start guide


- A** Connect/Setup
- B** Enjoy
- C** FAQ




PHILIPS

EN

What's in the box

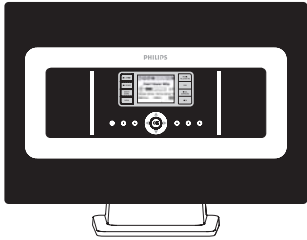

Wireless Music Station WAS7000

 

I-way remote control
2 x AA batteries



Quick start guide



User manual



Connect to your PC



 
PC Suite CD



FM wire antennas




Ethernet cable



Mounting kit

Before using the remote control:

 - Insert batteries into the remote control as shown



I-way remote control

A

Connect/Setup

Set up connection between the Station and WAC7000 Center

1

The first time you set up a Wi-Fi connection, place the Center and Station side by side on a flat and firm surface

2

Connect WACS7000 to a power supply – connect the Center first followed by the Station


Center/Station:

- The screen lights up in a few seconds
Auto installation/connection starts
- Both the Center and Station are switched on, The **HD** screen appears if the Station is connected to the Center (it takes about 1.5 minutes).

3



Relocate the Center and Station as desired:

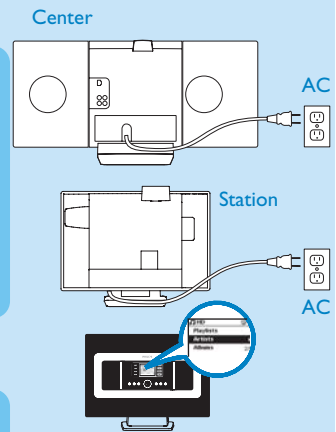- Simply unplug the Center or Station and power them up in your preferred rooms.
- You will be able to stream* the hard disk music between the Center and Station



IMPORTANT!

- Avoid installing in between thick walls. Separating the Center and Station by 2 or more walls may cause poor streaming connection.
- For better Wi-Fi reception, you can adjust the Wi-Fi antenna, or adjust the location of the Center and Station (e.g. shorten the distance between the Center and Station).

 : indicates maximum reception;  : indicates minimum reception

- For wall mounting, please refer to the **User Manual, Appendix: How to mount your Station onto walls**. You may need assistance from a qualified service personnel.

* Streaming is the process in which data (music in this case) is transferred from one device to another device or many other devices.

B_i

Enjoy


Play music library of the Center on the Station

You can play the music library (**HD**) of the Center on a connected Station


1

Check that the Center is switched on or is already in standby mode

2

To switch on the Station, press **STANDBY-ON** 

• The **HD** screen appears if the Station is connected to the Center

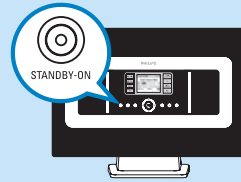

3


 




Use the navigation controls     to select your playback options (*Demo tracks are stored under **All tracks***)

4

Press **OK** to start playback


5

To change your playback option,

- Press  once or more to enter previous option lists
- Use the navigation controls     to select
- Press **OK** or  to confirm

6

To stop playback, press **STOP** / 

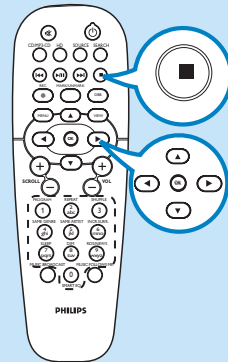

B₂

Search for your desired tracks/albums

Search by keywords

The keyword should be the first letter or word of the title of the track you wish to search for. By inputting a keyword, you can quickly find all the items containing the word (note that it is case sensitive)

1

Use the navigation controls ▲ ▼ ◀ ▶ to enter the desired option list under tracks, albums, artists or playlists

2

Press **SEARCH** on the remote control


- A text box appears

3

- Press the **alphanumeric keys** repeatedly to input the keywords (maximum 8 characters)
- To delete the entry before cursor, press **⏪**
- Press **◀** or **▶** to move the cursor backward / forward

4

- Press **OK** to start searching
- Display shows: **Searching** Searching starts from the beginning of the current option list
 - The matched items appear at the front of the list

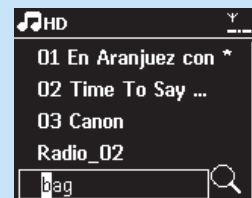

B₃


Stream music between the Center and Station


MUSIC FOLLOWS ME

As you move around at home, let music move with you, either from the **Center** to **Station** or from **Station** to **Center**.

1


On the source unit (Center or Station) where the music is playing


- On **HD** source, select and play the album or playlist you wish to play on the destination unit
- Press **MUSIC FOLLOWS ME** to activate
 - The  icon appears

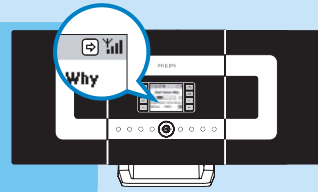

2

On the destination unit (Center or Station) where the music will continue

- Check that the destination unit is switched on or is already in standby mode
- Press **MUSIC FOLLOWS ME**
 - Selected music continues on the destination unit
 - On the source unit, the music stops. The  icon disappears
- To stop **MUSIC FOLLOWS ME**, press **STOP** ■

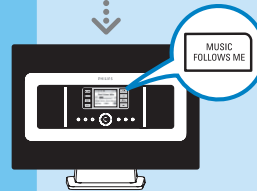

Tips:

- Always press **MUSIC FOLLOWS ME** on the source unit before pressing **MUSIC FOLLOWS ME** on the destination unit.
- MUSIC FOLLOWS ME** will be automatically deactivated if you do not press **MUSIC FOLLOWS ME** on the destination unit within 5 minutes
- After **MUSIC FOLLOWS ME** is activated on the destination unit, you can select other tracks or source for playback on the source unit.

B4


Stream music between the Center and Station


MUSIC BROADCAST

MUSIC BROADCAST allows you to broadcast music from the **Center** to the **Stations**.

1

On the Center


- a. On **HD** source, select and play the album or playlist you wish to broadcast to the Stations
- b. Press **MUSIC BROADCAST** to activate
 - The  icon appears on the Center and Station. a 5-second countdown starts

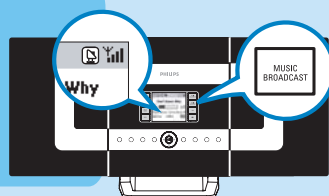


2

On the Center and all Stations

- Selected music starts to play simultaneously

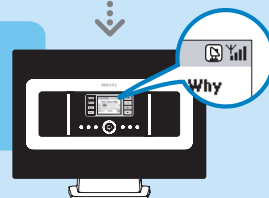

Tips:


- Check that the Stations are switched on or are already in standby mode.
- **To broadcast again**
Before you press **MUSIC BROADCAST**, check if you need to deactivate any earlier broadcasting. If the icon  is still active in the Center or Station's display, press **STOP** on the **Center**. Then, follow Steps 1 to 2 mentioned above.
- Other functions are unavailable during **MUSIC BROADCAST**.
- To exit **MUSIC BROADCAST** on a Station, press **STOP** on the Station.

B5

Play music from USB devices

You can use USB flash memory (USB 2.0 or USB1.1) and USB flash players (USB 2.0 or USB1.1) with the Station.

1

Insert the USB plug of the USB device into the socket  on the Station

2

Press **SOURCE** once or more times to select **USB**



- The icon  appears
- List of CD tracks appears

3

Use the navigation controls     to select your playback options

4

Press /OK to start playback

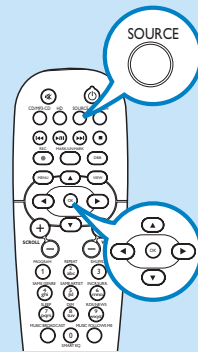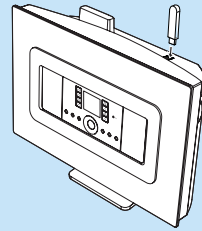

B6

Use UPnP

The music collection on the UPnP-enabled device can be played on the Station, wirelessly or through an Ethernet cable (supplied).

1

Check that the UPnP device is switched on

2

Check that the Station is connected to the UPnP device's network

3

On the Station, press **SOURCE** on the remote control to select UPnP mode


4

Use the navigation controls ▲ or ▼ and ► to select your desired UPnP device
→ The music library of the UPnP device appears on the Station as it does on the UPnP device

5

On the Station, play UPnP device's music library in the same way as you play Hard Disk (HD)

For details, please refer to User Manual or Connect to PC.

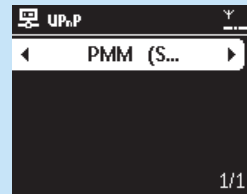

B7

Listen to FM Radio

1

Connect the supplied FM wire antenna to the Station (see **User manual, Installation**)

2


Press **SOURCE** once or more times to select **Radio**

3

- a. press **MENU**
- b. Press **▲** or **▼** and **▶** to select **Autostore radio**
 - The display shows: **Autostore Please wait...**
After all available stations are stored, the first autostored preset station will play automatically
 - You can store up to 60 preset radio stations in the memory (including a maximum of 10 RDS stations).

4

- a. press **◀** to enter the list of preset stations
- b. Use the navigation controls **▲** or **▼** followed by **▶** to select the desired station

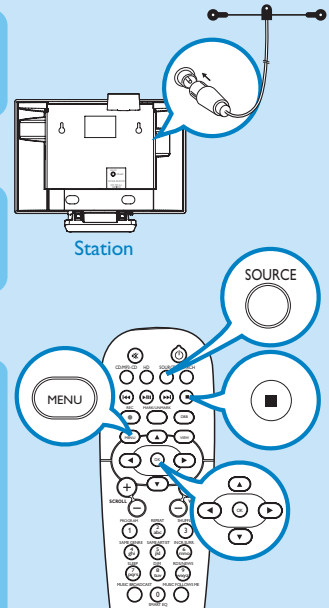



FAQ

Most Frequently Asked Questions

About the Environment

Q: Is there a maximum distance of transmission between Philips Wireless Music Center and Stations for effective streaming?

A: Yes. The maximum distance of Wi-Fi transmission is 250m measured in open spaces. However, in a home environment, there solid obstacles such as walls and doors are present, the effective transmission distance is significantly reduced to approximately 50 - 100m. Try to re-position the sets if you experience transmission problems.

Q: Do I need a computer or home network to use Philips Wireless Music Center and Station?

A: No. Philips Wireless Music Center and Station are designed to work independent of the computer. You can record music from CDs to the music library of the Center's (hard disk), and stream music to the Stations without any computer or home networking structure.

About Music Management

Q: What is Philips Wireless Audio Device Manager (WADM)?

A: WADM serves to help you manage network settings, upgrade Firmware etc. For details, see the manual Connect to your PC and WADM help file.

Q: Is Philips Wireless Music Station upgradeable?

A: Yes, Philips Wireless Music Station is software upgradeable, which means that it is ready for future functional upgrades if available. Check our website regularly for the latest news on new features and improvements at <http://www.philips.com/support>

Country	Helpdesk	Tariff / min	Keep ready
österreich	0820 901115	€0.20	Das Kaufdatum, Modellnummer und Seriennummer
Belgique	070 253 010	€0.17	La date d'achat la référence et le numéro de série du produit
Canada	1-800-661-6162 (Francophone) 1-888-744-5477 (English / Spanish)	Free	Date of Purchase, Model number and Serial number
Danmark	3525 8761	Local tariff	Forbrugeren's indkøbsdato, type/model-og serienummer
Suomi	09 2290 1908	Local tariff	Ostopäivä ja tarkka mallinumero ja sarjanumero
France	08 9165 0006	€0.23	La date d'achat la référence et le numéro de série du produit
Deutschland	0180 5 007 532	€0.20	Das Kaufdatum, Modellnummer und Serial nummer
Ελλάδα	0 0800 3122 1223	Free	Την ημερομηνία αγοράς και Τον ακριβή κωδικό μοντέλου και Τον αριθμό σειράς του προϊόντος σας
Ireland	01 601 1161	Local tariff	Date of Purchase, Model number and Serial number
Italia	199 404 042	€0.21	La data di acquisto, numero di modello e numero di serie
Luxembourg	26 84 30 00	Local tariff	La data d'achat, la référence et le numéro de série du produit
Nederland	0900 0400 063	€0.20	De datum van aankoop, modelnummer en serienummer
Norge	2270 8250	Local tariff	Datoen da du kjøpte produktet & modellnummer & serienummeret
Portugal	2 1359 1440	Local tariff	A data de compra, número do modelo e número de série
España	902 888 785	€0.15	Fecha de compra e número del modelo e número de serie
Sweden	08 632 0016	Local tariff	Inköpsdatum, modellnummer och serienummer
Schweiz	02 2310 2116		Das Kaufdatum und Modellnummer und Seriennummer
UK	0906 1010 017	£0.15	Date of Purchase, Model number and Serial number
USA	1-888-744-5477	Free	Date of Purchase, Model number and Serial number

Need help?
www.philips.com/support
or
call our helpdesk

 Be responsible
Respect copyrights



© Royal Philips Electronics N.V. 2006
All rights reserved.
3141 075 22041 
www.philips.com