

### Call from the phonebook

1. Press  in idle mode.
2. Select a phonebook record you want to call.
3. Press  key to dial out the call.

### ECO mode

The ECO mode reduces the transmission power of the handset and base station.

1. Press **MENU**.
2. Select **ADV. SETTING > ECO**, then press **OK** to confirm.
3. Select the new setting, then press **OK** to confirm.

The setting is saved.

 is displayed instead of  in standby mode.

#### Note

When the ECO mode is activated, the connection range between the handset and the base station can be reduced.

### Listen to messages recorded on the answering machine (for XL665 only)

Press  on the base station to turn on the answering machine (the message counter is turned on).

Press  again to turn off the answering machine (the message counter is turned off).

Press  on the base station to play phone messages (the first recorded message will be played first).

Press  to skip the current message and play the next message.

Press  once to replay current message.

Press  twice to go back to the previous message.

Press  to adjust speaker volume during message playback.

Press  to delete the current message.

Refer to your new phone's User Manual for details about the answering machine function.

## Troubleshooting

For more information, please refer to the User Manual that came with your phone.

Problem	Solution
<ul style="list-style-type: none"><li>• There's no dialling tone!</li></ul>	<ul style="list-style-type: none"><li>• Check the connections</li><li>• Charge the batteries</li><li>• Use the line cable provided</li></ul>
<ul style="list-style-type: none"><li>• Caller cannot hear me clearly!</li></ul>	<ul style="list-style-type: none"><li>• Move closer to the base station</li><li>• Move the base station at least one metre away from any electrical appliances</li></ul>
<ul style="list-style-type: none"><li>• <b>SEARCHING...</b> is displayed on handset and  icon is blinking!</li></ul>	<ul style="list-style-type: none"><li>• Move closer to the base station</li><li>• Reset your unit and restart the handset registration</li></ul>
<ul style="list-style-type: none"><li>• Caller number is not displayed!</li></ul>	<ul style="list-style-type: none"><li>• Check your subscription with your network operator</li></ul>

## Welcome to Philips!

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

## Need help?

### User Manual

Refer to the User Manual that came with your new phone.

### Online help

[www.philips.com/support](http://www.philips.com/support)

© 2008 Koninklijke Philips Electronics N.V.

All rights reserved.

Reproduction in whole or in part is prohibited without the written consent of the copyright owner.

Document number: 69239AZ(0) (GB)



# Quick start guide

- 1 Connect
- 2 Install
- 3 Enjoy

# PHILIPS

# What's in the box

 


Handset



Base station for XL660


OR



XL665



 
Battery door




2 AAA rechargeable  
NiMH batteries



 Power supply



Line cord\*

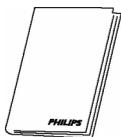

User manual



Guarantee



Quick Start Guide

\*You may find in the box the line adaptor delivered separately from the line cable. **In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.**



In multihandset packs, you will find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.

**WARNING** Always use the cables and batteries that came with your phone.

## 1 Connect

Connect the base station

1. Place the base station in a central location near the telephone line socket and electricity socket.

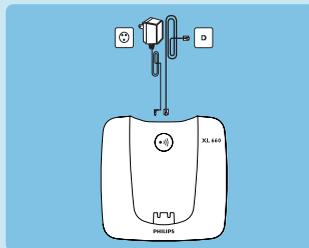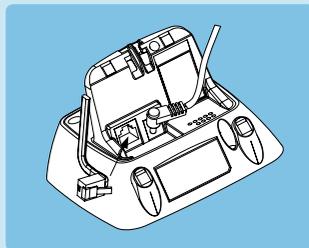


2. Connect the line cord and the power cable to their corresponding connectors at the back of the base station.
3. Connect the other end of the line cord and power cable to their respective sockets.


## 2 Install

Insert rechargeable batteries and charge

Remove the insulation foil

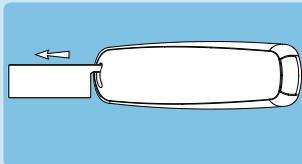

Charge handset for 24 hours

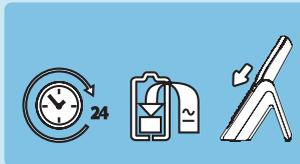

Configure your phone (if necessary)

After installing the batteries and charging your phone for a few minutes, your phone displays a Welcome message in various languages:

1. Press **OK**. Press or to select your country.
2. Press **OK** to confirm your selection.
3. Enter the current date and time (hh:mm MM/DD/YY) and press **OK** to confirm.

Your phone is now ready for use.

## 3 Enjoy

Make a call

Dial the number (maximum 24 digits) and press key.

OR

Press key to take the line and dial the number (maximum 24 digits).

Answer a call

When the phone rings, press key.

End a call

To end a conversation, press key.

Adjust earpiece volume

During a call, press or to select from **LEVEL 1** to **LEVEL 5**.

Set the ring melody

1. Press **MENU**.
2. Select **RING TONES > CHOICE**. Press **OK**.
3. Press or to your desired melody. Press **OK**.

The melody is set.

Store a contact in the phonebook

1. Press .
2. Press **OPTION**. Select **ADD**. Press **OK**.
3. Enter the name of the contact (maximum 14 characters). Press **OK**.

4. Enter the number (maximum 24 digits). Press **SAVE**.

Your new record is saved.

Access the phonebook

1. Press in idle mode and press or to browse the phonebook.