

Quick Start



Thanks for buying **Philips AJ3915 CD clock radio**.
Our **Quick Start** guides you through just some of the features on the set.
Please read our instruction booklet to really rise & shine!




Printed in China

JH-0710



PHILIPS

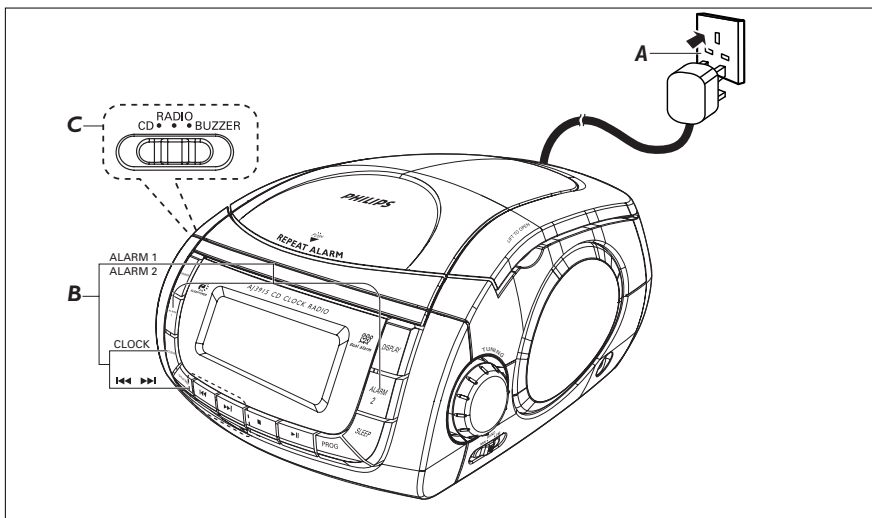

CD playback feature:

This CD clock radio can play only audio discs including CD-R (CD-recordable), CD-RW (CD-rewritable).

1. Press **POWER** to switch on from standby.
2. Select CD source by pushing **CD•RADIO•BUZZER** to **CD**.
3. Lift the CD door to open.
4. Insert a CD with printed side facing up, and close the CD door.
5. Press **▶▶** to start playback.
6. To stop playback, press **■**.

ENGLISH

Quick start as easy as ABC!

Step A

- Plug to the wall outlet.

Step B

Setting the Clock/Alarm time

1. Press and hold **CLOCK** or **ALARM 1/ALARM 2** until clock digits for hour flash.
2. Press repeatedly, or hold down **◀◀ / ▶▶** to adjust the hours.
3. Press **CLOCK** or **ALARM 1/ALARM 2** to confirm the hour setting, and the clock digits for minute flash.
4. Press repeatedly, or hold down **◀◀ / ▶▶** to adjust the minutes.
5. Press **CLOCK** or corresponding **ALARM 1/ALARM 2** to confirm the minute setting.
 - Corresponding ALM1 or ALM2 is displayed when alarm time is set to activate.

Step C

Selecting the Alarm mode

1. Press **POWER** to switch to standby.
2. Select your choice of alarm mode: either CD, Radio, or Buzzer by using the **CD•RADIO•BUZZER** slider:
 - At the set alarm time, the CD or Radio or Buzzer will switch on automatically.

3 ways to switch off the alarm

- Press once corresponding **ALARM 1** or **ALARM 2**, or press **POWER** (ALM1 or ALM2 is still displayed).
- Press **REPEAT ALARM** (ALM1 or ALM2 is still displayed, yet flashing).
- Press repeatedly corresponding **ALARM 1** or **ALARM 2** until ALM1 or ALM2 disappears.