

Quick Start Guide




Step A *Connect*

Step B *Setup*


Step C *Enjoy*

What's in the Box?


You should find these items upon opening the box.

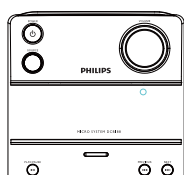


Main unit

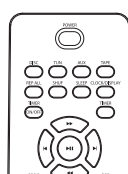


Remote Control

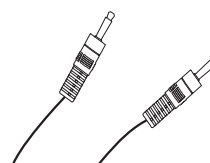

1 x MP3 link cable

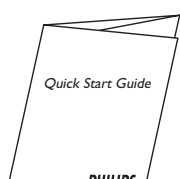

Quick Start Guide

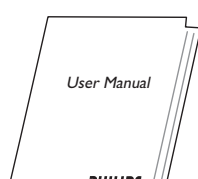

User Manual

PHILIPS


Step A *Connect*

1

Fully insert the plugs from the speakers into the speaker sockets on the back of the main unit.

2

Connect the AC power cord to the power outlet.

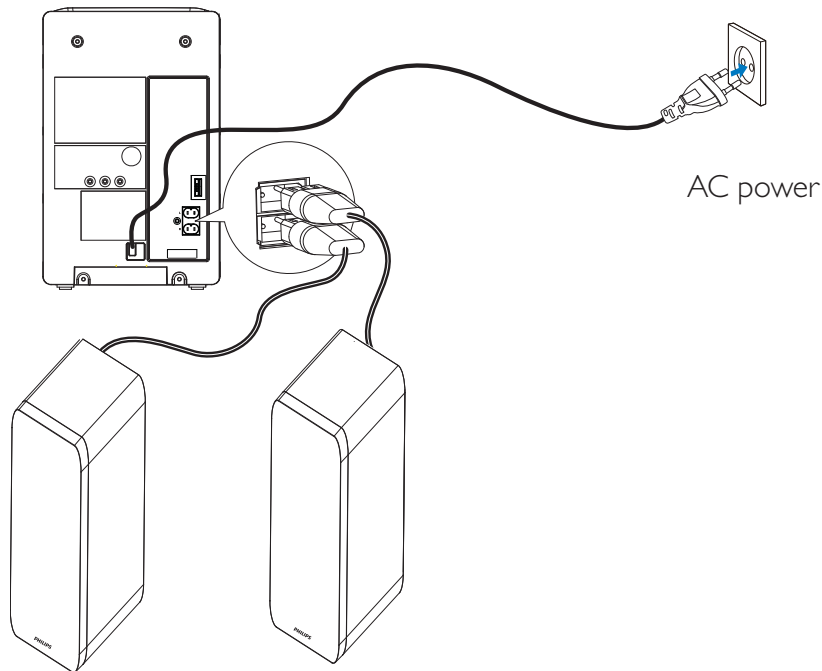

Step B *Setup*

Set clock

1

In the standby mode, press and hold **CLOCK/DISPLAY** to activate the clock setting mode.
→ The 12 hour or 24 hour format is displayed.

2

Press **PROG** repeatedly to select 12 hour or 24 hour format.

3

Press **CLOCK/DISPLAY** to confirm.
→ The hour digits are displayed and begin to blink.

4

Press **◀▶** to set the hour.

5


Press **CLOCK/DISPLAY** to confirm.
→ The minute digits are displayed and begin to blink.

6

Press **◀▶** to set the minute.

7

Press **CLOCK/DISPLAY** to confirm.

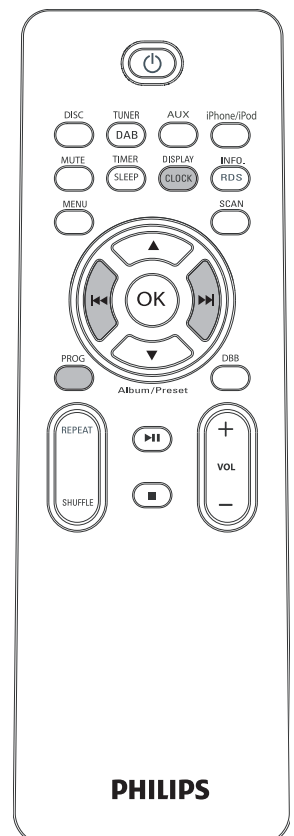

Step C *Enjoy*

Play disc

1

Press **DISC** to select the disc source.

2

Lift the disc door on the top of the unit.

3


Insert a disc with the printed side facing up, then close the disc tray.

4

Press **▶||** to start play.

5

To stop play, press **■**.

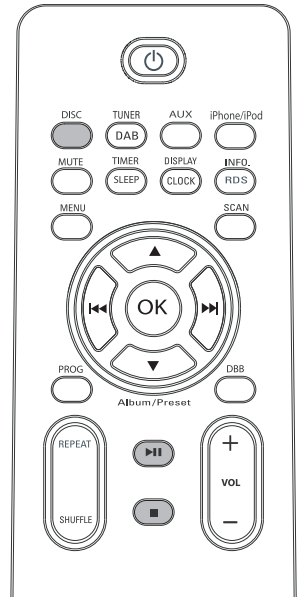

Listen to radio

1


Press **TUN** repeatedly to select FM.

2

Press **SCAN**.

3

Repeat step 2 to tune to more stations.

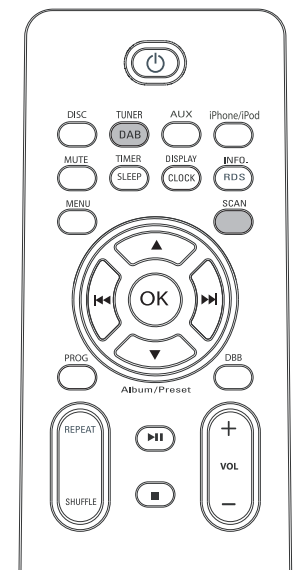

Play from iPod/iPhone

1

Place the iPod/iPhone in the dock.
➔ The unit switches to iPod/iPhone mode automatically.

2

To pause play, press **▶||**.

2

To resume play, press **▶||**.

Listen to Digital Audio Broadcasts (DAB)

1

Press **TUNER** repeatedly to select DAB.

2

Press **SCAN**.



Tip

Detailed play features and additional functions are described in the supplied user manual.

© 2011 Koninklijke Philips Electronics N.V.
All rights reserved.

<http://www.philips.com>

