

Quick Start Guide



DEMO MODE

To turn ON Press **BAND / ■** button

To turn OFF Press **BAND / ■** button again








Step A *Connect*

Step B *Setup*

Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

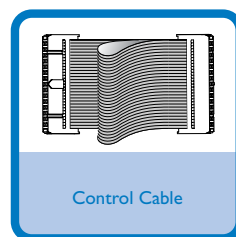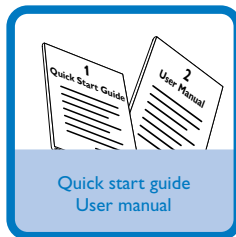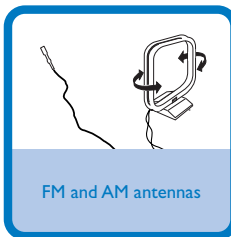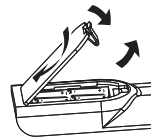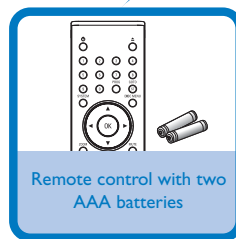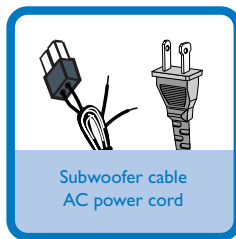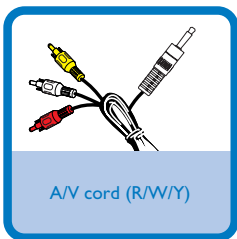


Step B Setup

Setting the clock

IMPORTANT!

– To set clock in the Eco Power mode, press and hold **STANDBY-ON/ECO POWER** on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

- 1 In standby mode, press and hold **CLOCK** on the remote.
- 2 When the hour digits flash, turn **VOLUME+/-** on the system or press **VOLUME+/-** on the remote to set the hours.
- 3 Press **CLOCK** again and the minute digits flash. Then turn **VOLUME+/-** on the system or press **VOLUME+/-** on the remote to set the minutes.
- 4 Press **CLOCK** again to confirm the time setting.


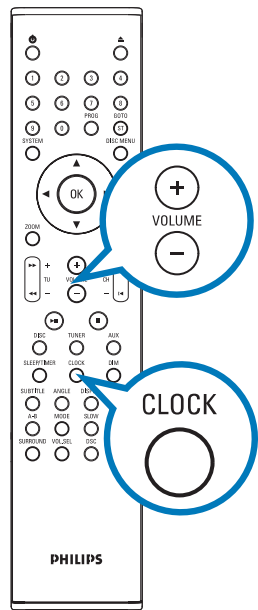


Setting DVD menu options

IMPORTANT!

If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see the user manual for proper progressive scan setup or deactivate the progressive scan feature as below:

- 1) Turn off your TV progressive scan mode or turn on to interlaced mode.
- 2) Press **SYSTEM** on the remote to exit the system menu and then **DISC** and "1" to exit progressive scan.

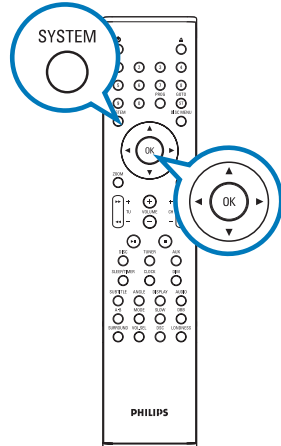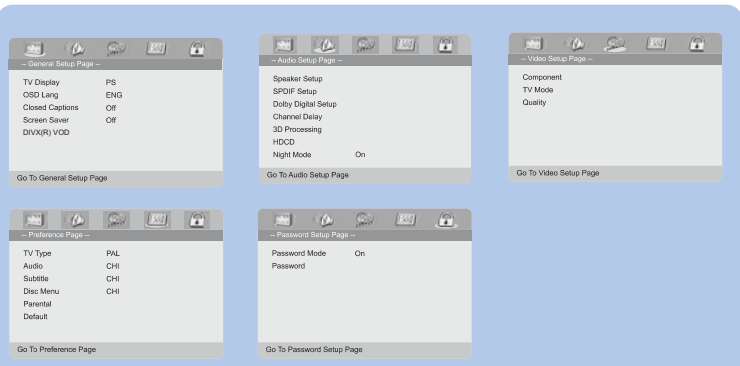

Tip

See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.

