


Quick start guide

1 Turn on

- 1 Connect the AC power adaptor to the player and to the AC outlet.
- 2 Slide the **POWER** switch to ON to switch on the player.

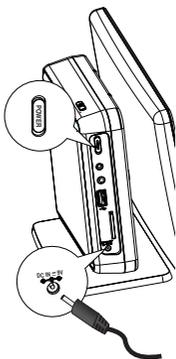

Note:


You can:

- Press **RELEASE PANEL** on the right side of the player to slide the panel up.
- Press the top of the panel to slide the panel down.
- Adjust the viewing angle as shown.



2 Set clock


- 1 Press **Settings** for the setup menu.
- 2 Select **Clock** and press **▼**.
- 3 Select **Set Time** and press **▶▶** to set time.
- 4 Press **OK** to confirm.
- 5 Select **Set Date** and press **▶▶** to set date.
- 6 Press **OK** to confirm.

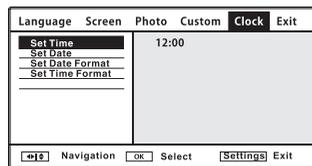

Note:

– You need set clock again if you disconnect the power adaptor from the AC outlet.

3 Enjoy (Disc operation)

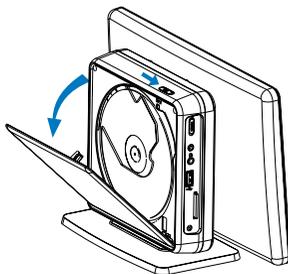


- 1 Push **OPEN DVD DOOR** to open the disc compartment.

- 2 Remove the protective card (if any) and load a disc with the label side facing up.
- 3 Close the disc compartment.
- 4 Press **Home** to select switch to DVD mode. → Playback will start automatically. If not, press **▶▶**.
- 5 To stop playback, press **■**.

4 Enjoy (USB/SD)

- 1 Insert a USB or SD card into the USB or SD slot on the player.
- 2 Press **Home** to select switch to SD or USB mode.
- 3 Play video/audio/picture files stored in the USB or SD card.

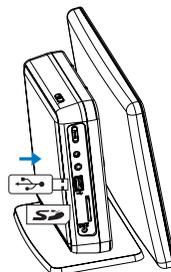


5 Enjoy (AV OUT)

Connecting additional equipment (TV for example)

- 1 Connect the AV OUT socket on the player to the video and audio sockets on a TV as shown directly.

- 2 Switch on the TV and set to the correct video-in channel. → You can consult the owner's manual of your TV. (If your TV does not have Audio and Video inputs, you will need to purchase a RF modulator. Please consult your dealer.)

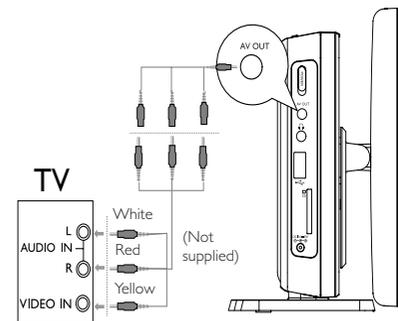

6 Display clock

When watching DVD, listening to music or viewing photos, press **▶▶**; the set will enter CLOCK mode automatically in about 30 seconds.

