




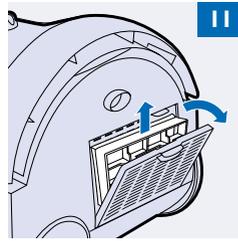
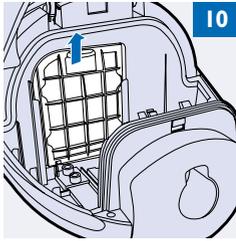
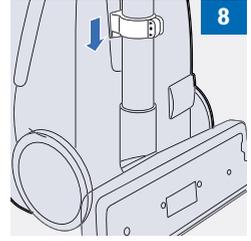
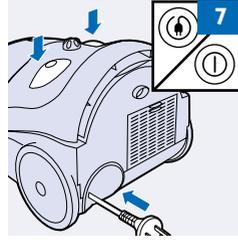
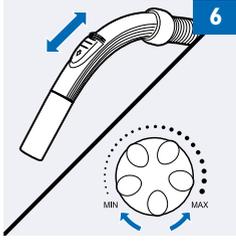
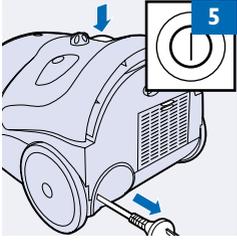


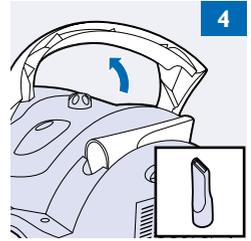

**PHILIPS**

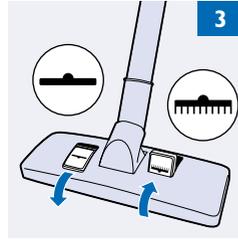

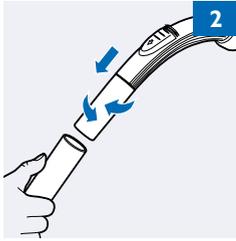

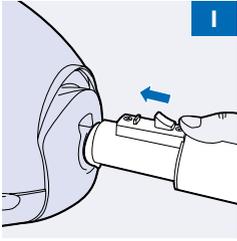

**ENGLISH 6**

한국어 9

### Important

Read these instructions for use carefully and look at the illustrations before using the appliance.

- Only use Philips double-layer paper dustbags (FC 8046) or the cotton dustbag provided (specific types only).
- Check if the dustbag has been placed correctly.
- Never suck up water or any other liquid. Never suck up flammable substances and do not suck up ashes until they are cold.
- Only allow children to operate the vacuum cleaner under close supervision.
- Do not point the hose at the eyes or ears nor put it in your mouth when the vacuum cleaner is switched on and the hose is connected to the vacuum cleaner.
- When the vacuum cleaner is used to suck up fine dust, the pores of the dustbag may become clogged, causing the passage of air through the dustbag to become obstructed. As a result, the dustbag-full indicator will indicate that the dustbag needs to be replaced, even though the dustbag is not full at all.
- Never use the appliance without the motor protection filter. This could damage the motor and shorten the life of the appliance.

### Connecting accessories

- 1 Connect the hose to the appliance by firmly pushing the side with the connector switch into the appliance (fig. 1).
- 2 Connect the tube to the handgrip by inserting the narrow section into the wider section while turning it a little (fig. 2).
- The combi nozzle can be used on carpets (with the brush strip folded in) and on hard floors (with the brush strip folded out).
- 3 Connect the combi nozzle to the tube.
- 4 To clean hard floors, push the appropriate rocker switch on top of the combi nozzle with your foot to make the brush strip come out of the nozzle housing (fig. 3).
- 5 To clean carpets, push the appropriate rocker switch to make the brush strip disappear into the combi nozzle housing.
- 6 Lift the handle on the vacuum cleaner to gain access to the accessory storage compartment.
- 7 The crevice nozzle can be connected to the tube or to the handgrip (fig. 4).

### Using the appliance

#### Vacuum cleaning

- 1 Pull the cord out of the appliance and put the mains plug in the wall socket.
- 2 Switch the appliance on by pushing the on/off button on top of the appliance with your foot (fig. 5).

#### Adjusting suction power

You can adjust the suction power while vacuum cleaning.

- 1 Adjust the suction power by means of the slide on the handgrip (fig. 6).
- 2 Adjust the suction power by means of the suction power control knob (specific types only).

## Storage

- 1** Switch the appliance off.
- 2** Remove the mains plug from the wall socket.
- 3** Rewind the mains cord by pushing the cord rewind button with your foot (fig. 7).
- 4** Put the appliance in upright position and attach the lower tube to the appliance by means of the clip (fig. 8).

## Replacement

### Dustbags

Replace the dustbag as soon as the dustbag-full indicator changes colour:

- 1** Switch the appliance off.
- 2** Open the cover.
- 3** Push the dustbag holder backwards (fig. 9).
- 4** Remove the full dustbag by pulling the lug on the dustbag front upwards.  
Throw the full paper dustbag in the dustbin.  
The cotton dustbag can be emptied and re-used.

▶ *To empty the cotton dustbag:*

- Hold the dustbag over a dustbin.
- Remove the clip by sliding it off the dustbag sideways.
- Shake out the contents.

- 5** Insert the dustbag into the dustbag compartment by sliding the plastic or cardboard front of the dustbag into the grooves of the dustbag holder. Press the front down as far as possible.
- 6** Pull the dustbag holder forwards (you will hear a click).  
You cannot close the cover if no dustbag has been inserted.

### Filters

This appliance is equipped with a motor protection filter:

- 1** Replace the motor protection filter when you insert the first of a new set of dustbags (fig. 10).
- 2** Insert the filter into the appliance with the white side facing outwards.
- ▶ The rear end of the vacuum cleaner is fitted with an exhaust filter that removes small particles from the exhaust air.
- 3** Open the exhaust filter grille at the rear of the appliance (fig. 11).
- 4** Remove the filter holder, replace the filter and put the filter holder back into the appliance. Make sure the white side of the filter is facing outwards.

### The mains cord

If the mains cord of this appliance is damaged, it may only be replaced by Philips or service centre authorised by Philips, as repair requires special tools and/or parts.

### Ordering dustbags and filters

Philips double-layer dustbags are available under type number FC8046.

New motor protection and exhaust filters are provided free of charge with each new set of dustbags.

If you have any difficulties obtaining dustbags, filters or other accessories for this appliance, please contact the Philips Customer Care Centre in your country or consult the worldwide guarantee leaflet.

### Guarantee & service

If you need information or if you have a problem, please visit the Philips Web site at [www.philips.com](http://www.philips.com) or contact the Philips Customer Care Centre in your country (you will find its phone number in the worldwide guarantee leaflet). If there is no Customer Care Centre in your country, turn to your local Philips dealer or contact the Service Department of Philips Domestic Appliances and Personal Care BV.

### Solving problems

► The suction power of the appliance is insufficient:

- 1 Check if the dustbag needs to be replaced.
- 2 Turn the suction power control knob to a higher setting (specific types only).
- 3 Close the slide on the handgrip.
- 4 Check if the nozzle, tube or hose is blocked up.

To remove the obstruction, disconnect the blocked-up item and connect it (as far as possible) the other way round. Switch the vacuum cleaner on to force the air through the blocked-up item in opposite direction.

## 주의사항

본 진공 청소기를 사용하기 전에 반드시 본 사용설명서의 지침을 주의 깊게 읽으신 후, 나중에 참조할 수 있도록 잘 보관하여 주시기 바랍니다.

- ▶ 본 제품에는 반드시 필립스 2중 종이먼지봉투 (FC8046) 또는 먼지봉투 (특정모델만 해당)를 사용하여 주시기 바랍니다.
- ▶ 먼지봉투가 올바르게 조립되어 있는지 확인하십시오.
- ▶ 물이나 다른 용액을 절대 흡입하지 마십시오. 가연성 물질을 절대 흡입하지 말고 타고 남은 재는 완전히 꺼지기 전까지 절대 흡입하지 마십시오.
- ▶ 어린이가 진공청소기를 사용할 때는 반드시 감독하십시오.
- ▶ 진공청소기가 켜져있고 호스가 진공청소기에 연결되어 있을 때는 호스가 눈이나 귀를 향하게 하거나 호스를 입에 갖다대지 마십시오.
- ▶ 진공청소기로 미세먼지 (분말종류)를 흡입하면 먼지봉투의 기공들이 막혀서 흡입된 공기가 청소기 밖으로 빠져나가지 못하는 경우가 발생하게 됩니다. 이런 경우 먼지봉투가 규정용량까지 가득 차지 않아도 먼지봉투 교환표시기가 표시되는 경우가 있습니다. 이때는 먼지봉투를 교환하십시오.
- ▶ 모터 보호 필터 없이는 절대로 본 제품을 사용하지 마십시오. 모터보호 필터가 없는 상태에서 제품을 사용할 경우 모터에 손상을 줄 수 있을 뿐만 아니라 청소기의 수명이 단축될 수도 있습니다.

## 액세서리 연결방법

- 1 연결 스위치를 누른 상태에서 호스를 청소기에 완전히 끼우십시오.
- 2 연장관을 손잡이에 연결하려면, 호스 구멍이 좁은 것을 호스 구멍이 넓은 부위에 넣으면서 시계방향으로 돌리십시오.
- ▶ 콤비 노즐은 카펫 청소 (솔이 들어간 상태)와 마루바닥 청소 (솔이 나온 상태) 모두 사용이 가능합니다.
- 3 콤비 노즐을 연장관에 연결하십시오.
- 4 콤비 노즐위에 있는 전환 스위치를 발로 누르면 마루 바닥용 청소 솔이 나옵니다.
- 5 전환 스위치를 다시 누르면 청소 솔이 노즐 속으로 다시 들어갑니다. (카펫 청소용)
- 6 청소기 몸체의 손잡이를 들어 올려 액세서리 보관함을 열으십시오.
- 7 틈새노즐을 연장관 또는 손잡이에 직접 연결합니다. 시오.

## 청소기의 사용

### 청소기 작동방법

- 1 청소기에서 전원코드를 잡아 당긴 후 벽 콘센트에 전원플러그를 연결하십시오.
- 2 청소기 몸체 위에 있는 전원스위치를 발로 눌러서 켜십시오.

### 흡입력 조절

청소중에도 흡입력을 조절할 수 있습니다.

- 1 손잡이의 슬라이드 스위치로 흡입력을 맞출 수도 있습니다.
- 2 흡입력 조절 스위치를 이용하여 흡입력을 조절할 수도 있습니다 (특정모델만 해당)

## 보관

- 1 전원을 끄십시오.
- 2 전원플러그를 벽 콘센트에서 뽑으십시오.
- 3 코드 감기 버튼을 눌러서 전원코드를 감아주십시오.
- 4 청소기를 똑바로 세운 뒤, 노즐 윗부분의 연장관 길이를 이용하여 청소기의 흡에 걸어 놓으십시오.

## 교환

### 먼지봉투

“먼지봉투 교환 표시등”의 색상이 변하면, 즉시 먼지봉투를 교환하십시오.

- 1 전원을 끄십시오.
- 2 뚜껑을 열으십시오.
- 3 먼지봉투 홀더를 뒤로 젖히십시오.
- 4 먼지봉투의 앞부분을 잡아당겨 다 사용한 먼지봉투를 교환하십시오.

다 사용한 봉투는 버리시기 바랍니다.

면 먼지봉투의 경우는 먼지를 비운 후 재사용이 가능합니다 (특정모델만 해당).

- ▶ 면먼지봉투를 비우려면
    - 먼지봉투를 잡고 꺼내십시오.
    - 먼지봉투를 옆으로 잡아당겨 클립을 제거하십시오
    - 내용물만 버리십시오.
  - 5 새 먼지봉투의 앞부분을 잡고 먼지봉투 홀더의 양쪽 홈 사이에 밀어 넣으십시오. 최대한 깊숙히 먼지봉투를 밀어 넣으십시오.
  - 6 클릭 소리가 날 때까지 먼지봉투 홀더를 앞으로 당기십시오.
- 먼지봉투가 들어있지 않으면 뚜껑이 닫히지 않습니다.

### 필터

이 청소기에는 모터 보호 필터가 내장되어 있습니다.

- 1 새 먼지봉투 세트를 처음 사용하실 때, 혹은 일년에 한번씩은 모터 보호 필터를 교환하십시오.
  - 2 필터의 흰색면이 위로 향하도록 끼워 넣으십시오.
- ▶ 청소기의 뒷면에 있는 공기 배출구에서 나오는 대부분의 미세한 입자를 걸러내기 위해 뒷면에 필터가 장착되어 있습니다.
- 3 청소기 뒷면에 있는 토출 필터 그릴을 여십시오.
  - 4 필터 홀더를 분리하신 후, 필터를 교체한 다음에 필터 홀더를 원위치 시키십시오. 필터의 흰색면이 위로 향하도록 끼워 넣으십시오.

## 전원 코드

본 제품의 전원코드가 손상되어 있을 경우에는 특수 공구 및 부품이 필요하므로 반드시 필립스 서비스 센터로 문의하여 교체하십시오.

## 먼지봉투 및 필터 주문

필립스 2중 종이 먼지 봉투 FC8046을 사용하십시오.

새로운 모터 보호 필터와 토출 필터는 새로운 먼지봉투 세트 구입시에 함께 공급됩니다.

먼지봉투, 필터 또는 다른 액세서리를 주문하시려면 필립스 고객센터나 전국서비스센터에 문의하십시오. (주)필립스전자 (02)709-1200, 필립스고객상담실 (080)600-6600 (수신자 부담).

## 품질보증 및 A/S

보다 자세한 정보가 필요하시거나, 사용상의 문제가 있을 경우에는 필립스 전자 홈페이지 ([www.philips.co.kr](http://www.philips.co.kr))를 방문하시거나 필립스 고객센터로 문의하십시오. 전국 서비스센터 안내는 제품 보증서를 참조하십시오. \* (주)필립스 전자: (02)709-1200 \* 고객센터: (080)600-6600 (수신자부담)

## 문제 해결방법

### ▶ 흡입력이 약할때

- 1 먼지봉투를 교체할 시기가 되었는지 확인하십시오.
- 2 흡입력 조절기를 높게 설정하십시오 (일부모델만 해당).
- 3 손잡이에 있는 흡입력 조절 슬라이드를 닫으십시오.
- 4 노즐, 연장관 또는 호스가 막히지 않았는지 확인하십시오.  
이물질을 제거하기 위해서는, 막혀 있는 연장관 또는 호스를 떼어내서 반대방향으로 청소기에 결합시킨 후, 청소기를 작동시키면 이물질이 제거됩니다.





