


*Cucina*


HD2615, HD2613, HD2611




**PHILIPS**

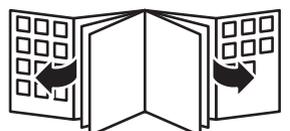


I

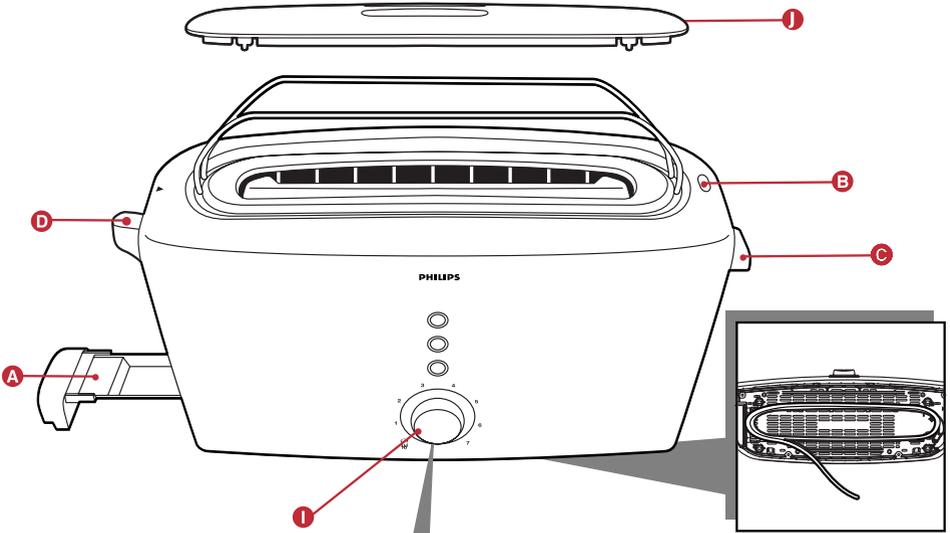


HD 2615

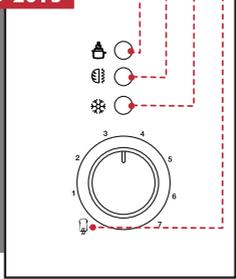

HD 2613

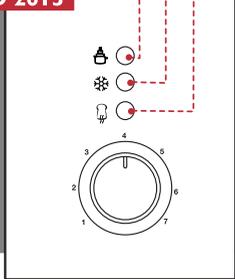

HD 2611

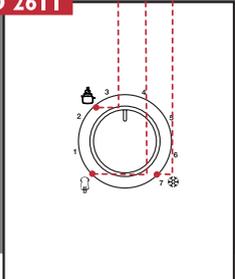



HD2615, HD2613, HD2611

**ENGLISH 6**

한국어 II

### General description

- A** Crumb tray
- B** Stop button
- C** Toasting lever
- D** Warming rack lever
- E** Warming button (HD2613, HD2615)  
Warming setting (HD2611)
- F** Reheat button (HD2613)  
Reheat setting (HD2611, HD2615)
- G** Defrost button (HD2613, HD2615)  
Defrost setting (HD2611)
- H** One-side toasting button (HD2615)
- I** Browning control
- J** Dustlid

### Important

Read these instructions for use carefully before using the appliance and save them for future reference.

- Check if the voltage indicated on the bottom of the appliance corresponds to the local mains voltage before you connect the appliance.
- Only connect the appliance to an earthed wall socket.
- If the mains cord is damaged, it must be replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- Do not immerse the appliance or the mains cord in water or other liquids.
- Always unplug the appliance after use.
- Keep the appliance out of the reach of children.
- Do not let the mains cord hang over the edge of the table or worktop and keep the cord away from hot surfaces.
- Do not let the appliance operate unattended. Do not operate it under or near curtains or other flammable materials or under wall cabinets, as bread may burn.
- Avoid touching the metal parts of the toaster as they become very hot during toasting. Only touch the controls and lift the appliance by its plastic body.
- The toaster is intended for household use only and may only be used indoors.
- To avoid the risk of fire, frequently remove crumbs from the crumb tray. Make sure the crumb tray is correctly placed.
- Immediately unplug the toaster if fire or smoke is observed.
- If a slice of bread gets stuck inside the toaster, unplug the appliance and allow it to cool down before trying to remove the bread. Do not use a knife or a sharp tool, as these may cause damage to the heating elements.
- The appliance is only meant for toasting bread. Do not put any other ingredients in the appliance, as this may lead to a hazardous situation.
- Oversized foods and metal foil packages must not be inserted into the toaster, as this may cause fire or electric shock.
- Do not place the dust cover (some types only) on top of the toaster when the appliance is switched on or when it is still hot, as this could lead to damage (fig. 17-18).
- Do not place the toaster on a hot surface.
- The warming rack is only meant for warming up rolls or croissants. Do not put any other ingredients on the warming rack, as this may lead to a hazardous situation.

## Before first use

Remove any stickers and wipe the body of the toaster with a damp cloth.

Before using the appliance for the first time, we advise you to let the appliance complete a few toasting cycles without slices of bread on the highest browning setting in a properly ventilated room. This will burn off any dust that may have accumulated on the heating elements and will prevent unpleasant smells when toasting bread.

## Using the appliance

- 1 Put the appliance on a stable and flat surface, away from curtains and other combustible materials. Put the plug in the wall socket.
- 2 You can adjust the length of the cord by winding part of it round the brackets in the base of the appliance (fig. 2).

## Toasting bread

---

Never let the toaster operate unattended.

- 1 Put one or two slices of bread in the toaster (fig. 3).
- 2 Select the desired browning setting (fig. 4).  
Select a low setting (1-2) for lightly toasted bread and a high setting for a dark browning result (5-7).
- 3 Push the toasting lever down to switch the appliance on (fig. 5).
  - The stop button lights up.
  - The toasting lever will only stay down if the appliance has been connected to the mains.

The metal parts of the toaster will get hot during toasting. Be careful not to touch them.

- 4 When the toast is ready, it pops up and the toaster switches off.
  - The toaster will switch off automatically. You can stop the toasting process and pop the bread up at any time by pressing the STOP button on top of the toaster (fig. 6).
  - To remove smaller items, you can move the toasting lever upwards a little further.
  - If bread gets stuck inside the toaster, remove the plug from the wall socket, let the appliance cool down completely and carefully remove the bread from the toaster. Do not use a knife or another sharp metal tool to do this and do not touch the metal internal parts of the toaster.

## Toasting frozen bread

---

Type HD2611:

- 1 Follow the instructions in the 'Toasting bread' section, but turn the browning control to setting ❄️ and then push the toasting lever down (fig. 7).

Types HD2613 and HD2615:

- 2 Follow the instructions in the 'Toasting bread' section, but push the toasting lever down and then press the defrost button ❄️ (fig. 8).

The button lights up.

Note: toasting frozen bread will take longer to toast than defrosted bread.

## Reheating toasted bread

---

Types HD2611 and HD2615:

- 1 Follow the instructions in the 'Toasting bread' section, but turn the browning control to setting  and then push the toasting lever down (fig. 9).

Type HD2613:

- 2 Follow the instructions in the 'Toasting bread' section, but push the toasting lever down and then press the reheat button  (fig. 10).

The button lights up

## Toasting one side only (type HD2615 only)

---

Ideal for toasting bagels and baguettes.

- 1 Half the bagel or baguette lengthwise and shorten the baguette to a length of max. 13 cm.
- 2 Put the bread in the toaster with the side to be toasted facing the front of the toaster (fig. 11).
- 3 Follow the instructions in the 'Toasting bread' section, but push the toasting lever down and then press the one-side toasting button  (fig. 12).

The button lights up.

Before every new one-side toasting cycle, you have to push the toasting lever down and press the one-side toasting button  again.

You can also use this function in combination with the setting for toasting frozen bread.

## Heating up rolls and croissants

---

- 1 Push the warming rack lever down to unfold the warming rack (fig. 13).

Never put the rolls to be heated up directly on top of the toaster without having unfolded the warming rack to avoid damaging the toaster.

- 2 Put the rolls or croissants on top of the warming rack.

Do not heat up more than 2 items at a time.

Types HD2613 and HD2615:

- 3 Push the toasting lever down and press the warming button . The button lights up (fig. 14). If you want to heat the rolls or croissants on both sides, turn them after the toaster has shut itself off and switch the toaster on again by pushing the toasting lever down and then pressing the warming button .

Before every new warming cycle, you have to push the toasting lever down and press the warming button again.

Type HD2611:

- 4 Turn the browning control to setting  and push the toasting lever down (fig. 15).

If you want to heat the rolls or croissants on both sides, turn them after the toaster has shut itself off. Leave the browning control set to the warming setting  and switch the toaster on again by pushing the toasting lever down.

## Cleaning

- 1 Unplug the appliance.
- 2 Let the appliance cool down.
- 3 Clean the appliance with a damp cloth. Do not use abrasive cleaning agents.

Never immerse the appliance in water.

- 4 Remove crumbs from the appliance by sliding the crumb tray out of the appliance (fig. 16). Do not hold the appliance upside down and do not shake it to remove the crumbs.

## Guarantee & service

If you need information or if you have a problem, please visit the Philips website at [www.philips.com](http://www.philips.com) or contact the Philips Customer Care Centre in your country (you will find its phone number in the worldwide guarantee leaflet). If there is no Customer Care Centre in your country, turn to your local Philips dealer or contact the Service Department of Philips Domestic Appliances and Personal Care BV.

## Troubleshooting

If you are unable to solve the problem by means of this troubleshooting guide, contact the Customer Care Centre in your country (see chapter 'Guarantee & service').

Problem	Solution
1. The toaster does not work.	Check if the plug has been properly inserted into the wall socket.  If the toaster still does not work, take it to a service centre authorised by Philips for examination.
2. Bread gets stuck in the appliance.	Unplug the appliance and let it cool down. Carefully remove the slice or slices from the toaster. Take care not to damage the heating elements while removing the slice or slices of bread. Never use a metal object for this purpose.
3. The toast is too dark/too light.	Check the browning setting selected for toasting. Select a lower setting next time if your toast is too dark and a higher setting if your toast is too light.
4. Smoke comes out of the toaster.	You have chosen a too high setting for the type of bread inserted. Push the stop button to stop the toasting process.
5. The mains cord is damaged.	If the mains cord of this appliance is damaged, it must always be replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
6. One side of the bread has not been toasted.	You have pressed the one-side toasting button  (type HD2615 only). That is why only one side of the bread has been toasted. To toast the other side as well, put the bread in the slot with the untoasted side facing the front of the toaster and press the one-side toasting button again.
7. I cannot change the browning level when I use the warming function.	This is normal, for the toaster has a fixed temperature setting for warming up rolls and croissants, which guarantees a perfect end result.
8. Only one side of my roll or croissant is warm.	Turn your roll or croissant over and warm it up again. Follow the instructions in 'Heating up rolls or croissants'.

## Frequently asked questions

Question	Answer
1. Do all kinds of bread fit into the toaster?	Yes, almost every kind of bread can be toasted in this toaster. It is even possible to toast a baguette by making use of the one-side toasting function (type HD2615 only). Bread that is too thick to fit in the toaster can be cut lengthwise to make it fit into the toaster slot.
2. Can I toast rolls or bagels?	Rolls can be heated up on the warming rack, see chapter 'Using the appliance', section 'Heating up rolls and croissants'. Bagels can be toasted by halving them and using the one-side toasting function (type HD2615 only).
3. Is it possible to toast only one side of the bread?	Only type HD2615 has a one-side toasting function. See chapter 'Using the appliance', section 'Toasting one side only'.
4. Can I use the toaster to reheat toasted bread?	Yes, see chapter 'Using the appliance', section 'Reheating toasted bread'.
5. Can I use the toaster to make toasted sandwiches (e.g. with cheese)?	No, this toaster is not suitable for toasting sandwiches.
6. Can I interrupt the toasting process?	Yes, you can stop the toasting process and pop the bread up at any time by pressing the STOP button.
7. Is it possible to change the browning level while the toaster is working?	Yes, the toasting time will automatically be adjusted when you change the browning setting.

## 제품 설명

- A** 빵가루 받침대
- B** 취소버튼
- C** 토스트 레버
- D** 데우기 받침대 레버
- E** 데우기 버튼(HD2613, HD2615)  
데우기 세팅(HD2611)
- F** 재가열 버튼(HD2613)  
재가열 세팅(HD2611, HD2615)
- G** 해동버튼(HD2613, HD2615)  
해동세팅(HD2611)
- H** 한면굽기 버튼(HD2615)
- I** 굽기정도 조절
- J** 먼지방지용 덮개

## 주의사항

제품을 사용하기 전에 본 사용설명서를 주의 깊게 읽고 나중에 참조할 수 있도록 잘 보관하십시오.

- ▶ 제품을 벽 콘센트에 연결하기전에 제품에 표시되어 있는 전압이 사용지역의 전압과 일치하는지 반드시 확인하십시오.
- ▶ 반드시 접지된 벽 콘센트에만 전원 플러그를 끼우십시오.
- ▶ 전원코드가 손상되었을 경우, 반드시 필립스 서비스센터 또는 필립스 서비스 지정점에서 교체하십시오.
- ▶ 본체를 물에 담그지 마시고, 전원코드를 물 또는 기타 액체에 닿지않게 하십시오.
- ▶ 사용후에는 반드시 토스터의 전원을 뽑아 두십시오.
- ▶ 어린이들의 손이 닿지 않는 장소에 제품을 보관하십시오.
- ▶ 전원코드가 테이블 모서리나, 조리대의 가장자리에 매달려 있지 않게 하시고 뜨거운 것에 닿지 않게 하십시오.
- ▶ 제품이 작동중일때는 항상 주의하십시오. 커튼이나 가연성 물질이 있는 곳에서는 토스터를 사용하지 마시고, 벽장아래에서는 사용하지 마십시오.
- ▶ 토스터가 작동중에 금속부분은 매우 뜨거우니 만지지 않도록 조심하십시오. 플라스틱 몸체 및 굽기조절장치와 토스터 레버만 접촉하시기 바랍니다.
- ▶ 토스터는 가정용이며 실내에서 사용하십시오.
- ▶ 화재등을 예방하기 위하여, 주기적으로 빵가루받이에서 빵가루를 제거해 주시고, 빵가루 받이가 정확히 장착이 되어 있는지 확인하십시오.
- ▶ 만약, 화재나 연기가 나면 즉시 토스터의 플러그를 빼십시오.
- ▶ 만약 토스터기 안에 빵조각이 붙었을경우 전원을 빼고 빵을 꺼내기 전에 토스터기를 식혀주십시오.칼이나 다른 날카로운 물건을 사용하실경우, 가열장치에 손상을 줄 수 있습니다.
- ▶ 이 기기는 빵을 굽기위한 용도로만 사용하십시오.다른 이물질을 투입하는 경우 위험할 수 있습니다.
- ▶ 토스터에 너무 큰사이즈의 빵이나 금속성 호일은 넣지 마십시오. 이러한 것들은 화재 및 전기적 스파크를 유발할 수 있습니다.
- ▶ 토스터기가 작동중이거나 아직 뜨거운 상태일때에는 먼지덮개를 덮지 마십시오. 이는 제품의 손상 및 화재를 유발할 수 있습니다 (그림 17,18).
- ▶ 토스터기를 뜨거운 바닥에 놓지 마십시오.
- ▶ 데우기 받침대는 단지 롤빵 또는 크라상등을 데우기 위한 용도입니다. 빵 이외에 다른 음식물을 올려서 데우지 마십시오.

처음 사용하시기전

토스터기에 부착되어 있는 스티커등을 제거 해주시고, 본체를 젖은 천으로 닦아주십시오.

토스터기를 처음 사용하기 전에 빵을 넣지 않은 상태에서 가장 높은 온도로 토스터기를 작동시키기 바랍니다. 이것은 토스터기 내부에 있는 먼지 등을 태우고, 토스팅중에 발생가능한 불쾌한 냄새를 없애주는데 도움이 됩니다.

제품 사용

1 제품을 평평한 곳에 놓으시고, 커텐 등의 가연성물질과 멀리 하십시오. 토스터를 접지된 콘센트에 연결하십시오

2 장치의 바닥면 받침대 주위에 감겨있는 코드의 길이를 조절할 수 있습니다(그림 2).

빵굽기

절대 혼자 작동되도록 놔두지 마십시오.

1 토스터안에 하나 혹은 두개의 빵조각을 넣으십시오 (그림 3).

2 원하시는 굽기정도를 선택하십시오 (그림 4). 토스터를 약간만 구우시려면 낮은 단계 세팅(1-2)로 하시고 토스터를 바싹 구우시려면 높은 단계 세팅(5-7)을 선택하십시오.

3 장치가 켜지도록 토스트레버를 내려주십시오 (그림 5).  
- 정지버튼의 불이 들어올것 입니다.  
- \*\*장치가 전원이 연결되어 있는 동안은 토스터의 레버는 아래로 내려져있을 것입니다.

토스터의 금속부분은 토스터가 작동하는 동안 가열됩니다. 만지지 않도록 조심하십시오.

4 토스터굽기가 완료되면, 토스터기는 자동으로 전원이 차단됩니다.

- 2 토스터기는 자동적으로 전원이 차단됩니다. 토스터기를 작동중에 중단하시려면, 토스터기의 상단에 있는 정지버튼을 누르시면 빵이 올라오면서 작동이 중단 됩니다 (그림 6).
- 2 작은 조작을 들어올리기 위해서는 토스트레버를 들어올리면 안에 있는 빵조각이 올라옵니다.
- 2 만약 토스터기 안에서 빵이 들러붙게되면 전원플러그를 뽑아 기기를 즉시 식히고 토스터기 안에서 빵을 조심스럽게 꺼내십시오. 칼이나 다른 어떠한 종류의 금속기기를 이용하시면 안되며 토스터기안의 금속부위를 절대로 만지지 마십시오.

얼린빵을 구울때

HD 2611:

1 "빵굽기" 설명을 참조하십시오. 빵굽기 조절세팅을  에 맞추고, 토스트레버를 아래로 내리십시오 (그림 7).

HD2613, HD2615:

**2** "빵굽기" 설명을 참조하십시오. 빵굽기 조절 세팅을 해동<sup>❧</sup>에 놓고 토스트레버를 아래로 내리십시오 (그림 8).  
해동버튼의 불이 들어올것 입니다.

주의: 얼어 있는 토스트를 굽기 위해서는 해동된 토스트보다 시간이 오래 걸립니다.

### 구운빵을 데우기

---

HD 2611, HD2615:

**1** "빵굽기" 설명을 참조하십시오. 빵굽기 조절세팅을 <sup>❧</sup>에 맞추고, 토스트레버를 아래로 내리십시오 (그림 9).

HD2613:

**2** "빵굽기" 설명을 참조하십시오. 빵굽기 조절 세팅을 토스트 레버를 아래로 내리신 후 재가열버튼<sup>❧</sup>을 누르십시오 (그림 10).  
재가열 버튼에 불이 들어올 것 입니다.

### 한쪽면 굽기(HD2615만 해당)

---

베이글 및 바게트 굽기에 적합합니다.

**1** 반쪽의 베이글 또는 바게트 최대 13cm 길이

**2** 빵의 굽고자 하는 면을 토스터의 앞면을 향하게 넣으십시오 (그림 11).

**3** "빵굽기" 설명을 참조하십시오. 토스트레버를 아래로 내리신 후 한쪽면 굽기버튼<sup>❧</sup>을 누른 십시오.  
한쪽면 굽기 버튼의 불이 들어올것입니다 (그림 12).

한쪽면 굽기를 사용하시기 전에 토스트 레버를 아래로 내리신 후 한쪽면 굽기<sup>❧</sup>버튼을 한번 더 누르셔야 합니다.

이기능은 얼어있는 빵을 구우실 때에도 동일하게 적용 됩니다.

### 롤빵 및 크라상 데우기

---

**1** 데우기 받침대 레버를 돌려서 데우기 받침대를 세우십시오 (그림 13).

토스터의 손상을 방지하기 위해서 데우기 받침대를 올리지 않은 상태에서 빵을 토스터위에 바로 올리지 마십시오.

**2** 데우기 받침대 위에 롤빵 및 크라상을 올려 놓으십시오.  
한꺼번에 두번이상 데우지 마십시오.

HD 2513, HD2615:

**3** 토스트 레버를 아래로 내리고 데우기 버튼<sup>❧</sup>을 누리시면 데우기버튼에 불이 들어옵니다 (그림 14).

롤빵 또는 크라상의 양면을 데우고 싶으실때에는 토스터가 자동으로 꺼진 후에 빵을 뒤집은 후 다시 토스트레버를 아래로 내린 후 데우기버튼<sup>❧</sup>을 다시 누르십시오.

다음번의 데우기를 하시기전에 반드시 토스터레버를 아래로 내리신 후 데우기 버튼을 한번 더 눌러 주셔야 합니다.

## 14 한국어

HD 2611:

4 굽기정도 세팅을 **h**로 놓은 후에 토스트레버를 아래로 내리십시오 (그림 15). 롤빵 및 크라상의 양쪽면을 데우기 위해서는 토스터기가 자동으로 꺼진 후에 굽기조절 장치를 데우기세팅<sup>h</sup>에 그대로 두신 후 토스트레버를 아래로 내려서 다시 토스터를 작동시키십시오.

### 세척

- 1 제품의 전원코드를 뽑으십시오.
- 2 토스터를 식혀주십시오.
- 3 토스터를 젖은 천으로 닦아주십시오. 절대 연마제가 있는 천이나 물질로 닦지 마십시오.

몸체는 절대로 물에 담그지 마십시오.

- 4 토스터기의 빵가루 받침대를 옆으로 당겨서 빼십시오. 절대 빵조각을 제거할 목적으로 장치를 아래위로 털거나 흔들지 마십시오 (그림 16).

### 품질 보증 및 서비스

보다 자세한 정보가 필요하시거나, 사용상의 문제가 있을 경우에는 필립스전자 홈페이지([www.philips.co.kr](http://www.philips.co.kr))를 방문하시거나 필립스 고객상담실로 문의하십시오. 전국 서비스센터 안내는 제품 보증서를 참조하십시오. \*(주)필립스전자: (02) 709- 1200 \* 고객상담실: (080)600-6600(수신자부담)

### 문제해결

“문제해결” 란에서 해결이 어려울 때에는 필립스 전자 서비스센터에 연락하십시오 (“제품보증 및 서비스” 참조)









문제	조치
1. 토스터가 작동하지 않습니다.	전원코드가 접지된 벽 콘센트에 정확히 연결되어 있는지 확인하십시오.
2. 빵이 토스터기에 걸렸 습니다.	토스터가 그래도 작동하지 않는다면, 필립스 서비스센터로 연락하십시오. 토스터기의 전원을 끈 후 식히십시오. 조심스럽게 빵을 토스터기에서 빼어내십시오. 빵을 꺼내는동안 토스터기의 가열장치가 손상되지 않도록 주의하십시오. 빵을 꺼내기위해서 절대로 금속물질을 사용하지 마십시오.
3. 구워진 빵이 너무 타 거나, 너무 안구워 집니 다.	굽기정도 세팅을 확인해 보십시오. 토스트가 탈 경우 낮은 세팅으로 바꾸시고, 토스트가 잘 안구워 질때는 높은 세팅으로 바꾸보십시오.
4. 토스터에서 연기가 납 니다.	빵에 비해서 너무 높은 정도의 빵굽기를 선택하신건 아닌지 확인 하십 시오. 정지버튼을 누르셔서 토스트를 취소하십시오.
5. 전원코드가 손상되었 습니다.	전원코드가 손상되었다면, 반드시 필립스 서비스 센터 또는 서비스 지 점점을 방문하셔서 전원코드를 교체하셔야 합니다.
6. 한쪽면 굽기가 되지 않습니다.	한쪽면 굽기 버튼(HD26 15만 해당)을 눌렀는지 확인 하십시오. 버 튠을 누른상태에서만 한쪽면 굽기가 작동됩니다. 다른 빵을 한쪽면만 굽기위해서도 토스터기의 앞면으로 구울면이 향하게 한 뒤 한쪽면 굽 기버튼을 다시 한번 눌러주십시오.
7. 굽기기능을 실행하는 동안 굽기정도를 변경할 수 없습니다.	이것은 정상적인 상황입니다. 롤빵과 크라상을 굽기에 적당한 온도가 세팅이 되면 완벽한 굽기를 하기 위하여 온도를 조절하실수 없습니다.
8. 롤빵이나 크라상이 한 쪽면만 데워집니다.	롤빵이나 크라상을 뒤집어서 한번 더 데우십시오. "롤빵 및 크라상 데 우기"란을 참고하세요.

## 자주 하는 질문

질문	답변
1. 모든종류빵에 대해서 토스트가 가능한가요?	네, 거의 모든 종류의 빵에 대해서 토스트가 가능합니다. 심지어 한쪽 면 굽기 기능(HD26 15만 해당)을 통해서 바게트빵또한 구울 수 가 있습니다. 빵이 너무 두꺼워서 토스터슬롯에 들어가지 않는다면 적당 한 사이즈로 자르신 후 굽기바랍니다.
2. 롤빵 또는 베이글도 구울 수 있나요?	롤빵의 경우 데이기 받침대로 데울 수 있습니다. "롤빵 과 크라상 데 우기"란을 참조하십시오. 베이글은 반을 자른 후 한쪽면 굽기 기능 (HD26 15만 해당)을 이용하여 구울수 있습니다.
3. 빵의 한쪽면만을 구울 수 있나요?	HD26 15 모델만 한쪽면 굽기 기능이 있습니다. "한쪽면 굽기"란을 참조하십시오.
4. 토스터기로 토스팅된 빵을 다시 데울 수 있나 요?	네, "데우기" 란을 참조하십시오.
5. 토스터기로 샌드위치 (치즈를 넣어서) 만들 수 있나요?	아니요.이 토스터는 샌드위치를 만드는데 적합하지 않습니다.
6. 빵을 굽는 도중에 멈 추게 할 수 있나요?	네, 빵을 굽는 도중에 "정지"버튼을 눌러서 토스트를 중지 시킬 수 있 습니다.
7. 토스터기가 작동하는 도중에 굽기정도를 변경 할 수 있나요?	네, 굽기정도를 조절하시면 빵을 굽는 시간이 자동으로 조절되어 굽기 정도를 변경하실 수 있습니다.





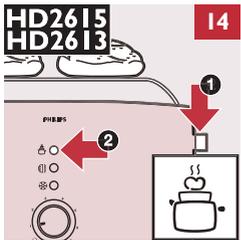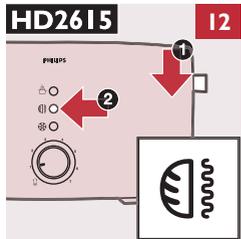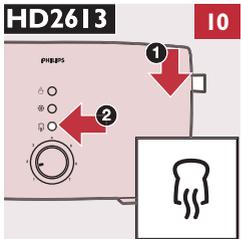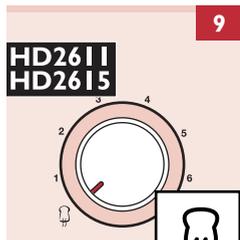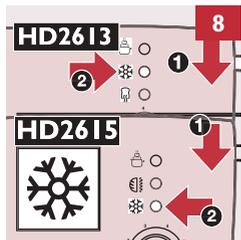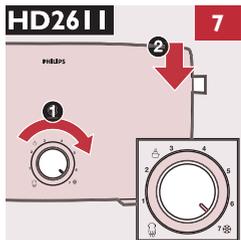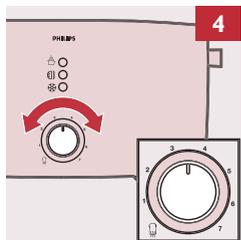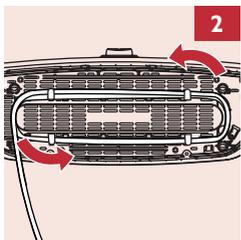





[www.philips.com](http://www.philips.com)



100% recycled paper  
100% papier recyclé

4222 001 9709 I