

# PHILIPS


*beauty*




Ladyshave

HP6302

/01

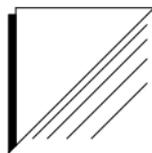

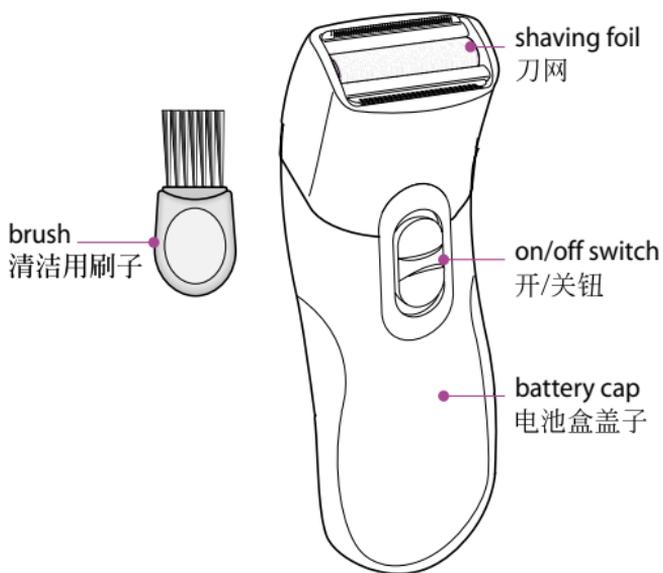



**HP6302/01**

**ENGLISH 6**

简体中文 12

繁體中文 18

## Introduction

- ▶ With your new Philips Ladyshave you can quickly, easily and comfortably remove unwanted hair from dry or wet skin.
- ▶ The Ladyshave can be operated on batteries.


## Important

- ▶ Do not use warmer water than shower temperature 35°C

## Preparing the appliance use

The Ladyshave runs on two R6 AA 1.5 volt batteries.

We strongly advise you to use Philips LR6 PowerLife batteries. They supply sufficient energy for approx. 45 minutes of shaving.

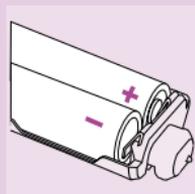


- 1** Make sure that your hands and the appliance are dry when you insert the batteries.
- 2** Pull the upper part of the Ladyshave off the lower part.
- 3** Insert the batteries into the battery compartment.  
Make sure you place the batteries in accordance with the + and - indications.
- 4** Reattach the lower part of the appliance to the upper part.

► To avoid damage due to battery leakage:

- ▶ *Do not expose the Ladyshave to direct sunlight.*
- ▶ *Do not expose the appliance to temperatures higher than 35°C.*
- ▶ *Remove the batteries if the appliance is not going to be used for a month or more.*
- ▶ *Do not leave empty batteries in the appliance.*

## Using the appliance

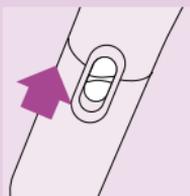

**1** Switch the Ladyshave on.



► The Ladyshave is suitable for shaving the underarms.



► The Ladyshave is suitable for shaving the bikini line.



► The Ladyshave is suitable for shaving the legs.

## Cleaning the appliance

Clean the Ladyshave every time you have used it.

Do not use any corrosive detergents, scouring pads or cloths, petrol, acetone etc. to clean the appliance.

**1** Switch the appliance off.

**2** Remove the shaving foil.

Do not exert any pressure on the shaving foil to avoid damage.

**3** Gently shake the shaving foil to remove hairs.


**4** Brush the shaving foil.

**5** Remove the cutter block.

**6** Gently shake the Ladyshave to remove hairs from the hair chamber.

**7** Brush the hair chamber.

**8** Reassemble the appliance and put the protection cap on the appliance to store it. The cap fits with a click.

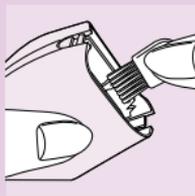

## Maintenance and replacement



- 1 Lubricate the shaving foil with a drop of sewing machine oil twice a year.

If you use the Ladyshave twice a week or more, we advise you to replace the shaving foil and cutter block every one to two years.

- ▶ The shaving foil may only be replaced with an original Philips shaving foil (type HP2910).
- ▶ The cutter block may only be replaced with an original Philips cutter block (type HP2911).

## The environment

Do not throw batteries away with the normal household waste, but hand them in at an official collection point. You can also take the batteries to a Philips Service Centre, which will dispose of them in an environmentally safe way.

## Troubleshooting guide

- 1 Reduced shaving performance

▶ *Cause 1: The shaving head is dirty.*

- ▶ Remove the shaving head
- ▶ Clean the cutter block
- ▶ Rinse both under the tap
- ▶ Take care that no hair stuck under the trimmer!

▶ *Cause 2: Too low rpms (The shaver sound weak)*

- ▶ change the batteries
- ▶ clean the shaving head
- ▶ oil the shaving head with some drops of oil

## **2** Stronger skin irritation than normally

▶ *Cause 1: Shaving foil is worn out or damaged*

- ▶ Replace the shaving foil

## **3** Appliance is not working

▶ *Cause 1: Batteries are empty*

- ▶ change the batteries

▶ *Cause 2: Batteries are not correct in the battery compartment*

- ▶ Put them into the battery compartment according to the pictograms in the compartment

▶ *Cause 3: Battery compartment is not closed properly*

- ▶ Close it until you hear a click

## **4** Appliance has been falling into water while it was open

- ▶ let it dry with open battery compartment

## Guarantee & service

If you need information or if you have a problem, please visit the Philips Web site at [www.philips.com](http://www.philips.com) or contact the Philips Customer Care Centre in your country (you will find its phone number in the worldwide guarantee leaflet). If there is no Customer Care Centre in your country, turn to your local Philips dealer or contact the Service Department of Philips Domestic Appliances and Personal Care BV.

## 说明

- ▶ 使用新型飞利浦 **Ladyshave**，您可以从干燥或湿润的皮肤上快速简单和舒适地去除不想要的毛发。

Ladyshave 有两种可替换的刮毛翼片：

用于腿部的银色刮毛翼片。

用于身体更柔软部位，如腋下和比基尼线的金色刮毛翼片。

- ▶ **Ladyshave** 可使用电池操作。

## 注意事项

- ▶ 不要使用超过淋浴温度 **35 摄氏度** 的温水。

## 使用产品的准备工作


Ladyshave 的动力为两节 R6 AA 1.5 伏电池。

强烈建议您使用飞利浦 LR6 PowerLife 电池。它们提供的电能足够刮毛约 45 分钟。



- 1** 确保您在安装电池时双手和产品都保持干燥。

- 2** 拉开 **Ladyshave** 的上下部分。

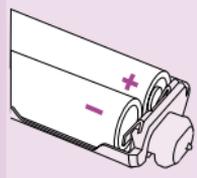


- 3** 将电池插入电池舱。  
确保根据 + 和 - 极指示安装电池。

- 4** 将产品的上下部分重新连接起来。

- ▶ 避免因电池漏电而引起损伤：
  - ▶ 不要让 *Ladyshave* 直接接触阳光。
  - ▶ 不要将产品放在温度超过 35°C 的环境中。
  - ▶ 如果一个月或更长的时间不用本产品，请拿出电池。
  - ▶ 不要将空电池留在本产品中。

## 使用产品

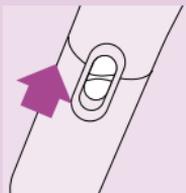


**1** 打开 *Ladyshave* 电源。

**2** 将刮毛刀头放在皮肤上并沿毛发生长的相反方向缓慢移动。



▶ *Ladyshave* 适于为腋下刮毛。

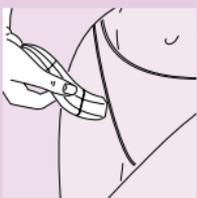

▶ *Ladyshave* 适于为比基尼线刮毛。



▶ *Ladyshave* 适于为腿部刮毛。

## 清洁产品

每次用后都要清洁 Ladyshave。

不要用腐蚀性的洗涤剂、钢丝绒或抹布、汽油、丙酮等清洁产品。



**1** 关闭产品电源。

**2** 取下刮毛翼片。


不要用力压刮毛翼片，以防它受损。



**3** 轻轻摇动刮毛翼片以去除毛发。

**4** 刷净刮毛翼片。

**5** 取下刀具组。

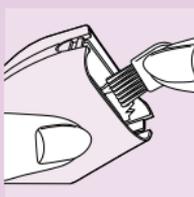

**6** 轻轻摇动 Ladyshave，以便从毛发舱中去除毛发。

**7** 刷净毛发舱。



**8** 重新组装产品并盖上保护盖，之后存放起来。保护盖安装好时会听到“咔哒”一声。

## 维修与更换



- 1 每年两次用一滴缝纫机油润滑刮毛翼片。

如果每周使用 Ladyshave 两次或更多次，建议您一到两年更换一次刮毛翼片和刀具组。

- ▶ 刮毛翼片只能使用原装飞利浦刮毛翼片（型号 HP2910）替换。
- ▶ 刀具组只能使用原装飞利浦刀具组（型号 HP2911）替换。

## 环保

不要将电池和普通生活垃圾一同丢弃，而应交给正式收集点处理。也可以将电池交给飞利浦服务中心，他们将以环保的方式处理电池。

## 排除故障指南

### 1 剃毛功能减退

- ▶ 原因 1：剃毛刀头变脏。
  - ▶ 取下剃毛器刀头
  - ▶ 清洁切割部件。
  - ▶ 把两者都放到水龙头下冲洗
  - ▶ 注意不要让毛发塞住修剪器！

- ▶ 原因 2：每分钟转数太少（刮毛器的声音无力）

- 更换电池
- 清洁剃毛器刀头
- 给刀头滴几滴润滑油

## **2** 皮肤受刺激的状况比一般情况要重。

- ▶ 原因 1：刀网太旧或受损

- 更换刀网

## **3** 剃毛器不运行

- ▶ 原因 1：电池电量耗尽

- 更换电池

- ▶ 原因 2：电池舱中的电池方向不对

- 根据图解将电池装到电池舱里

- ▶ 原因 3：没有正确关闭电池舱

- 关闭它时应听到“咔哒”一声

## **4** 产品在打开时曾跌落在水中

- 打开电池舱将其晾干

## 保修与服务

如果您需要有关信息或在使用中遇到问题，请访问飞利浦网站：[www.philips.com](http://www.philips.com) 或与贵国的飞利浦客户服务中心联络（您可在环球维修手册中找到电话号码）。如果贵国没有客户服务中心，请与当地的飞利浦零售商或与飞利浦家用电器及个人服务 BV 服务部联系。

### PHILIPS

产品 : 飞利浦美容剃毛器  
 型号 : HP6302  
 电压 : 3V d.c  
 产地 : 斯洛文尼亚  
 生产日期 : 请见产品背部



/01

飞利浦电子香港有限公司家庭小电器部  
 香港北角电气道183号友邦广场38楼  
 电话：(852) 2830 6188

全国顾客免费服务热线：800 8203 678

本产品根据GB4706.1-92及GB4706.16-86制造

请妥善保管本使用说明书

发行日期：02/05

## 序言

- 擁有飛利浦女用得體刀之後，您就可以快速、輕鬆並舒適地去除不論是乾、溼皮膚上多餘的體毛。

您的女用得體刀內附兩片可更換的刀網：  
銀色的刀網用於腿部。

金色的刀網用於身體較為細緻的部位，例如腋下和比基尼線。

- 女用得體刀可以安裝電池使用。

## 注意事項

- 切勿使用高於淋浴溫度攝氏 35 度的溫水。


## 裝置使用準備

女用得體刀使用兩顆 R6 AA 1.5 伏特的電池。

特別推薦您使用飛利浦 LR6 PowerLife 電池。它所供應的充足電源可以讓您使用大約 45 分鐘的時間。

- 1 當您在安裝電池時，請確定雙手及裝置都保持乾燥的狀態。
- 2 將女用得體刀的上半部與下半部分開。



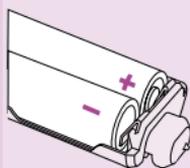


**3** 將電池插入電池座中。  
請確定放置電池的正負極與裝置上的 + 和 - 指示一致。

**4** 將裝置的下半部與上半部重新連接。

▶ 為避免因電池滲漏造成的損傷：

- ▶ 請勿將女用得體刀直接曝曬在陽光下。
- ▶ 請勿將此裝置曝露在高於攝氏 35 度的溫度下。
- ▶ 如果超過一個月不使用此裝置，請將電池取出。
- ▶ 請勿將電力耗盡的電池留置在此裝置中。

## 女用得體刀之使用方法

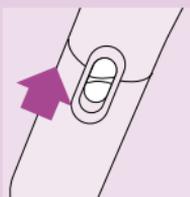


**1** 將女用得體刀開關打開。

**2** 將刮頭置於皮膚上，並朝體毛生長的方向緩慢移動。



▶ 女用得體刀適用於去除腋下的體毛。

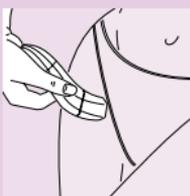

▶ 女用得體刀適用於去除比基尼線外的多餘體毛。



- ▶ 女用得體刀適用於去除腿毛。

## 得體刀之清洗

每次使用女用得體刀後都要清洗。

請勿使用任何腐蝕性清潔劑、鋼絲絨或菜瓜布、汽油、丙酮等清洗此裝置。

- 1 關閉此設備。



- 2 取下刀網。

請勿施壓在刀網上以避免受傷。


- 3 輕輕搖晃刀網以去掉刮除的體毛。

- 4 用刷子清潔刀網。



- 5 取下刀片。

- 6 輕輕搖晃女用得體刀以去除儲毛區中的體毛。

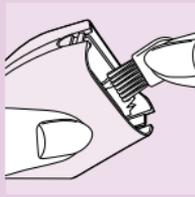

- 7 清潔儲毛區。



- 8** 重新組合裝置並將裝置中套上保護蓋後收妥。保護蓋套好時會聽到「卡嗒」一聲。

## 維護與更換



- 1** 每兩年用一滴針車油將刀網潤滑一次。

如果您每週會使用女用得體刀兩次以上，我們建議您每一至兩年即更換刀網與刀片。

- ▶ 您只能以原始的飛利浦刀網 (HP2910 型) 來更換舊有的刀網。
- ▶ 您只能用原始的飛利浦刀片 (HP2911 型) 來更換刀片。

## 環境保護

請勿將不要的電池投入一般家庭的垃圾桶當中，而是要將它們送至正式的集中點回收。您可以將不用的電池拿到飛利浦服務中心，他們會將您送來的電池以環保並安全的方式處理。

## 保證與服務

如果您需要更多資訊或有任何問題，請蒞臨飛利浦網站 [www.philips.com](http://www.philips.com) 或聯絡您所在國家的飛利浦顧客服務中心（您可在全球商品保證傳單中找到電話號碼）。如果您所在的國家沒有顧客服務中心，請洽您當地的飛利浦經銷商或聯絡飛利浦服務部。

