


Register your product and get support at
www.philips.com/welcome

HP8260

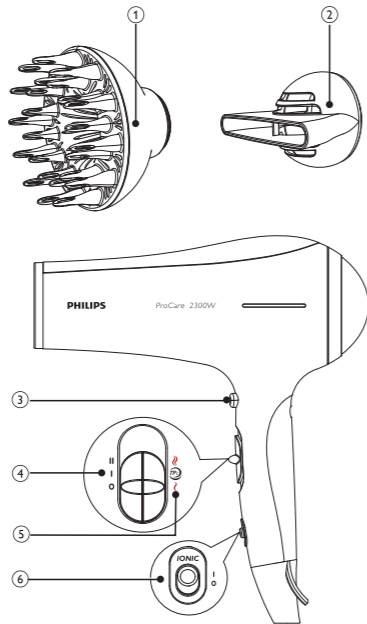

EN	User manual	TH	คู่มือผู้ใช้
KO	사용 설명서	ZH-TW	使用手冊

PHILIPS




English

1 Introduction

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

The Philips ProCare hairdryer is designed with advanced Philips EHD (Even Heat Distribution) Technology™. The dryer uses a uniquely designed air outlet (using an EHD fan-shaped grille, see below figure) to ensure that heat is always distributed very evenly, even at high temperatures, and prevents damaging hot spots. This gives advanced protection to the hair from overheating and thus helps to keep your hair healthy and shiny.

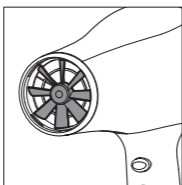

2 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

DANGER

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

WARNING

- WARNING: Do not use this appliance near water.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the



3140 035 34541

local power voltage.

- Do not use the appliance for any other purpose than described in this manual.
- Do not insert metal objects into the air grilles to avoid electric shock.
- Never block the air grilles.

CAUTION

- Always use the appliance on human hair.
- When the appliance is connected to the power, never leave it unattended.
- Always unplug the appliance after use.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.

Electromagnetic fields (EMF)

This appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Environment

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.



3 Dry your hair

- Connect the plug to a power supply socket.
 - For precise drying, attach the concentrator (2) onto the hairdryer. The concentrator enables you to direct the airflow straight at the brush or comb with which you are styling your hair.
 - To enhance volume for curls and bouncy style, attach the diffuser (1) onto the hairdryer. The volume diffuser has been specially developed to gently dry both straight and curly or wavy hair. To add volume at the roots, insert the pins into your hair in such a way that they touch your scalp. Make rotating movements with the appliance to distribute the warm air evenly through your hair.
 - To disconnect the attachment, pull it off the hairdryer.
- Adjust the airflow switch (4) and temperature switch (3) to suitable positions.

Switch	Settings	Function
Temperature	☼ Quick dry	Dry shower-wet hair quickly.
	☼ Thermoprotect	Provides the optimal drying temperature and gives additional protection from overheating the hair.
	∩	Gently dry the hair.
Airflow	II	Strong airflow and fast drying.
	I	Gentle airflow and styling.
	○	Switch off.

- Press the cool shot button ☼ (3) for cool airflow to fix your style.
- The appliance is equipped with ion function, which provides additional shine and reduces frizz.
 - When the function is on, a special odor may be smelt. It is normal and caused by the ions which are generated.
 - To turn the ion function on or off, slide the IONIC switch (6) to I or O.

After use:

- Switch off the appliance and unplug it.
- Place it on a heat-resistant surface until it cools down.
- Remove the concentrator or diffuser before you clean the appliance.
- Clean the appliance by damp cloth.
- Keep it in a safe and dry place, free of dust.

4 Guarantee and service

If you need information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com/support or contact the Philips Customer Care Centre in your country. The phone number is in the worldwide guarantee leaflet. If there is no Consumer Care Centre in your country, go to your local Philips dealer.

5 Troubleshooting


Problem	Cause	Solution
The appliance does not work at all.	The power socket to which the appliance has been connected may not live.	Ensure the socket is live.
	The appliance may have overheated and switched itself off.	Unplug the appliance and let it cool down for a few minutes. Before you switch on the appliance again, check the grilles to make sure they are not blocked by fluff, hair, etc.
	The appliance may not be suitable for the voltage to which it has been connected.	Ensure that the voltage indicated on the type plate of the appliance corresponds to the local power voltage.

한국어

1 소개

필립스 제품을 구입해 주셔서 감사합니다! 필립스가 드리는 지원 혜택을 받으실 수 있도록 www.philips.com/welcome 에서 제품을 등록하십시오.

필립스 프로케어 헤어 드라이어는 고급 필립스 EHD(균일 온도 분배) 기술로 설계되었습니다. 드라이어는 고유한 디자인의 공기 배출구(EHD 부채 모양 그릴 사용, 아래 그림 참조)를 사용하여 고온에서도 드라이어의 열이 항상 고르게 분배되어 열로 인한 손상을 방지합니다. 이 기술로 모발의 과열이 20% 감소합니다. * 이러한 기능을 통해 과열로부터 모발을 보호하는 효과가 강화되어 모발을 건강하고 빛나게 유지할 수 있습니다.

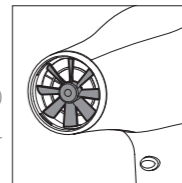

- 다른 헤어드라이어와 비교 시

2 주의 사항

본 제품을 사용하기 전에 이 사용 설명서를 주의 깊게 읽고 나중에 참조할 수 있도록 잘 보관하십시오.

위험

- 욕실에서 사용할 경우 사용 후에는 반드시 전원 플러그를 뽑으십시오. 전원이 꺼져 있더라도 물에 닿으면 위험할 수 있습니다.

주의

- 경고: 본 제품은 물이 없는 곳에서 사용하십시오.
- 경고: 본 제품을 욕조, 샤워기, 대야 또는 기타 물이 있는 용기 근처에서 사용하지 마십시오.
- 제품에 전원을 연결하기 전에 제품에 표시된 전압과 해당 사용 지역의 전압이 일치하는지 확인하십시오.



- 이 설명서에 나와있는 이외의 용도로 제품을 사용하지 마십시오.

- 감전 사고를 막으려면 공기 흡입구에 금속 물질을 삽입하지 마십시오.

- 절대로 공기 그릴을 막지 마십시오.

주의

- 항상 사람의 모발에만 제품을 사용하십시오.
- 제품이 전원에 연결된 상태로 외출하거나 자리를 비우지 마십시오.
- 사용 후에는 반드시 제품의 전원 코드를 뽑으십시오.
- 다른 제조업체에서 만들었거나 필립스에서 권장하지 않은 제품 액세서리 또는 부품은 절대 사용하지 마십시오. 이러한 액세서리나 부품을 사용했을 경우에는 품질 보증이 무효화됩니다.
- 전원 코드를 제품에 감지 마십시오.
- 전원 코드가 손상된 경우, 안전을 위해 필립스 서비스 센터 또는 필립스 서비스 지정점에 의뢰하여 교체하십시오.
- 신체적인 감각 및 정신적인 능력이 떨어지거나 경험과 지식이 풍부하지 않은 성인 및 어린이는 혼자 제품을 사용하지 말고, 제품 사용과 관련하여 안전에 책임 질 수 있도록 지시사항을 충분히 숙지한 사람의 도움을 받으십시오.
- 어린이가 제품을 가지고 놀지 못하도록 지도해 주십시오.

- 추가 안전을 위하여 잔여 전류 소멸 장치(RCD)를 욕실 전원에 설치할 것을 권장합니다. 이 RCD의 정격 잔여 전류는 30mA 이하여야 합니다. 자세한 설치 방법은 전기 설비업체에 문의하십시오.

- 제품이 과열되면 자동으로 전원이 꺼집니다. 제품의 전원을 뽑은 후 몇 분 동안 열기가 식도록 두십시오. 제품의 전원을 다시 켜기 전에 그릴이 잔털, 머리카락 등으로 막혀 있지 않은지 확인하십시오.

전자기장(EMF)

이 제품은 EMF(전자기장)와 관련된 모든 기준을 준수합니다. 이 사용 설명서의 지침에 따라 적절하게 취급할 경우 이 제품은 안전하게 사용할 수 있으며 이는 현재까지의 과학적 증거에 근거하고 있습니다.

환경

수명이 다 된 제품은 일반 가정용 쓰레기와 함께 버리지 말고 지정된 재활용품 수거 장소에 버리십시오. 이런 방법으로 환경 보호에 동참하실 수 있습니다.



3 헤어 드라이어 사용

- 전원 공급 장치 소켓에 플러그를 꽂습니다.
 - 정확한 드라이를 위해 헤어 드라이어에 집중 노즐 (2)을 부착하십시오. 집중 노즐은 브러시나 빗을 사용하여 스타일링을 원하는 부위를 향하도록 할 수 있습니다.
 - 웨이브 또는 탄력 있는 스타일에 볼륨감을 더하려면 헤어 드라이어에 볼륨 디퓨저(diffuser)(1)를 부착하십시오. 볼륨 디퓨저(diffuser)는 스트레이트 빗 컬 또는 웨이브 모발을 부드럽게 드라이 할 수 있도록 특별히 고안되었습니다. 모근 부분에 볼륨감을 더하려면, 피부에 닿을 때까지 모발 사이로 핀을 집어넣으십시오. 따뜻한 바람이 모발에 골고루 퍼지도록 헤어드라이어를 회전하면서 움직이십시오.
 - 액세서리를 분리하려면 헤어 드라이어에서 빼내십시오.
- 바람 스위치(4) 및 온도 스위치(3)를 적절한 위치로 조절합니다.

스위치	설정	기능
온도	☼ 고속 건조	젖은 모발을 빠르게 건조합니다.
	☼ 써오프로텍트	최적의 드라이 온도와 과열로부터 강화된 모발 보호 효과를 제공합니다.
	∩	모발을 부드럽게 건조합니다.
공기 흐름	II	강한 바람으로 빠른 드라이를 할 수 있습니다.
	I	부드러운 바람으로 손쉽게 스타일링을 할 수 있습니다.
	○	전원을 끕니다.

- 스타일 고정을 위한 시원한 바람을 원할 경우 쿨샷 버튼 ☼ (3)을 누릅니다.

- 제품에는 윤기를 더하고 곱슬거름을 줄여 주는 이온 기능이 내장되어 있습니다.
 - 이온 기능이 켜져 있을 때 독특한 향이 날 수 있는데

