


Content

1 Control elements and functional components	5 Settings
1.1 What's in the box?	5.1 Favourites lists
1.2 Front side (see figure 1)	5.1.1 Creating a favourite list
1.3 Back side (see figure 1)	5.1.2 Modifying a favourite list
1.4 Remote Control (see figure 2)	5.2 Setup
2 Safety precautions	5.2.1 TV configuration
3 Connecting other devices	5.2.2 Time setting
4 Operation	5.2.3 Factory setting
4.1 Switch-on/ Switch-off	5.3 New channels
4.2 First-Time installation	5.4 Installation
4.3 Change of channel	5.4.1 Signal information
4.4 Volume control	5.4.2 Channels installation
4.5 Calling up program information banner	5.5 Timers
4.6 TV/ Radio Switching	5.5.1 Add Timer
4.7 Subtitle	5.5.2 Modify timer from the list
4.8 Immediate Timer	5.5.3 Delete timer from the list
4.9 Electronic program guide (EPG)	5.5.4 Sleep timer
4.10 Language	5.6 User Preferences
4.11 Using Teletext	5.6.1 Languages
4.12 Channel selector	5.6.2 Appearance
	5.6.3 Access control
	6 Troubleshooting

1 Control elements and functional components

1.1 What's in the box?

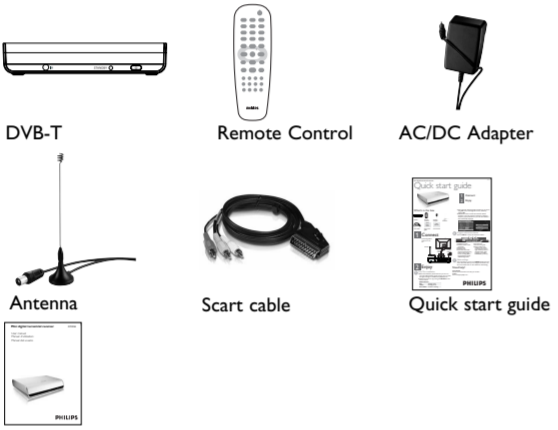

User Manual

1.2 Front side (see figure 1)

- 1 IR sensor
- 2 Standby LED
- 3 Standby ON/OFF: Power standby on and off the receiver.

- 4 Antenna: Receive the digital signal from your antenna.
- 5 Audio out/ Video out: Connect the cable to your TV or Video device for video output.
- 6 DC-in: Connect the provided AC/DC adapter to your receiver.

1.4 Remote Control (see figure 2)

- 1 INFO Call up the information banner without changing the channel.
- 2 EXIT Exit a call up window, such as information banner, menu
- 3 OK Confirm a setting
- 4 Volume + / - Press + / - to increase / decrease the volume bar for 1 step.
- 5 Color buttons Color buttons (respectively red, green, yellow and blue) used in a few sub-menus
- 6 TV/STB No function
- 7 MENU Call up the SETUP menu
- 8 TIMER/REC Press **TIMER/REC** to add a program into the timer list. Or call up the timer list by pressing **TIMER/REC**.
- 9 ON/OFF Switch on the box or put it to standby mode
- 10 Numerical For numerical input
- 11 EPG Call up the Electronic Program Guide information
- 12 BACK / P+P During channel selection, press P+P to let user switch between the two last selected channels
- 13 Arrow Up/Down/Left/Right navigation
- 14 Channel + / - Press change up or down
- 15 Mute Mute the audio output
- 16 OPT The **OPT** button you can also call up the options that the TV program is providing
- 17 TEXT Teletext
- 18 LIST/FAV Allows you to switch between default and favourite lists
- 19 APP Press **APP** button for subtitle selection
- 20 RADIO Press **RADIO** to call up the overview for the radio channels. You can return to the TV channel list by pressing **RADIO** again.
- 21 I-II It is for sound selection, such as different audio languages.

2 Safety precautions

Please read the following recommended safety precautions carefully for your safety.

Power source
The Receiver should be operated only from original 9V power adaptor. Please do not open the cover by yourself. There is high voltage in the set, which will danger your life. Please ask the closest service for help.

Power cord
The power supply cord should be placed so that it is not likely to be walked on or pinched by items placed upon them or against them. Pay particular attention to cord when you enter the plug, power outlet, and the point where they exit from the Receiver.

Liquids
Keep liquids away from the Receiver. The Receiver shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Small objects
Coins or other small objects must be kept away from the Receiver as they can fall through the ventilation slots of the Receiver and cause serious damage.


Cleaning
Disconnect the Receiver from the wall socket before cleaning it. Use a dry cloth lightly dampened (no solvents) to clean the exterior of the Receiver.

Ventilation
Minimum distance of 10cm, from both sides and a distance of 15cm, to upwards around the apparatus should be kept for sufficient ventilation. Take care for a good air circulation. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, tablecloths, soft furnishings, curtains, carpets, etc.

- 2** Please do not place the Receiver and the remote control under direct sun light
- The Receiver should be placed on a solid and safe base
 - The location should not be selected as a room with high humidity, as the condensation, arising in the kitchen for example, may cause malfunction or damage the Receiver
 - Heating or other thermal radiation under the Receiver also may cause malfunction or damage the Receiver
 - Hot air, which arises during the operation, should be ventilated with sufficient air circulation. Please do not put the Receiver in closed areas and do not cover it.
 - Please avoid the contact of the Receiver and of the remote control with water or humidity. Do not put into operation near bath, swimming pools.
 - Connect the power supply of the Receiver only after the installation is ready.
 - The outdoor antenna has to be grounded correctly. For this you have to follow the appropriate regulations.
 - Take care to provide good air circulation. Place the Receiver in a location with adequate ventilation to prevent heating up of the Receiver.
 - No naked flame sources such as lighted candles should be placed on the apparatus.
 - Never stack other electronic equipment on top of the Receiver.
 - Remove batteries from the remote control when it is not to be used for a long period. Otherwise it can be damaged due to any leakage of batteries.

3 Connecting other devices

Connecting DVB-T receiver to a TV set and DVD player.

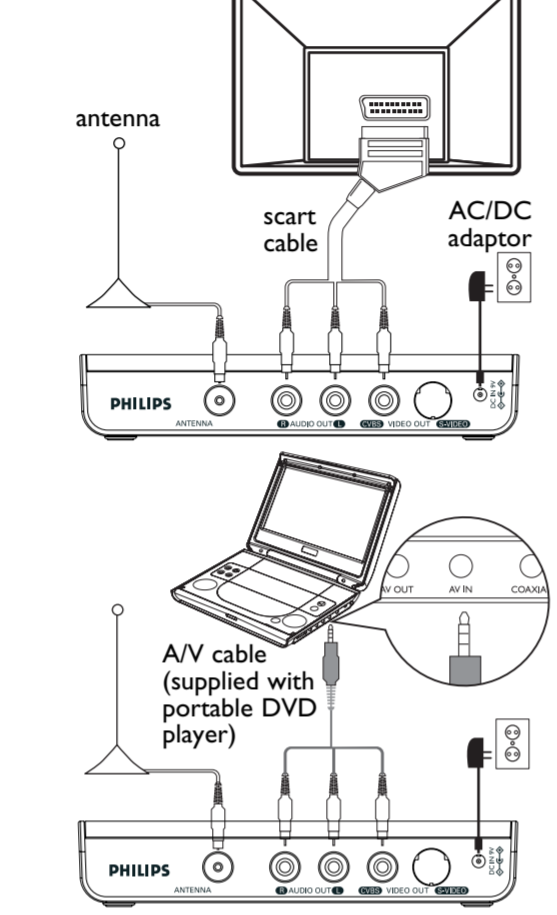

4 Operation

4.1 Switch-on/ Switch-off
Switch the receiver on by pressing the **⊕** (standby button) on the remote control and wait until you see the welcome image on your screen.

The LED is green if the receiver is switched on.

Make sure the A/V input of TV or DVD player is selected.

4.2 First-Time installation

- 1 Before the installation, please make sure you are in an area with sufficient DVB-T signal coverage. You can check the signal coverage on website www.philips.com/support.
- 2 After the first switch-on, you'll receive the welcome window. The **OK** always confirms a selection within these menus, and pressing it will take you to the next step in the installation process. However, and this is important, more than one value often has to be entered in a menu. Firstly, make all necessary setting changes. Then, confirm them all simultaneously by pressing **OK**. You can always return to the previous menu by pressing exit. Use the **▲/▼** to move upwards and downwards from one line to another.
- 3 On the next screen, select the desired language using **◀▶**, then press **▼** to highlight country setting and select your country. Once, all settings are corrects, validate by pressing **OK**.



4 Select your TV format.



5 Validate the screen to launch the automatic channel installation:



You can see all TV and Radio channels found as one goes along. Once the automatic installation is finished, a temporary pop-up indicates it to you. The first channel is then automatically displayed.



4.3 Change of channel

You can change the channel in different ways:
By pressing the channel button + or -.

By pressing the **Back/ P+P**, you switch between the two last selected channels.

By selecting the channel directly via the channel list, see 4.11 Channel Selector

By entering the number via the numerical buttons. If, for instance, the number is 0014, quickly press the numerical buttons 1 and 4 successively. The zeros do not have to be entered.

4.4 Volume control


Use the volume buttons + and - for increasing or decreasing the volume. A volume bar-graph is displayed to allow you to see volume level.

Mute function
By pressing **Mute**, the sound reproduction is stopped. The sound is audible again if you:
Press **Mute** again, or
Press one of the volume control buttons.

4.5 Calling up program information banner

Press **INFO** to call up the information banner, a temporized banner is displayed at the bottom of the screen including:

- 1 The channel list name
- 2 The channel number in the current list
- 3 The maturity level
- 4 The channel name
- 5 Only information about the present and the following events of the current service are available. By default, the present event is displayed. The following event is displayed by pressing **◀▶** (toggle between present and following events).
- 6 Current time
- 7 Duration bar graph
- 8 Some specific icons relative to the service properties (from left to right: Teletext presence / channel locked / audio language / scrambled / DVB-Subtitle presence).
- 9 Reception quality: the more bars are shown the better the reception is.

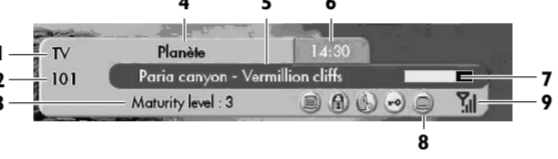

To obtain more information on present and following event, you could press **INFO** again.

4.6 TV/ Radio Switching

In viewing mode, a press on **Radio** swaps between the current TV channel and the current radio channel.

4.7 Subtitle

By pressing **APP** during viewing mode, a pop-up appears to allow you to select the wanted language for subtitles. In this pop-up only selecting a new one among the list of available languages changes the language of the subtitles component for the current channel:



4.8 Immediate Timer

You can start a timer immediately on the current TV channel by pressing the **TIMER** key.
You are requested to confirm the timer.
The timer stops automatically at the end of the current channel.

WARNING During the recording, the Receiver is locked. All the remote control keys are inactive, and if present, the LED is blinking.
You can unlock the Receiver during a recording by pressing the **TIMER** then the **0**. The timer is cancelled.

4.9 Electronic program guide (EPG)

The EPG offers you an overview of all programmes to be broadcasted in the next week on the current channel. The information presented for the selected event are: Start time, Tide, Short description.


- Not all channels offer and extensive EPG.
- Many broadcasting services broadcast the current day programme but do not offer detailed descriptions.
- There are broadcasting services that do not offer any EPG information.

- 1 Select the desired channel
- 2 Press **EPG** to call up the electronic programme guide. The following functions are offered to you by the EPG:
 - A press on **▲/▼** allows you to consult all event pages for the days, a press on **▼** when last event of the list is highlighted displays the next page.
 - A press on **◀▶** allows you to change to previous/next day of event presentation.
 - The **Prog (+/-)** allows you to change to another channel in the current channel list.
 - By pressing **TIMER**, you can set a timer on the highlighted program of the current channel, see 5.5.1 add timer description.



4.10 Language

If the current channel has several audio tracks, the **I-II** button allows you to choose between them. Selecting a new one amongst the list of available languages changes the audio language for the current channel.

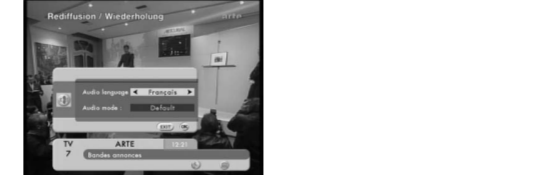

Dolby Digital (DD) is not supported.

4.11 Using Teletext

- 1 Press the **TEXT** button to call up the teletext.
- 2 Completely hide the teletext by pressing the **EXIT** or **TEXT** button.

You possibly also have to press the **OK** button in order to display the teletext and to specify whether you want to use the teletext of your TV, or that of the receiver.

4.12 Channel selector

The Channel selector is activated by a press on **OK** while in viewing mode.

This screen presents the channels of the current default/favourite lists. When selecting a channel of this list with **OK**, the Receiver changes the video background accordingly.

The channel list is automatically removed from the screen after few seconds.



5 Settings

Press **MENU** anytime to displays the main menu.



Press **▲/▼** to highlight the desired option and press **OK** in order to call it up.

5.1 Favourites lists

The Favourite lists menu allows you to create, modify and delete your own favourite lists but not the two default service lists (TV, Radio). Four TV favourite lists and four radio favourite lists can be created.

5.1.1 Creating a favourite list

This screen allows you to create a new favourite channels list with selection criteria. The name of the list is set to **FAV x** for TV services and **RFAY x** for Radio.



- 1 Press **MENU** to open the main menu.
- 2 Highlight the **Favourites list** and press **OK**.
- 3 Highlight the **Create a favourites list** and press **OK**.
- 4 Once you have validated the parameters, and press **OK** to confirm. The favourite list modification screen is automatically displayed (see 5.1.2 Modifying a favourite list). By default all channels are skipped.

5.1.2 Modifying a favourite list

This screen allows you to modify a favourite list. The current favourite list name is displayed on the top of the screen.



- 1 Press **MENU** to open the main menu.
- 2 Highlight the **Favourites list** and press **OK**.
- 3 Highlight the **Modify a favourites list** and press **OK**.
- 4 In favourites list, you can perform the following function using the 4 color buttons.
 - Add/Skip**: press **Green** button to skip or add the highlighted channel, in front of the channel list a color icon indicates the status (white for skipped, blue for added)
 - Lock/Unlock**: press **Red** button to lock or unlock the highlighted channel, in front of the channel list a color icon indicate the status (red for locked, blue for unlock). The option is only available if channel is added.
 - Sort/Move**: accessed by a press on the **Yellow** button. **Sort** can be made by alphabetical or by provider. The selected services will be sorted and placed at the beginning of the list, and the other (not selected) will be sorted and placed at the end of the list.

Move action:

- 1 Highlight the channel to move
- 2 Press **OK** to select it.
- 3 Move the cursor to the desired location and press **OK** to finalize the move operation.
- 4 Press **Exit** to go back the favorites list sub menu.
- 5 Add All/Skip All: press the **Blue** button to generalize the Add or Skip operation to all channels.

The only modification you can make in the two default TV and Radio lists is to lock or unlock a channel.

5.1.3 Delete a favourite list

This screen allows you to delete a favourite list.

- 1 Press **MENU** to open the main menu.
- 2 Highlight the **Favourites list** and press **OK**.
- 3 Highlight the **Delete a favourites list** and press **OK**.
- 4 Highlight the particular FAVx that you want to delete and press **OK** to confirm.

5.2 Setup

The **Setup** menu allows you to configure the Receiver and the TV set, in particular: the TV set configuration, the time settings and the reset to default factory settings.

5.2.1 TV configuration

- 1 Press **MENU** to open the main menu.
- 2 Highlight the **Setup** and press **OK**.
- 3 Highlight the **TV configuration** and press **OK**.
- 4 Select the parameters according to below description and press **OK** to confirm.

TV Format Depending on the TV format, the format of the video on the TV SCART is automatically converted to 4:3 or 16:9 according to the received data for each zapping.

TV mode Set your TV system (Pal or SECAM).

TV Audio Signal allows you to set audio to mono or stereo

5.2.2 Time setting

Two modes are available to set the local time: Automatic one which is based on time received from signal

- 1 Manual one which allows you to set manually local time
- 2 Press **MENU** to open the main menu.
- 3 Highlight the **Setup** and press **OK**.
- 4 Highlight the **Time settings** and press **OK**.
- 5 Select the mode with **◀▶**.
- 6 In manual mode, use digit buttons to set the current date and time directly.

5.2.3 Factory setting

You can reset the Receiver to default setting. In doing so, the individually composed favourites list is deleted.

- 1 Press **MENU** to open the main menu.
- 2 Highlight the **Setup** and press **OK**.
- 3 Highlight the **Factory settings** and press **OK**. (The Receiver carries out a reboot)
- 4 Carry out a **First-time installation** (see 4.2 **First-time installation**)

5.3 New channels

If some new channels have been detected during the standby of the Receiver, a pop-up is displayed when the user wake up the Receiver.

- To see the new channels:
- 1 Press **MENU** to open the main menu.
 - 2 Highlight **New channels** and press **OK**.

5.4 Installation

This menu allows you to enter to the **Signal information** menu, to the **Channels installation** menu.

To enter into **Installation** menu:

- 1 Press **MENU** to open the main menu.
- 2 Highlight **Timers** and press **OK**.

5.4.1 Signal information

This screen allows you to adjust your terrestrial antenna. Two signal bargraphs are proposed. The first indicates the power of the signal, the second indicates the quality of the signal measured by the Bit Error Rate (BER).

- 1 Follow the same step as 5.4 **Installation** to the Installation menu.
- 2 Highlight **Signal information** and press **OK**.
- 3 You can check the quality of different channels by selecting new one with the **◀▶** or the digits buttons of the "Channel number" item. The corresponding frequency is displayed in kHzertz.

5.4.2 Channels installation

This screen allows you to install channels with few criteria.

- 1 Follow the same step as 5.4 **Installation** to the Installation menu.
- 2 Highlight the **Channels installation** and press **OK**.
- 3 Three items are available to configure the channel list: **Installation Type** the installation can be a new one (removing all current channels installed and all timers previously set) or can be an addition to the current installation.

Installation Mode the installation can be "standard" (full automatic scanning through the Receiver tuner) or "manual".

Channel Type a filter could be done on channels to install only scrambled ones, only free ones or all

5.5 Timers

By means of the timer setting, you can switch your Receiver on and off at a specific time, for instance, in order to allow for the recording with a video-tape recorder. The receiver then automatically switches on in the standby mode. If the receiver is already switched on, the receiver automatically switches to the selected program.


The timer can be set via the EPG "4.9 EPG" or via the "Timers" menu in the following section.

- To enter into **Timers** menu:
- 1 Press **MENU** to open the main menu.
 - 2 Highlight **Installation > Timers** and press **OK**.

During the recording, the Receiver is locked. All the remote control keys are inactive, and if present, the LED is blinking. You can unlock the Receiver during a recording by pressing **TIMER** then the **0**. The timer is cancelled.

If maturity level access control is activated, all access to timer feature request the PIN code.

All timers are deleted after a "new" installation.

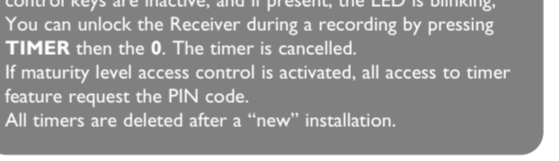

5.5.1 Add Timer

- 1 Follow the same step as 5.5 **Timers** to the Timer menu.
- 2 Highlight the **Add timer** and press **OK**.
- 3 Input all required parameters using numerical buttons and **◀▶**.



5.5.2 Modify timer from the list

This screen allows you to see the list of programmed timers and to modify them.

- 1 Follow the same step as 5.5 **Timers** to the Timer menu.
- 2 Highlight the **Modify timer from the list** and press **OK**.
- 3 Highlight the programmed timer and press **OK**. The same screen as "Add Timer" is displayed except that parameters of highlighted timer are automatically displayed. The behavior is the same as described in as "Add Timer".
- 4 A pop-up is displayed to allows you to confirm the deletion.

5.5.3 Delete timer from the list

- 1 Follow the same step as 5.5 **Timers** to the Timer menu.
- 2 Highlight the **Delete timer from the list** and press **OK**.
- 3 Highlight the programmed timer and press **OK**.
- 4 A pop-up is displayed to allows you to confirm the deletion.

5.5.4 Sleep timer

You can set a sleep timer to turn automatically the Receiver into standby mode after a while.

- 1 Follow the same step as 5.5 **Timers** to the Timer menu.
- 2 Highlight the **Sleep timer** and press **OK**.
- 3 Select the timer using **◀▶**. Few values are available: 15min, 30 min, 45min, 1hour, 2hours, 3hours of Off to disable this feature.

5.6 User Preferences

In User preferences, you are able to customize the Receiver. You can set your preferred languages, modify few visual features, activate/deactivate some locking and change the PIN code.

To enter into **User Preferences** menu:

- 1 Press **MENU** to open the main menu.
- 2 Highlight **User preferences** and press **OK**.

5.6.1 Languages

- 1 Follow the same step as 5.6 **User preference**.
- 2 Highlight the **Languages** and press **OK**.
- 3 Where you can select the menus language, the audio language and subtitles language via **◀▶**, and press **OK** once you confirm all the setting.

5.6.2 Appearance

This screen allows you to modify the appearance of information displayed during the viewing mode.

- 1 Follow the same step as 5.6 **User preference**.
- 2 Highlight **Appearance** and press **OK**.
- 3 Select the parameters according to your preference:

Banner Timeout allows you to set the duration of the display of banner in viewing mode, available values are from 3 to 10 seconds.

Volume bar display allows you to display or not the volume bar

Volume bar timeout allows you to set the duration of the display of the volume bar, available values are from 3 to 10 seconds.

Subtitle display allows you to display or not subtitles according to subtitle language.

5.6.3 Access control

The parental control item allows you to enable or disable the locking management.


- 1 Follow the same step as 5.6 **User preference**.
- 2



PHILIPS

1 Contrôles et composants

1.1 Contenu de la boîte

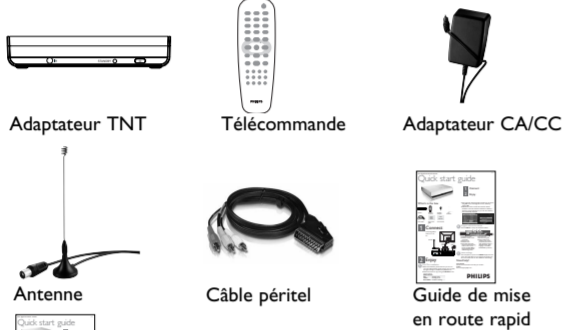

1.2 Panneau avant (voir figure 1)

- 1 Capteur infrarouge pour la télécommande
- 2 Mode veille LED Rouge mode veille, Vert marche, Orange programmation en cours
- 3 Veille marche/arrêt: Allume et éteint le récepteur

1.3 Panneau arrière (voir figure 1)

- 4 Antenne: Reçoit les signaux numériques de l'antenne.
- 5 Sortie audio/Sortie vidéo: Connecter vers votre TV ou votre appareil vidéo pour la sortie vidéo.
- 6 Entrée CC: Connectez l'adaptateur CA/CC fourni à votre TNT

1.4 Télécommande (voir figure 2)

- 1 **INFO** Affiche la barre d'informations sans changer la chaîne
- 2 **EXIT** Ferme la fenêtre appelée, par exemple la barre d'informations ou un menu
- 3 **OK** Valide un réglage
- 4 **Volume + / -** Appuyez sur + / - pour augmenter/diminuer le volume, avec variation de l'incrément à chaque appui.

- 5 **Boutons de couleur** Les boutons de couleur (respectivement rouge, vert, jaune et bleu) sont utilisés dans quelques sous-menus
- 6 **TV/STB** Non utilisé
- 7 **MENU** Affiche le menu RÉGLAGE
- 8 **TIMER/REC** Appuyez sur le bouton **TIMER/REC** pour ajouter une programmation. Appuyez sur le bouton **TIMER/REC** pour afficher la liste des programmations.

- 9 **Marche/Arrêt** Allume le récepteur ou le place en mode veille
- 10 **Bloc numérique** Bloc de touches pour saisir une valeur numérique
- 11 **EPG** Affiche le guide électronique des programmes
- 12 **BACK / P<P** Pendant la sélection d'une chaîne, appuyez sur P<P pour basculer entre les deux dernières chaînes sélectionnées

- 13 **Fèches** Touches de navigation haut/bas/gauche/droite
- 14 **Chaîne+ / -** Appuyez sur ces boutons pour, respectivement, passer à la chaîne suivante ou revenir à la chaîne précédente

- 15 **Silence** Désactive la sortie audio
- 16 **OPT** Affiche les options proposées par le programme TV
- 17 **TEXT** Télétexte
- 18 **LIST/FAV** Bascule entre les listes par défaut et les listes de favoris

- 19 **APP** Destiné à la sélection de sous-titre
- 20 **RADIO** Affiche la liste des chaînes radio. Pour réafficher la liste des chaînes TV, appuyez de nouveau sur ce bouton **RADIO**.
- 21 **I-II** Utilisé pour des sélections sonores, par exemple le choix de la langue.

- 22 **Précautions de sécurité** Lisez attentivement les recommandations suivantes pour utiliser votre équipement en toute sécurité.

Alimentation électrique

Alimentez électriquement votre récepteur uniquement avec l'adaptateur 9V fourni. N'ouvrez jamais le couvercle de l'adaptateur vous-même. Vous risquez de toucher de la haute tension et de mettre alors votre vie en danger. Pour toute intervention, faites appel à un centre de service.

Cordon d'alimentation électrique

Arrangez le cordon d'alimentation de façon à ce que personne ne puisse marcher dessus ni qu'il se trouve écrasé par des objets placés directement sur lui ou tout contre lui. Lorsque vous saisissez la prise du cordon, faites très attention au cordon d'alimentation, à la prise secteur et au point de sortie du récepteur.

Liquides

N'approchez aucun liquide de votre récepteur. Ne le placez pas dans un endroit où il risque de tomber dans de l'eau ou de recevoir de l'eau, ni ne posez dessus un récipient contenant un liquide, par exemple un vase.

Petits objets

N'approchez aucune pièce de monnaie et autre petit objet du récepteur: ils peuvent vous échauffer des mains et tomber précisément sur les ouvertures d'aération, avec le risque d'entrer dans l'appareil et de causer de graves dommages.

Nettoyage

Débranchez le récepteur de la prise secteur avant de le nettoyer. Nettoyez l'extérieur du récepteur avec un chiffon sec légèrement humide (ne le trempez pas dans un détergent).

Aération

Vous devez laisser un espace vide d'au moins 10 cm à droite et à gauche de l'appareil, et un espace vide d'au moins 15 cm au-dessus pour assurer une aération suffisante. Vérifiez que la pièce est suffisamment aérée. N'obstruez pas les ouvertures d'aération avec quoi que ce soit, par exemple un journal, une nappe, un tissu, un rideau, un tapis, etc.

Antenne

- Ne placez pas le récepteur et la télécommande sous les rayons directs du soleil
- Ne placez le récepteur sur une surface solide et stable
- Ne le posez pas dans un endroit trop humide, par exemple une cuisine, la condensation résultante pouvant perturber son bon fonctionnement, voire l'endommager

- Ne le posez pas sur un chauffage ou toute autre source de chaleur, cela risque de perturber son bon fonctionnement, voire l'endommager
- Prévoyez une circulation d'air suffisante pour évacuer l'air réchauffé par l'appareil en fonctionnement. Ne placez pas le récepteur dans une pièce fermée et ne le couvrez pas.

- Évitez tout contact du récepteur et de la télécommande avec de l'eau ou de l'humidité. Ne l'allumez pas à proximité d'une baignoire ou d'une piscine.
- Branchez le cordon d'alimentation du récepteur uniquement après avoir installé complètement le récepteur.











- Reliez l'antenne extérieure à la terre. Consultez pour cela les réglementations en la matière.
- Prévoyez une bonne circulation de l'air. Placez le récepteur dans une pièce suffisamment aérée pour lui éviter toute surchauffe.

- Ne posez aucune flamme nue, par exemple une bougie allumée, après avoir installé complètement le récepteur.
- Retirez les batteries de la télécommande si vous ne prévoyez pas de l'utiliser avant longtemps. Faute de quoi, les batteries risquent de fuir et d'endommager alors la télécommande.

- 5.6 Préférences utilisateur
- 5.6.1 Langues
- 5.6.2 Apparence
- 5.6.3 Contrôle d'accès

2 Connexion à d'autres appareils

Connexion du récepteur TNT à un poste de TV ou au lecteur de DVD portable.

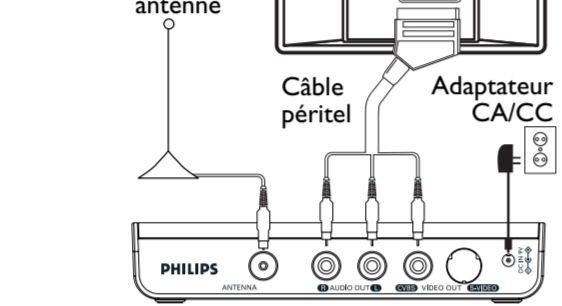

4.3 Changement de chaîne

Vous disposez de plusieurs méthodes pour changer de chaîne. Vous pouvez:

- Appuyer sur le bouton Chaîne + ou -
- Appuyer sur le bouton **Back/P<P** pour basculer entre les deux dernières chaînes sélectionnées.

Sélectionnez la nouvelle chaîne dans la liste des chaînes, reportez-vous à la page 4.11 **Sélecteur de chaîne**.

Saisir le numéro de la chaîne depuis le bloc numérique. Par exemple, pour accéder à la chaîne 0014, appuyez rapidement sur le bouton 1 puis sur le bouton 4. Ignorez les zéros en tête.

4.4 Contrôle du volume

Vous augmentez ou diminuez le volume à l'aide des boutons Volume + et -. Une barre vous indique le niveau actuel du son. Fonction Silence

Pour désactiver la sortie audio afin de ne plus entendre aucun son, appuyez sur le bouton **Silence**. Pour récupérer le son: Appuyez de nouveau sur le bouton **Silence**, ou Appuyez sur l'un des boutons de contrôle du volume.

4.5 Affichage de la barre d'informations

Appuyez sur le bouton **INFO** pour afficher la barre d'informations. Elle apparaît en bas de l'écran et indique:

- 1 Le nom de la liste des chaînes
- 2 Le numéro de la chaîne dans la liste utilisée
- 3 L'âge de l'audience
- 4 Le nom de la chaîne

- 5 Vous avez accès uniquement aux informations sur l'événement présent et l'événement suivant du service sélectionné. Par défaut, vous découvrez en premier l'événement présent. Pour passer aux informations sur l'événement suivant, appuyez sur les flèches **GAUCHE/DROITE** (elles sélectionnent, alternativement, l'événement présent et l'événement suivant).
- 6 L'heure actuelle
- 7 La barre de durée
- 8 Quelques icônes sur les spécificités du service (de gauche à droite Télétexte / chaîne verrouillée / langue audio / code / sous-titre TNT).
- 9 Qualité de réception: plus il y a de barres, meilleure est la réception.

- 1 TV
- 2 800
- 3
- 4
- 5
- 6
- 7
- 8
- 9










Pour obtenir plus d'informations sur les événements présent et suivant, appuyez de nouveau sur le bouton **INFO**.

4.6 Sélection TV/Radio

En mode affichage, appuyez sur le bouton Radio pour passer de la chaîne TV à la chaîne radio et réciproquement.

4.7 Sous-titre

Pour sélectionner la langue désirée pour les sous-titres, appuyez sur **APP** depuis le mode affichage. Une fenêtre contextuelle pour choisir la langue des sous-titres apparaît. Le choix d'une langue depuis cette fenêtre ne change la langue des sous-titres que pour la chaîne actuelle:



















4.1 Affichage de télétexte

- 1 Appuyez sur la touche **TEXT** pour afficher le télétexte.
- 2 Appuyez sur le bouton **EXIT** pour quitter le télétexte.
- 3 Pour masquer le télétexte complètement, appuyez sur **EXIT** ou **TEXT**.

Vous devez éventuellement appuyer encore sur la touche **OK** pour obtenir l'affichage du télétexte et pour déterminer si vous souhaitez utiliser le télétexte de votre téléviseur ou de l'adaptateur.

4.1.2 Sélecteur de chaîne

Pour activer le sélecteur de chaîne, appuyez sur le bouton **OK**. L'écran vous présente alors les chaînes des listes par défaut/listes de favoris. Pour regarder une chaîne de cette liste, mettez-la en surbrillance et appuyez sur le bouton **OK**. Le récepteur affiche la vidéo correspondante.



5.2 Réglage de l'heure

Vous disposez de deux méthodes pour définir l'heure locale: une automatique, ajustant l'heure d'après le signal reçu

- 1 une manuelle, ajustant l'heure d'après la valeur que vous saisissez
- 2 Appuyez sur le bouton **MENU** pour accéder au menu principal.
- 3 Mettez en surbrillance l'option "Configuration" et appuyez sur le bouton **OK**.
- 4 Mettez en surbrillance l'option "Réglage horloge" et appuyez sur le bouton **OK**.

- 5 Sélectionnez un mode à l'aide des flèches **GAUCHE/DROITE**.
- 6 En mode manuel, vous saisissez la date et l'heure directement depuis le bloc numérique.

5.2.3 Restauration des réglages en usine
Vous pouvez restaurer tous les réglages effectués en usine. Notez que cette fonction supprime les listes de favoris que vous avez vous-même créées.

- 1 Appuyez sur le bouton **MENU** pour accéder au menu principal.
- 2 Mettez en surbrillance l'option "Configuration" et appuyez sur le bouton **OK**.
- 3 Mettez en surbrillance l'option "Réglages usine" et appuyez sur le bouton **OK**. (Le récepteur démarre à nouveau).
- 4 Effectuez une "Installation initiale" (reportez-vous à la section 4.2)

5.3 Nouvelles chaînes

Si le récepteur détecte de nouvelles chaînes alors qu'il est en veille, il vous le signale dès que vous le réactivez.

- 1 Appuyez sur le bouton **MENU** pour accéder au menu principal.
- 2 Mettez en surbrillance l'option "Nouvelles chaînes" et appuyez sur le bouton **OK**.

5.4 Installation

Ce menu vous permet d'accéder au menu **Informations signa** et au menu **Installation** des chaînes.

- 1 Appuyez sur le bouton **MENU** pour accéder au menu principal.
- 2 Mettez en surbrillance l'option "Programmations" et appuyez sur le bouton **OK**.

5.4.1 Informations signa

Depuis cet écran, vous ajustez votre antenne terrestre. Deux diagrammes sont affichés. Le premier indique la puissance du signal, le second indique la qualité du signal mesurée en taux d'erreur sur les bits (BER, Bit Error Rate).

- 1 Procédez comme indiqué dans la section "5.4 Installation" jusqu'à accéder au menu installation.
- 2 Mettez en surbrillance l'option "Informations signa" et appuyez sur le bouton **OK**.
- 3 Vous pouvez tester la qualité des différentes chaînes en les sélectionnant à l'aide des flèches **GAUCHE/DROITE** ou en saisissant leur numéro depuis le bloc numérique. La fréquence correspondante est affichée en KHz.

5.4.2 Installation des chaînes

Depuis cet écran, vous installez toutes les chaînes avec quelques critères.

- 1 Procédez comme indiqué dans la section "5.4 Installation" jusqu'à accéder au menu installation.
- 2 Mettez en surbrillance l'option "Installation des chaînes" et appuyez sur le bouton **OK**.
- 3 Trois paramètres de configuration de liste de chaînes vous sont proposés:

Type d'installation vous pouvez effectuer une nouvelle installation (les chaînes installées et les programmations précédemment définies sont alors supprimées) ou compléter l'installation actuelle.

Mode d'installation vous avez le choix entre une installation "standard" (recherche automatique exhaustive via le récepteur) ou "manuelle".

Type de chaîne vous pouvez appliquer un filtre pour n'installer que les chaînes payantes, que les chaînes gratuites ou les deux.

5.5 Programmations





La fonction de programmation vous permet de mettre en marche ou éteindre votre récepteur à une heure spécifique, par exemple pour enregistrer une émission sur votre enregistreur vidéo. Le récepteur se place automatiquement en mode veille. Si le récepteur est déjà allumé, il se connecte automatiquement à l'émission sélectionnée.

Vous créez une programmation depuis le guide EPG (reportez-vous à la section "4.9 Guide électronique des programmes") ou depuis le menu "Programmations" comme indiqué ci-dessous.

- 1 Appuyez sur le bouton **MENU** pour accéder au menu principal.
- 2 Sélectionnez l'option **Installation > Programmations** et appuyez sur le bouton **OK**.

Pour accéder au menu Programmations:

- 1 Appuyez sur le bouton **MENU** pour accéder au menu principal.
- 2 Sélectionnez l'option **Installation > Programmations** et appuyez sur le bouton **OK**.



5.5.4 Programmation d'une mise en veille

Vous pouvez programmer votre récepteur pour qu'il se mette automatiquement en veille après un certain délai.

- 1 Procédez comme indiqué dans la section "5.5 Programmations" jusqu'à accéder au menu Programmation.
- 2 Mettez en surbrillance l'option "Programmer veille" et appuyez sur le bouton **OK**.
- 3 Sélectionnez la programmation à l'aide des flèches **GAUCHE/DROITE**. Vous avez le choix entre: 15 min, 30 min, 45 min, 1 heure, 2 heures, 3 heures et Arrêt pour désactiver cette fonction.

5.6 Préférences utilisateur

Le menu Préférences utilisateur vous permet de personnaliser votre environnement récepteur. Vous sélectionnez une langue, modifiez les caractéristiques d'affichage, activez/désactivez certains verrouillages et modifiez le code PIN.

- 1 Appuyez sur le bouton **MENU** pour accéder au menu principal.
- 2 Mettez en surbrillance l'option "Préférences utilisateur" et appuyez sur le bouton **OK**.

5.6.1 Langues

- 1 Procédez comme indiqué dans la section "5.6 Préférences utilisateur".
- 2 Mettez en surbrillance l'option "Langues" et appuyez sur le bouton **OK**.
- 3 Sélectionnez les flèches **GAUCHE/DROITE** pour définir la langue des menus, la langue audio et la langue des sous-titres. Appuyez sur le bouton **OK** pour valider vos choix.

5.6.2 Apparence

Depuis cet écran, vous modifiez l'apparence des informations affichées en mode affichage.

- 1 Procédez comme indiqué dans la section "5.6 Préférences utilisateur".
- 2 Mettez en surbrillance l'option "Apparence" et appuyez sur le bouton **OK**.
- 3 Choisissez les valeurs que vous désirez pour les paramètres: **Durée affichage barre infos** définit la durée d'affichage de la barre d'informations, entre 3 et 10 secondes. **Barre de volume** active/désactive l'affichage de la barre de volume.

Durée affichage barre de volume définit la durée d'affichage de la barre de volume, entre 3 et 10 secondes.

Afficher sous-titre active/désactive l'affichage des sous-titres dans la langue choisie.

5.6.3 Contrôle d'accès

Le contrôle parental vous permet d'activer ou désactiver la gestion des verrouillages.

- 1 Procédez comme indiqué dans la section "5.6 Préférences utilisateur".
- 2 Mettez en surbrillance l'option "Contrôle d'accès" et appuyez sur le bouton **OK**.
- 3 Choisissez les valeurs que vous désirez pour les paramètres: **Contrôle parental** Si vous désactivez le contrôle parental, tous les verrouillages sont annulés. Si vous l'activez, tous les verrouillages choisis sont appliqués. **Verrouillage récepteur** Activez cette fonction pour exiger la saisie du code PIN à chaque activation du récepteur (lorsque vous l'activez depuis le mode veille).

Verrouillage menu configuration bloque l'accès à ce menu et à toutes les sous-fenêtres associées.

Verrouillage chaîne Bloque l'accès à un service spécifique (le code PIN vous est demandé pour accéder à un service verrouillé). Pour verrouiller/déverrouiller un service, reportez-vous à la section "5.1.2 Modifier une liste de favoris".

Age d'audience Vous pouvez choisir un âge minimal d'accès, entre 1 et 18 ans. Tout service s'adressant à une population plus âgée est alors inaccessible sans la saisie du code PIN. L'application de ce contrôle n'est possible que si l'organisme de diffusion indique à quelle tranche d'âge son émission s'adresse.

Si vous activez le contrôle d'accès d'après l'âge de l'audience, le code PIN sera exigé pour accéder à toute fonction de programmation.

- 4 Pour modifier le code PIN, appuyez sur le bouton **Par défaut**, le code PIN du récepteur (celui qui lui est affecté après une "Installation initiale" ou une "Restauration des réglages en usine") est: "0000".
- 5 Saisissez une première fois le nouveau code PIN désiré puis une seconde fois dans la zone Confirmer.

6 Dépannage

Problème	Cause possible	Solution
Aucun service n'est affiché à l'écran	Fortes interférences	Vérifiez que votre zone d'utilisation est couverte par la transmission. Vous pouvez trouver cette information sur le site Web www.philips.com/support
Service TV payant	Sélection incorrecte des chaînes	Repositionnez votre antenne ou trouvez un emplacement avec moins d'interférence pour le récepteur
Aucun service n'est possible en déplacement à une vitesse supérieure à 50		