


PHILIPS

Shaver

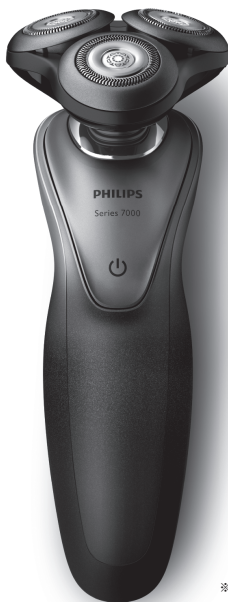

※この写真の製品はS7970/26です

フィリップス 電動シェーバー

品番 **S7970/26, S7930/16,
S7910/16**

取扱説明書

フィリップス シェーバーをお買い上げいただき、まことにありがとうございます。長い間で愛用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。

また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

商品のご確認

商品をご確認ください。




本体




洗浄充電器
[スマートクリーン(乾燥機能無)]

●JC5107

※S7970/26のみ

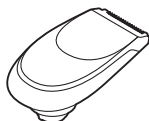

トリマー

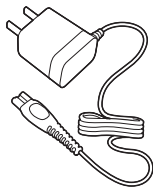

充電アダプタ




クリーニングカートリッジ

※S7970/26のみ



クリーニングブラシ



収納ケース

※改良の為、仕様を予告なく変更することがあります。

■品番別 付属品一覧

お買い上げの商品によって付属品が異なります。

該当する品番を下記の一覧よりお選びいただき、付属品をご確認ください。

付属品 \ 品番	S7970/26	S7930/16	S7910/16
収納ケース	●	●	●
充電アダプタ	●	●	●
トリマー	●	●	●
クリーニングブラシ	●	●	●
洗浄充電器 (JC5107)	●	—	—
クリーニングカートリッジ	●	—	—

お買い上げのお客様へ

初めてご使用になる際は、ご使用前に充電してください。

洗淨充電器付きモデルお買い上げのお客様へ

●洗淨充電器に関して

出荷時は洗淨充電器キャップがロックされているため、シェーバーをセットできません。キャップ部をクリックしてロックをはずしてからシェーバーをセットしてください。

●クリーニングカートリッジに関して

フィリップスの専用クリーニングカートリッジをご使用ください。フィリップスの専用クリーニング液(ボトルタイプ)を入れてご使用いただくことはできません。

目次

●はじめに	商品のご確認 1・2
	目次 4
	必ずお守りください 5~7
	各部の名称 8・9
	LED表示について 10~12
	充電の仕方 13
●ご使用方法	アプリの使い方 14~16
	シェービングの仕方 16~18
	トリマーの使い方 19
	お手入れ方法 20~25
	保管の仕方 25
	刃の交換 26
●廃棄について	シェーバーを廃棄するとき 27
●困ったとき	故障かな?と思ったら 28~30
●英文解説	Guidance in English 31~64
●保証	保証とアフターサービス 67
	仕様 68
	無料修理規定 70
	保証書 最終ページ

必ずお守り ください

安全上のご注意

- ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。
- 誤った取扱いをしたときに想定される内容を「警告」と「注意」とに区分けしています。

○絵表示について



記号は、「警告、注意」を示します。
図の中や近くに具体的な注意内容を示します。



警告 人が死亡または重傷を負う可能性が想定される内容。



注意 人が傷害を負う可能性及び物的損害のみの発生が想定される内容。

○絵表示の例



●記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。



●記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容(左図の場合は電源プラグをコンセントから抜くこと)を示します。

警告



●シェーバー本体・洗浄充電器ならびに充電アダプタは改造しないでください。また、修理技術者以外の人は、分解したり修理をしないでください。火災、感電、ケガの原因となります。修理はフィリップスサポートセンターにお問い合わせください。



●お手入れの際は必ず充電アダプタの電源プラグをコンセントから抜いてください。また、濡れた手で抜き差ししないでください。感電やケガをすることがあります。



●充電アダプタが傷んだり、コンセントの差込みが緩いときは使用しないでください。感電・ショート・発火の原因になります。



●乳幼児の手の届くところに本製品を置かないでください。



●充電アダプタ、洗浄充電器を水につけたり、水をかけたりしないでください。故障や、ショート・感電の原因になります。



●充電アダプタを傷付けたり、電源コードを無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重い物を載せたり、挟み込んだり、加工したりしないでください。電源コードが破損し、火災・感電の原因となります。








●充電アダプタには変圧器が内蔵されています。充電アダプタを切り離して別のプラグに接続するのは危険ですのでおやめください。









●自分で意思表示できない人(幼児を含む)に使用させないでください。また、お体の不自由な人だけでは使用しないでください。

警告

-  ●水の近くや湿度の高い場所でスマートフォンを取り扱う場合は十分注意してください。
-  ●Bluetooth搭載機器が発する短波無線周波数信号は、他の電子機器および医療装置の動作に影響を及ぼすことがあります。
-  ●使用が禁止されている場所では、BluetoothをOFFにしてください。
-  ●本製品は、病院、航空機、ガソリンスタンドなど燃料補給施設の中、自動ドア、自動火災報知機、その他自動制御機器の周辺では使用しないでください。
-  ●本製品は、心臓ペースメーカーおよびその他の医療装置から20cm以上離して使用してください。電波は、心臓ペースメーカーおよびその他の医療装置の動作に影響を及ぼすことがあります。

注意


-  ●充電アダプタの電源プラグを抜くときは、電源コード部を持たずに必ず先端の電源アダプタ部を持って引き抜いてください。感電やショートして発火することがあります。
-  ●電源コネクタ受部にピンやごみを付着させないでください。感電・ショート・発火の原因になります。
-  ●充電時または洗浄充電器の使用時以外は、充電アダプタをコンセントから抜いてください。ケガややけど、絶縁劣化による感電・漏電・火災の原因となります。
-  ●刃は強く押さえないでください。破損して皮膚を傷つけることがあります。
-  ●刃が破損または故障した場合は、本製品を使用しないでください。ケガの原因になります。交換の際には必ずフィリップス社製の同型部品とお取り替えください。
-  ●充電アダプタは付属の専用アダプタを使用してください。また付属の専用アダプタで他の商品を充電しないでください。ショート、異常発熱による発火の原因になります。破損、故障した場合は、事故を避けるために必ずフィリップス社製の同型充電アダプタをお求めください。

使用上のご注意


1. 本製品はヒゲ(あごヒゲ、口ヒゲ、もみあげなど)の長さを整えたり、シェービングするためのものです。それ以外の目的で使用しないでください。
2. フィリップスシェーバーを初めてお使いの方は、剃り方に慣れるまで2~3週間かかることがあります。
3. 60℃以上の水でシェーバーを洗浄しないでください。
4. 本製品の使用、充電、保管は室温5℃~35℃の環境下で行ってください(尚、低温や高温で充電すると、充電電池の寿命が短くなります)。
5. 外刃は、薄く仕上げてありますので、刃部を強く押さえたり、硬いものに当たらないよう、ていねいに扱ってください。
6. シェービングユニット・トリマーの清掃や着脱は、必ず電源をOFFにしてから行ってください。
7. 切れ味が衰えてきたり、刃が破損した場合は、使用せず必ず新しいシェービングヘッドと交換してください。
8. 直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。
9. 乳幼児の手の届かないところに保管してください。
10. シェーバー本体は防水加工をしておりますが、水や液体の中に浸けないでください。
11. クリーニングカートリッジ内のクリーニング液を万一飲み込んだり、目に入った場合は医師に相談してください。
12. シェービングユニットは、クリーニング表示(蛇口マーク)が表示された場合、お手入れ方法(P20~25)に従って掃除してください。
13. 洗浄充電器は平らな所に設置してご使用ください。
14. クリーニングカートリッジ内にクリーニング液が入っている状態で、洗浄充電器を移動させないでください。
15. プラグ式消臭・芳香剤を使用しているコンセント、あるいはその近くのコンセントに充電アダプタを接続しないでください。充電アダプタを傷める原因となります。

※付属品は品番により異なります。
品番ごとの付属品はP1、P2をご参照
ください。

各部の名称

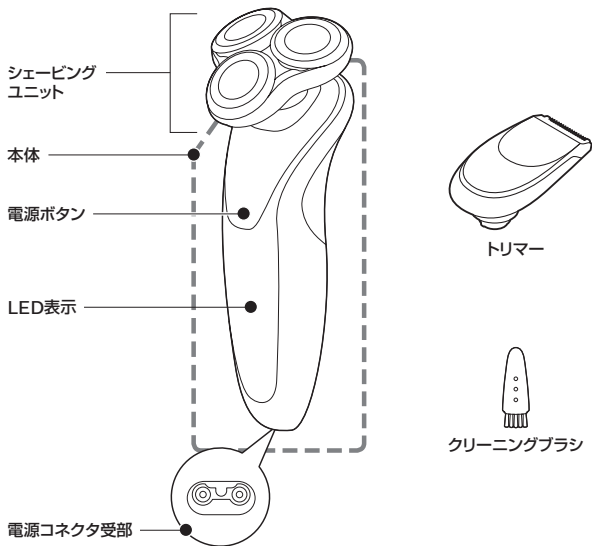

●シェービングユニット

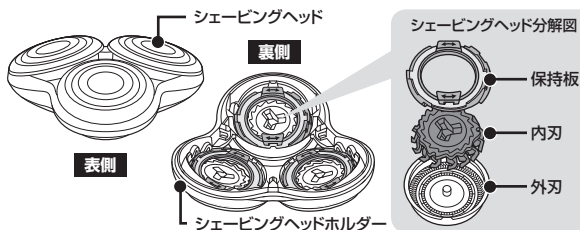


(替刃品番: SH70)


出荷時は洗浄充電器キャップがロックされているため、シェーバーをセットできません。キャップ部を押してロックをはずしてからシェーバーをセットしてください。

洗浄充電器 (JC5107)

【スマートクリーン(乾燥機能無)】※S7970/26のみ

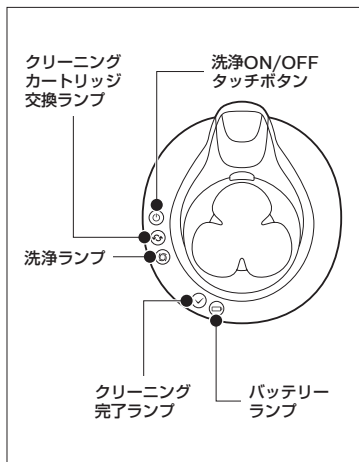


洗浄充電器キャップ

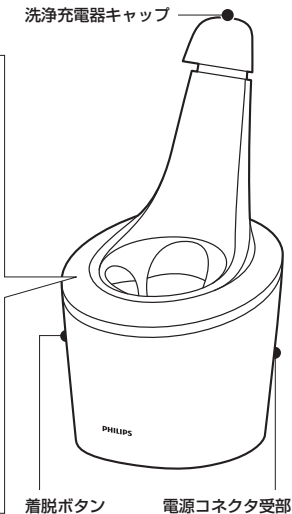

クリーニングカートリッジ
※S7970/26のみ



収納ケース

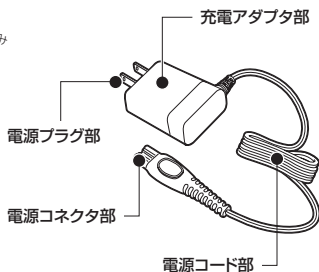


初めてお使いになるときや、長い間ご使用にならなかったときは、LED表示が出るまでに時間がかかる場合があります。

LED表示について


主な表示(本体)

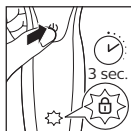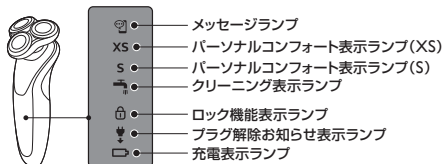


- ロック機能(カギマークが表示されていると電源は入りません)**
電源ボタンを約3秒長押しすると、カギマークが表示されてロックがかかります。再度約3秒長押しすると解除できます。充電アダプタに接続するか、洗浄充電器に本体を置くと、ロックは自動的に解除されます。

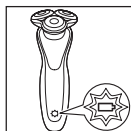


- 充電表示(充電アダプタで充電する場合)**
充電中は充電表示ランプが点滅します。

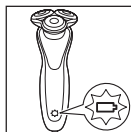

- 充電完了表示**
充電が完了すると、充電表示ランプが点灯します。満充電後、約30分経過すると充電表示ランプが消えます。
※充電中に電源ボタンを押すと、プラグ解除お知らせ表示ランプが点滅します。

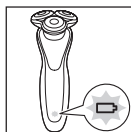


- 充電催促表示**
動作中に充電残量が少なくなると(使用可能時間が残り約5分以下)、充電表示ランプがオレンジ色に点滅します。電源をOFFにすると、充電表示ランプが数秒間オレンジ色に点滅後、消灯します。

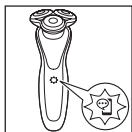

●メッセージランプ表示

スマートフォンの操作設定用アプリが重要なメッセージを受信すると、シェーバー本体のメッセージランプが点灯してお知らせします。本体のメッセージランプが点灯したら、スマートフォンでフィリップスメンズグルーミングアプリを開き、指示に従ってメッセージを確認してください。


※シェービングヘッドの交換時期をフィリップスメンズグルーミングアプリが受信した場合も、メッセージランプが点灯してお知らせします。

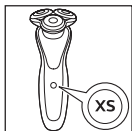

●パーソナルコンフォート表示


ヒゲの濃さや肌タイプに合わせて最適なモードを設定(P16)できます。モードを選択するとパーソナルコンフォート表示が点灯し、選択中のモードをお知らせします。

※パーソナルコンフォートの設定には、フィリップスメンズグルーミングアプリが必要です。

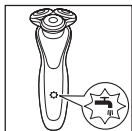


●クリーニング表示

電源をOFFにすると、クリーニングをうながすために蛇口マークが点滅します。「お手入れ方法」(P20~25)をご参照ください。

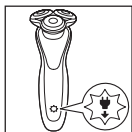

●プラグ解除お知らせ表示

充電アダプタに接続している時に電源ボタンを押すとプラグ解除お知らせ表示ランプが点滅します。ご使用の際は、充電アダプタをシェーバー本体からはずしてご使用ください。

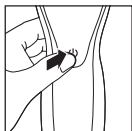

●Bluetooth接続表示

Bluetoothは、シェーバーの電源をONにすると自動的に起動し、スマートフォンとの接続を開始します。

※お持ちのスマートフォンに、4.1以降のBluetoothがインストールされていることを確認してください。

※Bluetooth接続にはスマートフォンとのペアリング(P14)が必要です。

洗浄充電器の主な表示説明



●JC5107

※S7970/26のみ

●洗浄ランプ



洗浄中は洗浄ランプが点灯します。
洗浄時間は約10分です。

●クリーニング完了ランプ



クリーニングプログラムが終了すると点灯します。

●バッテリーランプ





シェーバーの充電中はバッテリーランプが点滅し、
充電が完了すると点灯します
(充電時間は約1時間です)。

●クリーニングカートリッジ交換ランプ



クリーニングカートリッジの交換をうながすために
赤色に点滅します。

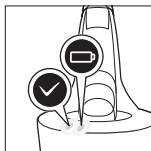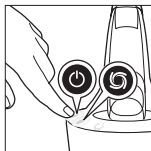

充電の仕方

浴室で充電をしないでください。

お客様による充電電池の交換はできません。

この商品は通常1時間充電です。

満充電で約50分使用できます。

※充電しながらシェービングはできません。

初めてお使いになるときや、長い間ご使用にならなかったときは、充電しないと使用できません。ご使用前に充電してください。充電時間は約1時間です。充電開始後数分間、充電表示ランプが点滅しないことがあります。そのまま充電すると充電表示ランプが点滅します。海外(100~240V)でのご使用も可能です。ただし、コンセントの形状や電圧など現地で充分お確かめのうえご使用ください。

※本製品はリチウムイオン電池を使用しているため、ご使用の都度充電をしても充電電池の寿命には影響ありません。

充電アダプタで充電する場合

- 1 シェーバー本体の電源がOFFになっていることを確認してください。
- 2 充電アダプタの電源コネクタ部をシェーバー本体の電源コネクタ受部に差し込みます。
- 3 ご家庭のコンセントに充電アダプタの電源プラグ部を差し込みます。



クイックチャージ

充電残量が0の状態では充電アダプタで充電するとシェービング1回分が急速充電されます。

※クイックチャージ中は充電表示ランプが高速点滅します。


※クイックチャージが完了すると通常の充電が行われます。その際、充電表示ランプがゆっくり点滅します。

洗浄充電器で充電する場合 ※S7970/26のみ

- 1 充電アダプタの電源コネクタ部を洗浄充電器の電源コネクタ受部に差し込みます。
- 2 ご家庭のコンセントに充電アダプタの電源プラグ部を差し込みます。
- 3 シェーバー本体のLED表示を後ろ向きにし、シェービングユニットを downward 向きにして洗浄充電器にセットします(図①)。洗浄充電器キャップを下に押しとシェーバーがロックされ通電されます(図②)。充電が開始されると洗浄充電器のバッテリーランプと洗浄ON/OFFタッチボタンが点滅します。

出荷時は洗浄充電器キャップがロックされているため、シェーバーをセットできません。キャップ部を押してロックをはずしてからシェーバーをセットしてください。

※シェーバーを取り外す際にはもう一度キャップ部を押してロックをはずしてから取り外してください。



※シェーバーをセットするときに刃を傷つけないよう十分に気をつけてください。

※通常の目安として満充電で1日3分使用し、約16日間使用できますが、ご使用状況(使用時間ヒゲの濃さなど)により変わります。



注意

- 専用の充電アダプタ以外での充電は行わないでください。
- 長時間使用しない場合は、充電電池が過放電や液漏れして使えなくなることがあります。3~4カ月に一度は充電してください。
- 本製品を24時間以上コンセントに接続したままにしないでください。

アプリの 使い方

フィリップスメンズグルーミングアプリの機能




本製品はお持ちのスマートフォンと連携し、フィリップスメンズグルーミングアプリをご利用いただくことができます。本アプリはお客様一人ひとりに合った上手なシェービングの方法をお知らせいたします。理想的なシェービングのため、フィリップスメンズグルーミングアプリをぜひご活用ください。

接続、操作設定	スマートフォンとシェーバーのペアリングや、パーソナルコンフォート設定の操作に使用します。
シェービングの アドバイス	ガイドシェービング(リアルタイム) シェービングユニットの動きをリアルタイムで感知し、最適なシェービングをお知らせします。
	同期シェービング シェーバーに保存された過去のシェービングデータ(最大20件保存)をもとに、お客様に適したシェービングのアドバイスやカスタマイズプログラムをご提供します。


※最初はガイドシェービングから始め、シェービング経験を重ねることをおすすめします。シェーバーを正しく取り扱うことで、最高のシェービング結果を得ることができます。

フィリップスメンズグルーミングアプリの詳細は、www.philips.com/s7000-supportを確認してください。

シェーバーとスマートフォンのペアリング (初期設定)

- 1 スマートフォンで App Storeもしくは Google Playにアクセスし、「フィリップスメンズグルーミングアプリ」と検索してアプリをダウンロードします。
- 2 スマートフォンの Bluetooth 設定が ONになっていることを確認し、シェーバーの電源を ON にします。
- 3 スマートフォンのフィリップスメンズグルーミングアプリを起動し、画面の指示に従ってペアリングを開始してください。
※シェーバー1台に対してペアリングできるスマートフォンは1台のみです。
- 4 ペアリングが完了すると、フィリップスメンズグルーミングアプリを開いたときにシェーバーとスマートフォンが自動的に接続されます。
※アプリを活用したシェービングを行う場合は、スマートフォンの Bluetooth 設定を ON にしてください。

Bluetoothの接続とシェービングデータの同期

- 1 スマートフォンのBluetooth設定がONになっていることを確認し、スマートフォンのフィリップスメンズグルーミングアプリを開きます。
- 2 シェーバーとスマートフォンのペアリング(初期設定)が完了している場合(P14)、本製品と操作設定用アプリは自動的に接続されます。これでフィリップスメンズグルーミングアプリを利用したシェービングができます。
- 3 スマートフォンのフィリップスメンズグルーミングアプリを起動し、ヒゲの濃さや肌に合わせて、パーソナルコンフォートのモードを選択してください。
- 4 シェーバーに保存されているシェービングのデータをアプリと同期させるため、スマートフォンのBluetooth設定がONになっていることを確認し、スマートフォンとシェーバーを近づけてください。

シェーバー本体には、過去のシェービングデータを最大20件まで保存できます。データの消失を防ぐため、シェービングを行ったら20回以内に、シェーバーとペアリングしたスマートフォンを同期させてください。

ペアリングの解除

【スマートフォンでの解除】

スマートフォンの「設定」を開いて、Bluetoothを選択します。次に画面に表示されるシェーバーの品番を選択して、「接続解除」または「このデバイスの登録を解除」を押します。

※ペアリングを解除する方法は、スマートフォンの機種によって異なる場合があります。詳しいことについては、お使いのスマートフォンの取扱説明書をご覧ください。



【シェーバーでの解除】

ハンドルにある電源ボタンを約10秒間押し解除します。

※ペアリングが解除されると、メッセージランプが短く点灯します。



注意

- フィリップスメンズグルーミングアプリを使用するためには、Bluetoothとインターネットの接続が必要です。
- スマートフォンは水の近くや湿度が高い場所では使用しないでください。水や高い湿度はスマートフォンに損傷を与えることがあります。
- 最新の対応OSはウェブの製品ページよりご覧いただけます。
- タブレットではお使いになれません。
- 一部の機種では正常に動作しない場合があります。
- App StoreもしくはGoogle Playにアクセスして、お手持ちのデバイスが対応機種であることをご確認ください。

※Apple、Appleロゴ、iPadおよびiPhoneは、アメリカおよびその他の国におけるApple Inc.の登録商標です。App Storeは、Apple Inc.のサービスマークです。

※AndroidはGoogle Inc.の商標です。Google PlayおよびGoogle PlayロゴはGoogle Inc.の商標です。

※Bluetooth®のワードマークおよびロゴはBluetooth SIG, Inc.が所有する登録商標であり、Koninklijke Philips N.V.またはその関連会社は、これらのマークをライセンスに基づいて使用しています。その他の商標や商品名はそれぞれの所有者に帰属します。

パーソナルコンフォート設定

肌タイプに合わせて3種類の設定の中から自分の好みに合わせて選択することができます。設定はスマートフォンのフィリップスメンズグルーミングアプリで変更できます。

表示	モード	使用シーン
XS	超敏感肌	超敏感肌をいたわりながら優しくシェービング
S	敏感肌	敏感肌にもやさしいソフトな剃り心地
—	普通肌	普通肌をしっかり剃り上げる

肌が乾いた状態でのシェービングの仕方です。

シェービングの仕方 (ドライ)

ご使用の際は本体から充電アダプタを抜いてご使用ください。接続されていると作動しません。



警告

シェーバー本体は防水加工をしており、浴室でも使用できますが、水や液体の中に浸けないでください(故障の原因となります)。

- モーターの始動時、微弱な振動がシェーバー本体に伝わりますが、問題はありません。
- ほこりなどで肌が汚れている場合、ふきとってからご使用ください。
- ご使用前に外刃の破れや変形がないか確認してください(外刃に破れや変形があると肌を傷つける原因になります)。
- ヒゲ剃り以外の目的(頭髮など)には、使用しないでください。

1 電源ボタンを押し電源をONにします。

※カギマークが表示される場合はロック機能がONになっています。ロックを解除してから電源をONにしてください。



2 刃を肌に軽く押しあて、円を描くように動かしながら剃ります。



3 シェービング後は電源ボタンを押し、電源をOFFにします。


**上手に
剃るには**

肌に強く押しつけるのではなく、軽く押しあてて円を描くように回転させながら剃るのがコツです。




ほお

肌を伸ばし、ヒゲを立たせるように円を描くように小さく回転させながら剃ります。

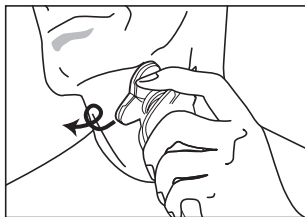


あごの裏側

刃を肌に軽くあて、図のようにあごを上げて円を描くように小さく回転させながら剃ります。

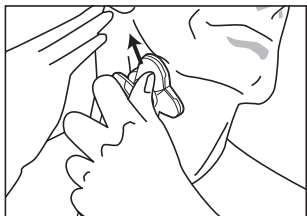

ほおの奥から首筋

片方の手で肌を後ろに引っ張りながら剃ります。

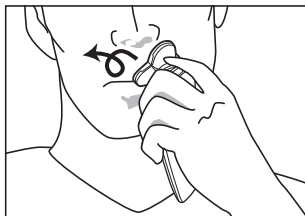

鼻の下

鼻の下を伸ばし、円を描くように小さく回転させながら剃ります。

フィリップスのシェーバーを初めてお使いの方は、剃りに慣れるまで2～3週間かかることがあります。初めてのシェービングで思い通りの結果が得られないことや、少し肌にヒリヒリ感が残る場合がありますが、これは普通のことです。フィリップスのシェーバーに限らずシェービング方法を変える時には、肌もヒゲも新しいシェービング方法に慣れる時間が必要です。新しいシェーバーに肌を慣らす為、まずは3週間このシェーバーを使い続けてみてください(最低でも1週間に3回以上)。この3週間は、あまりシェービング方法を変えたりせず、同じシェーバーで肌を慣らすことが大切です。

シェービングフォームやシェービングジェルを使ったシェービングの仕方です。剃った部分を実感しながら、なめらかなシェービングができます。

シェービングの 仕方(ウェット)



警告

シェーバー本体は防水加工をしており、浴室でも使用できますが、水や液体の中に浸けないでください(故障の原因となります)。

- モーターの始動時、微弱な振動がシェーバー本体に伝わりますが、問題はありません。
- ご使用前に外刃の破れや変形がないか確認してください(外刃に破れや変形があると肌を傷つける原因になります)。
- ヒゲ剃り以外の目的(頭髪など)には、使用しないでください。
- 石けんもお使いいただけますが、肌の上での滑りをよくするため、シェービングフォームやジェルの使用をお勧めします。

1 顔を濡らし、市販のシェービングフォームまたはシェービングジェルを付けます。

2 シェービングヘッドを水で濡らし、肌の上でなめらかに動くようにします。

3 電源ボタンを押し電源をONにします。
※ロック機能表示ランプが点滅している場合はロック機能がONになっています。ロックを解除してから電源をONにしてください。

4 刃を肌に軽く押しあて、円を描くように動かしながらかります。
シェービングフォームやシェービングジェルにより、鏡を見た時に剃った部分を確認しやすくなります。

※途中、よりなめらかにシェービングするために、シェービングヘッドを水で濡らすと効果的です。



5 シェービング後は電源ボタンを押し、電源をOFFにします。

6 シェーバーをきれいに洗います(P20～25「お手入れ方法」)。

※シェービングフォームやシェービングジェルの使用後に、洗浄充電器で洗浄をされる場合は、ぬるま湯または水でしっかりと洗い流してください。

【重要】

シェービング後は、シェービングフォームやシェービングジェルがしっかりと洗い流されているかを確認してください。お手入れが不十分な場合、臭いが出るばかりでなく、故障の原因にもなります。

トリマーの使い方

トリマーはヘアライン、もみあげ、ヒゲなどを整えるのに便利です。


- 1 シェービングユニットのはずし方
シェービングユニットを本体からはずします。

※シェービングユニットは、回さずにまっすぐ引き抜いてください。

※電源がOFFになっていることを確かめてください。




- 2 トリマーの突起部(図①)をシェーバー上部の溝(図②)に合わせ、カチッと音がするまで押し込み(図③)、本体に取り付けます。電源をONにすると、トリマー先端の刃が往復してカットします。

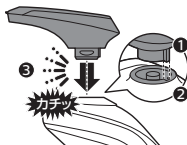


- 3 鏡を見ながらトリマーをカットしたいところに直角にあたるようにしてください。一度に切らずに、少しずつカットしてください。



- 4 シェービングユニットのつけ方
トリマーをはずし(図①)、シェービングユニットの突起部(図②)をシェーバー上部の溝(図③)に合わせ、カチッと音がするまで押し込み(図④)、本体に取り付けます。

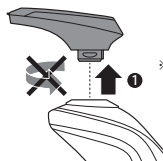

※トリマーは、回さずにまっすぐ引き抜いてください。

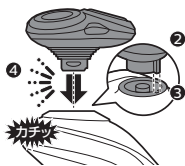

※トリマーの切れ味を保つため、使用後は必ずぬるま湯または水ですすぎ洗いをしてください(P25「トリマーのお手入れ方法」)。



注意

あまり押し当て過ぎると肌を傷めますのでご注意ください。

シェービング後は、水洗いのお手入れもできませんが、洗浄充電器によるお手入れもできます。水洗いの場合は、P23・24をご参照ください。

出荷時は洗浄充電器キャップがロックされているため、シェーバーをセットできません。キャップ部を押してロックをはずしてからシェーバーをセットしてください。

シェーバーをご使用の都度、洗浄充電器で洗浄、充電をしていただいても、シェーバー本体や洗浄充電器に問題はありません。

お手入れ方法

洗浄充電器を使ったお手入れ方法 ※S7970/26のみ

- ※シェービングフォームやシェービングジェルの使用後に、洗浄充電器で洗浄をされる場合は、ぬるま湯または水でしっかりと洗い流してください。
- ※洗浄充電器には、専用クリーニングカートリッジ以外は使用しないでください。専用クリーニングカートリッジに水を足されたり専用クリーニングカートリッジの代わりに水や他の液を使用すると、故障の原因となりますのでお止めください。
- ※フィリップスの専用クリーニングカートリッジをご使用ください。フィリップスの専用クリーニング液（ボトルタイプ）を入れてご使用いただくことはできません。


洗浄充電器の準備（クリーニングカートリッジの入れ方）

液漏れする場合がありますので洗浄充電器を傾けないでください。
準備する際には洗浄充電器をしっかりと手をつかんでください。


1 洗浄充電器の電源コネクタ受部に充電アダプタの電源コネクタ部を差し込み、電源プラグ部をご家庭のコンセントに差し込みます。

2 洗浄充電器の側面にある着脱ボタンを押すと（図①）、洗浄充電器本体が持ち上がります（図②）。

※クリーニングカートリッジご使用の目安として週1回洗浄充電器で洗浄した場合、最大3カ月使用できます。ご使用状況（ヒゲの濃さなど）により変わります。




3 クリーニングカートリッジのシールを剥がし、下図のように洗浄充電器本体に装着し、持ち上げていた洗浄充電器本体をカチッと音がするまで下げます。

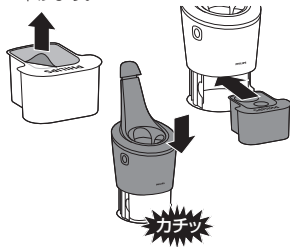

注意

クリーニングカートリッジ内のクリーニング液がこぼれた場合にはすぐ拭き取ってください。皮革製品やフローリングなどに付くと変色する場合がありますので、ご注意ください。

洗浄充電器の動作について

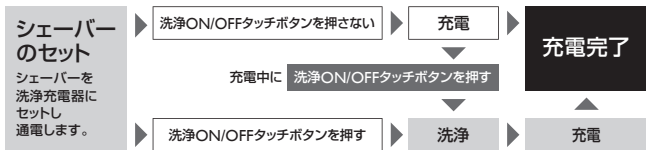

※ 洗浄中は洗浄ON/OFFタッチボタンを押さないでください。途中で洗浄ON/OFFタッチボタンを押すと誤動作となり故障の原因となります。

洗浄充電器にシェーバー本体をセットする時には必ずシェーバーに余分な水分がついていないことを確認してください。

- 1 シェーバー本体のLED表示を後ろ向きにし、シェービングユニットを downward にして洗浄充電器にセットします(図①)。洗浄充電器キャップを下に押しとシェーバーがロックされ通電されず(図②)。充電が開始されると洗浄充電器のバッテリーランプと洗浄ON/OFFタッチボタンが点滅します。



- 3 洗浄が終了すると洗浄充電器のクリーニング完了ランプが点滅し充電を開始します。充電が完了するとバッテリーランプが点灯します。



※ 洗浄と充電が完了し30分経過すると洗浄充電器は自動的に電源が切れます。

- 2 洗浄ON/OFFタッチボタンを押すと洗浄が始まります。洗浄が始まると洗浄ON/OFFタッチボタンと洗浄ランプが点滅します。



- 4 シェーバーを乾燥させるには、洗浄充電器からシェーバーを取り外し、余分な水分をふきとってからシェービングユニットを開けて、自然乾燥させてください。

※ シェーバーを取り外す際にはもう一度キャップ部を押してロックをはずしてから取り外してください。




注意


- スマートクリーンシステムでは洗浄はできますが、消毒はできません。衛生上、シェーバーを他の人と共有しないでください。
- 洗浄中に電源プラグを抜くと洗浄プログラムは中断されます。洗浄するには、再び洗浄ON/OFFタッチボタンを押してください。
- 洗浄中は、洗浄充電器を動かしたり、クリーニングカートリッジを取り外さないでください。
- シェービングユニット内にヒゲクズがたまりすぎたり、長いヒゲがある場合は、きれいに洗浄できない場合があります。P.23・24を参照し、水洗いできれいにしてください。

クリーニングカートリッジの交換方法


- 1 洗浄充電器の側面にある着脱ボタンを押すと(図①)、洗浄充電器本体が持ち上がります(図②)。

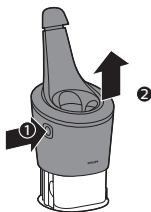


- 3 新しいクリーニングカートリッジのシールを剥がし、下図のように洗浄充電器本体に装着します。

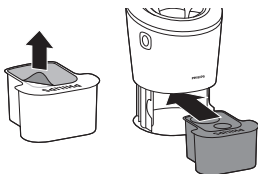

- 2 クリーニングカートリッジを取り出し残った液は全てシンクに注ぎだしカートリッジ本体は処分してください。

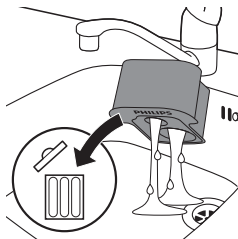

- 4 持ち上げていた洗浄充電器本体をカチッと音がするまで下げます。

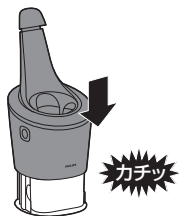

注意

洗浄充電器本体のお手入れは、水で濡らした布を絞って拭き取ってください。

水洗いによるお手入れ方法



注意

- お手入れの際は、電源をOFFにしてから水洗いしてください。
- シェービングユニットは水洗いできますが、本体は水中に浸けしないでください。
- シェービングユニットを乾燥させる時に、タオルやティッシュペーパーを使用しないでください。刃を傷める場合があります。

シェービングヘッドのお手入れ方法

※洗剤は使用しないでください。

※ぬるま湯（40℃前後）でのお手入れをおすすめします。臭いのもととなる皮脂や汗などが取れやすくなります。ただし、熱湯はお止めください。故障の原因となります。

※お手入れ中にシェーバーの底から水が漏れてくる場合がありますが、異常ではありません。


- 1 シェービングユニットを取り付けた状態でシェーバーの電源をONにし、ぬるま湯または水ですすぎ洗いをします。



- 4 シェービングヘッドの余分な水を切り、よく乾かします。

※周囲に気をつけてください。

- 2 シェービングユニットからシェービングヘッドホルダーを取り外してください。

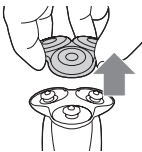

※電源がOFFになっていることを確認してください。

- 5 乾いたことを確認したら、シェービングヘッドホルダーをシェービングユニット受部に取り付けてください。



- 3 シェービングヘッドホルダーおよび受部にたまったヒゲクズをぬるま湯または水で約30秒洗い流します。




シェーピングヘッドのお手入れ方法（分解+水洗い）

※1カ月に1度、またはシェーバーの切れ味が落ちてきたら、シェーピングヘッドを分解して水洗いすることを
おすすめします。


※お手入れの際は、電源をOFFにしてから分解や水洗いをしてください。

- 1 シェーピングユニットからシェーピングヘッドホルダーを取り外し、シェーピングヘッドおよび受部にたまったヒゲクズを、ぬるま湯または水で約30秒洗い流します。

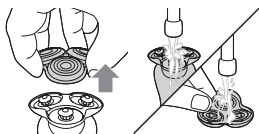


- 2 シェーピングヘッドホルダーの保持板を反時計回りに回して(図①)、シェーピングヘッドホルダーから取り外します(図②)。他の保持板も同様に、反時計回りに回して外します。


※取り外した保持板はなくさないように安全な場所に保管してください。

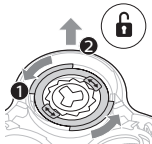

- 3 シェーピングヘッドホルダーから内刃と外刃を取り外します。

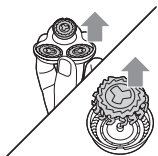

- 4 内刃と外刃をぬるま湯または水でしっかり洗い流し、余分な水を切ってよく乾かします。

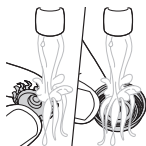


※周囲に気をつけてください。

※内刃と外刃は一組ずつ洗ってください。

※内刃と外刃の組み合わせを変えた場合、シェーピング性能が回復するまで数週間かかることがあります。


- 5 シェーピングヘッドホルダーに外刃と内刃を戻します。

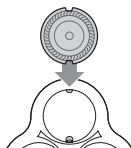

- 6 保持板をシェーピングヘッドホルダーに戻し(図①)たら、時計回りに回し(図②)ます。保持板の矢印とシェーピングヘッドホルダーの突起が合い、「カチッ」と音がするまで回してください。




- 7 シェーピングユニットにシェーピングヘッドホルダーを取り付けます。

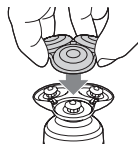

トリマーのお手入れ方法

※トリマーは、使用後必ずお手入れしてください。

- 1 トリマーを取り付けた状態でシェーバーの電源をONにし、ぬるま湯または水ですすぎ洗いをします。

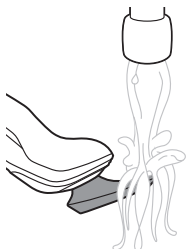


- 2 シェーバーの電源をOFFにし、トリマーを十分に乾燥させてください。

※トリマーはティッシュペーパーやタオルなどでふかないでください。刃を傷める原因になります。



シェーバーを保管する前に
きちんと乾燥させてください。

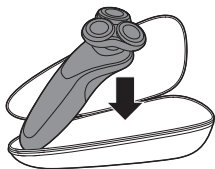

保管の仕方

- シェーバーを収納ケースに格納して保管します。
- ※室温5℃～35℃の環境で保管してください。
- ※直射日光の当たる場所には保管しないでください。
- ※夏場、車の中には放置しないでください。

刃の交換

替刃(SH70)の交換

※シェービング性能を維持するために、刃は2年ごとに交換することをおすすめします。


※交換する際は、必ずフィリップス社製の同型替刃とお取り替えください。

※刃の交換時期は、フィリップスメンズグルーミングアプリで受信され、メッセージランプ表示の点灯でお知らせします。

専用の替刃(品番：SH70)と交換してください。

1 本体からシェービングユニットを取り外し、新しいシェービングユニットに交換してください。

2 刃の交換が終わったら、フィリップスメンズグルーミングアプリを使ってシェーバーをリセットしてください。

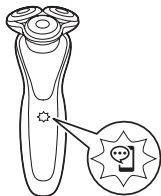

シェーバーを 廃棄するとき

※お客様による充電電池の
修理交換はできません。

リチウムイオン電池のリサイクルについて

このシェーバーはリチウムイオン電池を使用しています。リチウムイオン電池はリサイクル可能な貴重な資源です。ご使用済みの製品の廃棄に際しては、リチウムイオン電池を取り出し、各自治体の処理方法に従い、リサイクル協力店にお持ちください。







注意

- 製品を廃棄するとき以外は、絶対に本体を分解しないでください。
- 本体内部の金具は鋭いので、ご注意ください。

充電電池の取り外し方

電源をONにして、完全に動作しなくなるまで充電電池を放電させてから、行ってください。

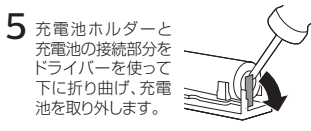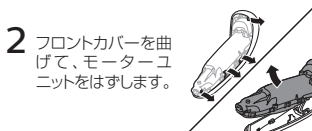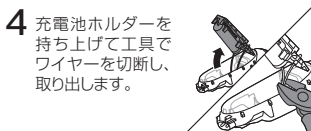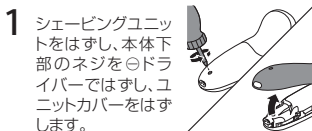

- ※充電電池を取り外した後は、通電しないでください。
- ※ショートしないように充電電池の端子をテープで覆ってください。
- ※充電電池を取り外した後の製品の廃棄については、お住まいの地域の条例などに従って処分してください。

故障かな？と思ったら、
お調べください。

故障かな？
と思ったら


だんだん切れ味が悪くなった

- ▶シェービングヘッド部が汚れていませんか？
- ▶シェービングヘッド部が損傷または摩耗していませんか？
損傷または摩耗しているときは、シェービングヘッドを交換してください。
(替刃品番:SH70)
- ▶シェービングヘッドに長いヒゲがからまっていませんか？
- ▶専用クリーニングカートリッジが汚れていませんか？
P22「クリーニングカートリッジの交換方法」をお読みになり、新しいクリーニングカートリッジと入れ替えてください。

充電しても使用時間が極端に短い

- ▶シェーバーが完全に止まるまで作動させてから、もう一度充電してください。
それでも改善されないときは、充電池の寿命です。

シェーバーの電源ボタンを押しても作動しない

- ▶シェーバーに充電アダプタが接続されていませんか？
充電アダプタを外してください。
- ▶充電はしましたか？
1時間以上の充電をしてください。
- ▶カギマークが表示されていませんか？
 カギマークが表示されたらロックを解除してください。P10「ロック機能」の項をお読みください。
- ▶刃が動かなくなるほど汚れているか、破損していませんか？
シェービングヘッドをお手入れするか、交換をしてください。

シェーバー本体のモーターは回転しているが、内刃が回転しない

- ▶外刃にキズ、ヘコミはありませんか？
シェービングヘッドを交換してください。
(替刃品番:SH70)

充電できない

- ▶ **充電アダプタの電源プラグ部はコンセントにきちんと差し込まれていますか？**
洗淨充電器やシェーバー本体の電源コネクタ受部に充電アダプタのコードがきちんと差し込まれていますか？ 確認してください。
- ▶ **充電アダプタの電源コードが断線していませんか？**
充電アダプタの電源コードが断線している場合は、フィリップスサポートセンターにお問い合わせいただき、同型充電アダプタ(品番：HQ8505)をご注文ください。

洗淨充電器を使用してもシェーバーがあまりきれいにならない

- ▶ **シェーバー本体が正しくセットされていますか？**
シェーバー本体のLED表示を後ろ向きにし、シェービングユニットを下向きにして洗淨充電器にセットします。洗淨充電器キャップを下に押すとシェーバーがロックされます。
- ▶ **専用クリーニングカートリッジを使用していますか？**
フィリップスの専用クリーニングカートリッジ(品番：JC302/51)をお買い求めください。
- ▶ **専用クリーニングカートリッジが古くなっていませんか？**
- ▶ **専用クリーニングカートリッジが空になっていませんか？**
P22「クリーニングカートリッジの交換方法」の項をお読みください。

洗淨充電器の洗淨ON/OFFタッチボタンを押しても作動しない

- ▶ **充電アダプタの電源プラグ部はコンセントにきちんと差し込まれていますか？**
- ▶ **洗淨充電器の洗淨充電器キャップ部にシェーバーが正しくセットされていますか？**
- ▶ **クリーニングカートリッジがセットされていますか？**

スマートフォンが接続できない

- ▶ **フィリップスメンズグルーミングアプリをダウンロードしていますか？**
App StoreもしくはGoogle Playにアクセスし、フィリップスメンズグルーミングアプリをダウンロードしてください。
- ▶ **スマートフォンとシェーバーを正しくペアリングしていますか？**
P14~16「アプリの使い方」をお読みになり、ペアリングをしてください。

ペアリングができない

- ▶ペアリングを解除し、もう一度ペアリング設定を行ってください。

スマートフォンがシェーバーを認識しない

- ▶Bluetoothのバージョンを確認しましたか？
お手持ちのスマートフォンがBluetooth4.1以降であることを確認してください。
- ▶スマートフォンのBluetoothはONになっていますか？
- ▶シェーバーの電源をONにしていますか？
- ▶シェーバーの充電はしましたか？
1時間以上の充電をしてください。


フィリップスメンズグルーミングアプリを使わずに、シェーバーを使いたい

- ▶フィリップスメンズグルーミングアプリを使わなくてもシェービングできます。
シェービングデータの同期のために、シェービングを行ったら20回以内にスマートフォンに接続することをおすすめします。

パーソナルコンフォート設定を変更したい

- ▶シェーバーの設定変更にはフィリップスメンズグルーミングアプリが必要です。
App StoreもしくはGoogle Playにアクセスし、フィリップスメンズグルーミングアプリをダウンロードしてください。またスマートフォンとシェーバーが接続されていることを確認してください。

以上の点検により、正常な状態に戻らない場合は、
フィリップスサポートセンターにお問い合わせください。

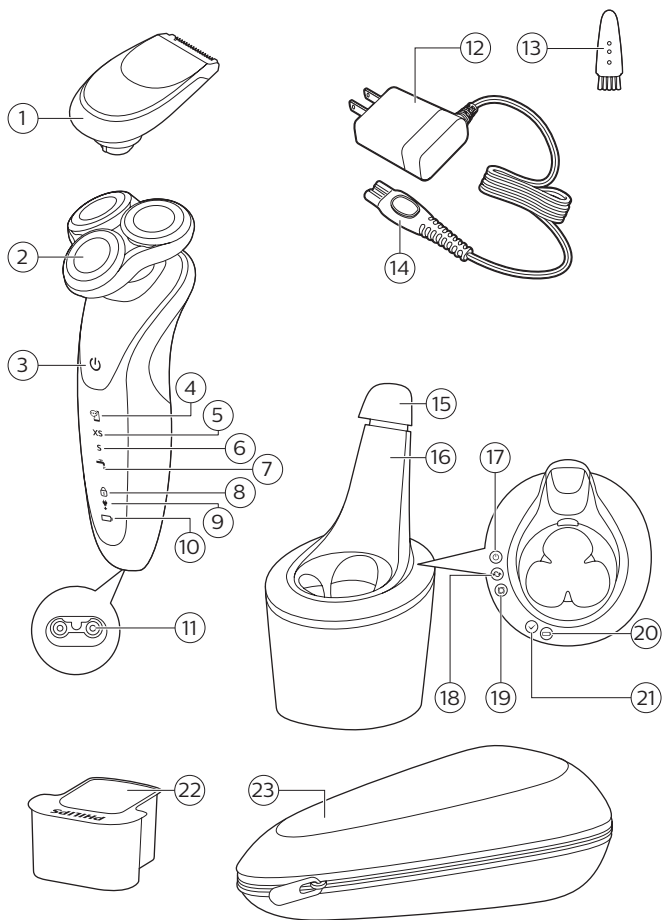

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product easily via the GroomTribe app or at

<http://www.philips.com/s7000-support>.



Download the GroomTribe app to create your Personal Shaving Plan today. It will provide you ongoing guidance on how to tackle your skin issue. The app also tracks your shaving routine and adjusts your shaver's settings in line with your plan.

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger



- Keep the supply unit dry.

Warning

- To charge the battery, only use the detachable supply unit (type HQ8505) provided with the appliance.
- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always unplug the shaver before you clean it under the tap.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- Do not open the appliance to replace the rechargeable battery.
- This appliance contains batteries that are non-replaceable.

Caution



- Never immerse the cleaning system or the charging stand in water and do not rinse it under the tap.
- Never use water hotter than 60°C to rinse the shaver.
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

- If your shaver comes with a cleaning system, always use the original Philips cleaning fluid (cartridge or bottle, depending on the type of cleaning system).
- Always place the cleaning system on a stable, level and horizontal surface to prevent leakage.
- If your cleaning system uses a cleaning cartridge, always make sure the cartridge compartment is closed before you use the cleaning system to clean or charge the shaver.
- When the cleaning system is ready for use, do not move it to prevent leakage of cleaning fluid.
- Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Be careful when handling your smartphone near water and in moist environments.
- The shortwave radio frequency signals of a Bluetooth® appliance may impair the operation of other electronic and medical devices.
- Switch off Bluetooth where it is prohibited.
- Do not use the appliance in medical facilities, aircraft, refuelling points, close to automatic doors, automatic fire alarms or other automatically controlled devices.
- Keep this appliance at least 20 cm from pacemakers and other medical devices. Radio waves may impair the operation of pacemakers and other medical devices.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Radio Equipment Directive

- The frequency band in which the appliance operates is 2.4 GHz.
- This appliance is equipped with Bluetooth class 2.
- The maximum radio frequency power radiated in the frequency band in which the appliance operates is less than 20 dBm.
- This equipment has been so constructed that the product complies with the requirement of Article 10(2) as it can be operated in at least one EU Member State as examined and the product is compliant with Article 10(10) as it has no restrictions on putting into service in all EU member states.
- Hereby Philips declares that this appliance is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The declaration of conformity may be consulted at www.philips.com/support.

General



- This shaver is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without cord.
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100-240 volts to a safe low voltage of less than 24 volts.

- The Bluetooth® wordmark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Koninklijke Philips N.V. is under license.


General description (Fig. 1)

- 1 Click-on precision trimmer attachment
- 2 Click-on shaving unit
- 3 On/off button
- 4 Notification symbol
- 5 Sensitive shave setting XS
- 6 Sensitive shave setting S
- 7 Cleaning reminder
- 8 Travel lock symbol
- 9 Unplug for use reminder
- 10 Battery charge indicator
- 11 Socket for small plug
- 12 Supply unit
- 13 Cleaning brush
- 14 Small plug
- 15 Cap of SmartClean system
- 16 SmartClean system (S7970/26 only)
- 17 On/off button
- 18 Replacement symbol
- 19 Rinsing symbol
- 20 Ready symbol
- 21 Battery symbol
- 22 Cleaning Cartridge for SmartClean System
- 23 Pouch

Note: The accessories supplied may vary for different products. The box shows the accessories that have been supplied with your appliance.

The display


Notification symbol

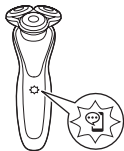

The shaver is equipped with a notification symbol. The notification symbol lights up when there is an important message for you in the app. When it lights up, simply open the app on your smartphone and follow the easy tips that the app gives you. If you need further support, visit

<http://www.philips.com/s7000-support>.


Sensitive shave settings

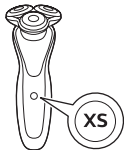

The shaver has a feature that allows you to personalize your shave settings. Choose between three settings depending on your personal shaving needs: extra sensitive(xs), sensitive (s) and normal. Select your preferred setting 'xs', 's' or 'normal' in the app to activate it on your shaver. By default the setting is set on sensitive (s).

Note: The sensitivity settings can only be adjusted by using the GroomTribe App.

Cleaning reminder

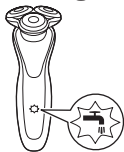


Clean the shaver after every use for optimal performance (see 'Cleaning and maintenance'). The cleaning reminder flashes to remind you to clean the shaver.

Travel lock



When you are going to travel, you can lock the shaver to prevent it from accidentally switching on. The travel lock also deactivates Bluetooth.

'Unplug for use' reminder

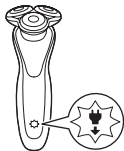


The 'unplug for use' reminder flashes to remind you to disconnect the shaver from the wall socket before you can switch it on.

Note: This shaver is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can only be used without cord.

Charging




Quick charge: After approx. 5 minutes of charging, the shaver contains enough power for one shave. At that moment, the battery charge indicator stops flashing quickly and starts flashing slowly.

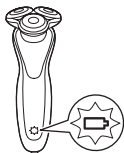

When the shaver continues charging, the battery charge indicator on the shaver flashes white slowly.

Battery fully charged

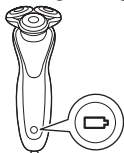


When the battery is fully charged, the battery charge indicator lights up white continuously.

Note: When the battery is full, the display switches off automatically after 30 minutes.

Note: The shaver can only be used without a cord. If you press the on/off button during charging, the unplug for use reminder lights up white to remind you that you have to disconnect the shaver from the wall socket.

Battery low

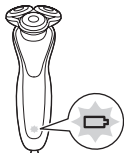

When the battery is almost empty, the battery charge indicator flashes orange. At this point there is enough energy left for one shave.

Bluetooth® connection

The shaver is equipped with *Bluetooth*® 4.1 to connect your shaver to the app. Bluetooth is automatically activated when you switch on the shaver for the first time.

You can only deactivate it by activating the travel lock.

Note: Make sure your smartphone is equipped with Bluetooth 4.1 or higher.



Charging

Charge the shaver before you use it for the first time and when the display indicates that the battery is almost empty.

Charging takes approx. 1 hour. A fully charged shaver has a shaving time of up to 50 minutes.


Note: You cannot use the shaver while it is charging.

Quick charge

After approx. 5 minutes of charging the shaver contains enough power for one shave.

Charging with the supply unit

- 1 Make sure the shaver is switched off.

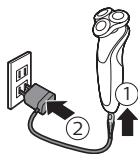


- Put the small plug in the shaver and put the supply unit in the wall socket.

The display of the shaver indicates that the shaver is charging.


- After charging, remove the supply unit from the wall socket and pull the small plug out of the shaver.

Note: When the battery is full, the display switches off automatically after 30 minutes.


Charging in the SmartClean system (S7970/26 Only)

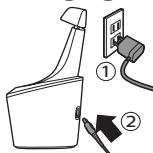


- Put the small plug in the back of the SmartClean system.
- Put the supply unit in the wall socket.

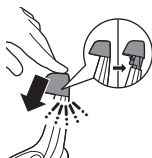

- Press to open the SmartClean system cap, to be able to place the shaver in the holder ('click').



- Hold the shaver upside down above the holder. Make sure the front of the shaver points towards the SmartClean system holder.

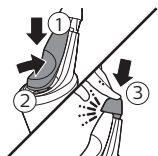

- Place the shaver in the holder, tilt the shaver backwards and press down the SmartClean system cap to connect the shaver ('click').

The battery symbol flashes to indicate that the appliance is charging. When the battery is fully

charged, the battery symbol lights up continuously.

Preparing for use


Pair the shaver and smartphone



The GroomTribe app is compatible with a wide range of iPhone and Android™ smartphones.

More information is available at:

<http://www.philips.com/s7000-support>.

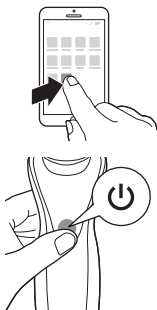

- 1 Download the GroomTribe App from your app store.
- 2 Make sure Bluetooth on the smartphone is switched on.
- 3 Switch on the shaver.
- 4 Open the app and follow the instructions to start the pairing process.
- 5 When paired, the shaver and app will connect automatically when you open the app. Simply keep the app open and Bluetooth on.

Unpair the shaver and smartphone

Pairing allows a connection between 1 shaver and 1 smartphone. To remove this connection (e.g. when you have a new smartphone), use the following steps:

- 1 Unpair the shaver: press and hold the on/off button on the handle for approx. 10 seconds to remove the bond between shaver and app.

Note: The unpairing of the shaver is successful when the notification symbol lights up 4 times briefly.

- 2 Unpair your smartphone: go to 'Settings' on your smartphone and select Bluetooth. Then select 'Shaver S79xx' and press 'forget' or 'unpair'.

Note: The unpairing procedure may vary per smartphone. Please check your smartphone manual for more information.

Using the shaver

Always check the shaver and all accessories before use. Do not use the shaver or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Note: This shaver is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can only be used without cord.

Switching the shaver on and off



- 1 To switch on the shaver, press the on/off button once.
- 2 To switch off the shaver, press the on/off button once.

Connect with the shaver

- 1 Make sure Bluetooth on the smartphone is switched on.
- 2 Open the app on the smartphone.
- 3 When paired (see 'Pair the shaver and smartphone'), the shaver and the app will connect automatically. You can now start shaving.

Note: Make sure you have a good Bluetooth and Internet connection to fully benefit from the app.

- 4 Set your sensitive shave settings.
- 5 Keep the smartphone and shaver close to each other in order to stay connected and synchronize your shaves.

Synchronize your shaves

The shaver can store data up to 20 shaves, so you don't have to shave with your phone near you every time. However, to prevent data loss, synchronize the shaver with the app once every 20 shaves.

- 1 Make sure you are close to the shaver and open the app.
- 2 The app connects automatically and synchronizes your last shaves.

Shaving advice

There are 2 ways to obtain advice: guided shave real time or synchronized shave. We advise you to start with the guided shave to enhance your shaving experience. Correct handling of your shaver will contribute to the best shaving result. Next, follow the advice obtained from the synchronized shaves and the personalized programs.

Shaving

Skin adaptation period

Your first shaves may not bring you the result you expect and your skin may even become slightly irritated. This is normal. Your skin needs time to adapt to any new shaving system.

Follow the advice provided by the app and shave regularly (at least 3 times a week) with this shaver for a period of 3–4 weeks to allow your skin to adapt to the new shaver.

Shaving tips

- For the best results on skin comfort, pre-trim your beard if you have not shaved for 3 days or longer.
- Move the shaving heads over your skin in circular movements.
- Keep each shaving head fully in contact with your skin.
- Exert gentle pressure for a close, comfortable shave.

Dry shaving

- 1 Switch on the shaver.
- 2 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions. Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, as this can cause skin irritation.

- 3 Switch off and clean the shaver after each use (see 'Cleaning and maintenance').

Wet shaving

For a more comfortable shave, you can also use this shaver on a wet face with a shaving gel for sensitive skin.





- 1 Apply some water to your skin.
- 2 Apply shaving gel to your skin.



- 3 Rinse the shaving unit with lukewarm water to ensure that the shaving unit glides smoothly over your skin.
- 4 Switch on the shaver.
- 5 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions. Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, this can cause skin irritation.

Note: Rinse the shaving unit regularly to ensure that it continues to glide smoothly over your skin.

- 6 Dry your face.
- 7 Switch off and clean the shaver after each use (see 'Cleaning and maintenance').

Note: Make sure that you rinse all shaving gel off the shaver.

Using click-on attachments

Using the precision trimmer attachment


You can use the precision trimmer attachment to touch up your beard, sideburns and moustache.

- 1 Make sure the shaver is switched off.



- 2 Pull the attachment straight off the shaver.

Note: Do not twist the attachment while you pull it off the shaver.

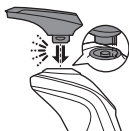

- 3 Attach the precision trimmer attachment to the shaver ('click').

- 4 Switch on the shaver.



- 5 Hold the trimmer perpendicular to the skin and move the shaver downwards while you exert gentle pressure.

- 6 Clean the attachment after use.

Cleaning and maintenance

Regular cleaning guarantees better shaving results.

Never clean, remove or replace the shaving unit while the shaver is switched on.

Do not apply pressure to shaving head guards.

Do not touch shaving heads with hard objects as this may dent or damage the precision-made slotted guards.

Do not use compressed air, abrasives, scourers or aggressive liquids such as petrol or acetone to clean the shaver.

Cleaning the shaver with SmartClean






Preparing the SmartClean system for use

Caution: Do not tilt the SmartClean system to prevent leakage.

Note: Hold the SmartClean system while you prepare it for use.

Note: If you clean the shaver in the SmartClean system once a week, the SmartClean cartridge lasts approximately three months.

- 1 Put the small plug in the back of the SmartClean system.
- 2 Put the supply unit in the wall socket.
- 3 While holding the SmartClean system with one hand, press the button on the side of the SmartClean system and lift the top part of the SmartClean system.
- 4 Pull the seal off the cleaning cartridge.
- 5 Place the cleaning cartridge in the SmartClean system.

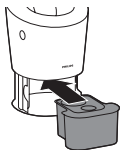




- 6 While holding the SmartClean system with one hand, gently push the top part of the SmartClean system back down ('click').


Using SmartClean

Note: If you use the shaver with shaving foam, shaving gel or pre-shave products, briefly rinse the shaver with warm water before you clean it in SmartClean.


Caution: Always shake excess water off the shaver before you place it in the SmartClean system.

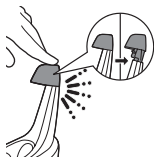

- 1 Press to open the SmartClean cap, to be able to place the shaver in the holder ('click').



- 2 Hold the shaver upside down above the holder. Make sure the front of the shaver points towards the SmartClean holder.

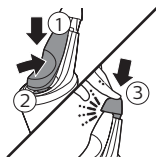

- 3 Place the shaver in the holder (1), tilt the shaver backwards (2) and press down the top cap to connect the shaver ('click') (3).

The battery symbol on SmartClean starts to flash, which indicates that the shaver is charging.



- 4 Press the on/off button on SmartClean to start the cleaning program.

During the cleaning phase, the cleaning symbol flashes. When the cleaning phase is done (after approx. 10 minutes), the cleaning symbol lights up continuously.

Next, the ready symbol lights up continuously.

30 minutes after the cleaning program and charging are done, SmartClean switches off automatically.

The battery symbol lights up continuously to indicate that the shaver is fully charged. Charging takes approx. 1 hour.


- 5 To let the shaver dry, you can leave it in the SmartClean system until your next shave. You can also remove the shaver from the SmartClean system, shake off excess fluid, open the shaving unit and let the shaver air-dry. Press to open the SmartClean cap, to remove the shaver from the holder ('click').

Note: If you press the on/off button of SmartClean during the cleaning program, the program stops. In this case, the cleaning or drying symbol goes out.


Note: If you disconnect SmartClean from its power supply, the cleaning program stops.

Replacing the SmartClean cartridge

Replace the cleaning cartridge when the replacement symbol flashes orange or when you are no longer satisfied with the cleaning result. If you clean the shaver with SmartClean once a week, the cartridge lasts approximately three months.



- 1 While holding SmartClean with one hand, press the button on the side of SmartClean and lift the top part of the SmartClean.

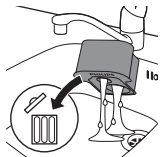


- 2 Remove the cleaning cartridge from SmartClean and pour out any remaining cleaning fluid. You can safely pour the cleaning fluid down the sink.


- 3 Discard the empty cleaning cartridge.

- 4 Unpack the new cleaning cartridge and pull off the seal.

- 5 Place the cleaning cartridge in the SmartClean.

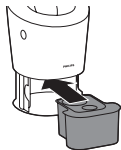

- 6 While holding SmartClean with one hand, gently push the top part back down ('click').



Cleaning the shaver under the tap


Clean the shaver after every shave for optimal performance.

Always check if the water is too hot, to prevent burning your hands.

Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads.

While rinsing the shaving unit, water may drip out of the bottom of the shaver. This is a normal occurrence. The electronics are secured in a watertight inner body.

- 1 Switch on the shaver.
- 2 Rinse the shaving unit with warm water.

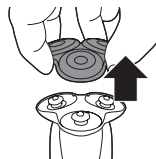


- 3 Switch off the shaver. Pull the shaving head holder off the bottom part of the shaving unit.



- 4 Rinse the hair chamber and shaving head holder with warm water.

While rinsing the shaving unit, water may drip out of the bottom of the shaver. This is a normal occurrence.

- 5 Carefully shake off excess water and let the shaving head holder air-dry completely.

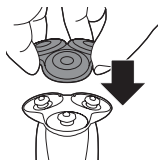


- 6** Attach the shaving head holder to the bottom part of the shaving unit ('click').

Thorough cleaning

We advise you to clean the shaving heads thoroughly once a month or when the shaver does not shave as well as it used to.


- 1** Switch off the shaver.
- 2** Pull the shaving head holder off the bottom part of the shaving unit.

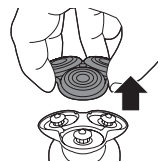


- 3** Rinse the hair chamber and shaving head holder under the tap.



- 4** Turn the retaining ring counter clockwise and lift it off the shaving head.

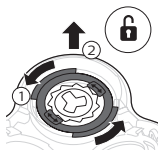


Repeat this process for the other retaining rings. Place them aside in a safe place.

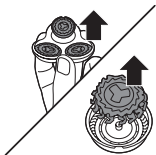


- 5** Remove the shaving heads from the shaving head holder. Each shaving head consists of a cutter and guard.


Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally put a cutter in the wrong shaving guard, it may take several weeks before optimal shaving performance is restored.

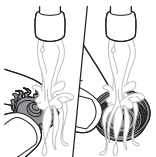


- 6** Clean the cutter and guard under the tap.
7 Shake off excess water.
8 Put the cutter back into the guard.

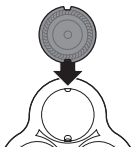

- 9** Place the shaving heads in the shaving head holder.

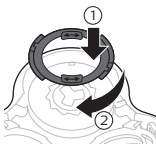

- 10** Place the retaining ring on the shaving head.

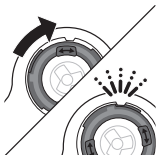


- 11** Align the arrows on the retaining ring with the projections in the shaving head holder. Turn the ring clockwise until it clicks to indicate that the ring is fixed.
12 Attach the shaving head holder to the bottom part of the shaving unit ('click').

Cleaning the click-on attachments

Cleaning the precision trimmer attachment

Clean the trimmer attachment after each use.

- 1 Switch on the appliance with the precision trimmer attachment attached.
- 2 Rinse the attachment under a warm tap.
- 3 After cleaning, switch off the appliance.
- 4 Carefully shake off excess water and let the attachment air-dry completely.

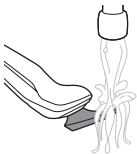

For optimal performance, lubricate the teeth of the attachment with a drop of sewing machine oil every six months.


Travel lock

You can lock the shaver when you are going to travel to prevent it from switching on accidentally.

Activating the travel lock

- 1 Press the on/off button for 3 seconds to use the travel lock mode.

While you activate the travel lock, the travel lock symbol lights up briefly. When the travel lock is activated, the travel lock symbol flashes.

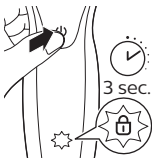

Note: When travel lock is activated, Bluetooth is deactivated.

If you try to switch on the shaver while the travel lock is active, the travel lock symbol flashes.

Deactivating the travel lock



- 1 Press the on/off button for 3 seconds.

While you deactivate the travel lock, the travel lock symbol lights up briefly. The shaver switches on and is now ready for use again. Bluetooth is automatically activated.

Note: The shaver unlocks automatically when it is connected to the wall socket.


Replacement

Replacing the shaving heads

For maximum shaving performance, we advise you to replace the shaving heads every two years. Replace damaged shaving heads immediately. Always replace the shaving heads with original Philips shaving heads (see 'Ordering accessories').

Replacement reminder

The notification symbol lights up when there is an important message for you in the app. When it lights up, simply open the app on your smartphone and follow the easy tips that the app gives you. When it is time, the app will indicate that the shaving heads need to be replaced.

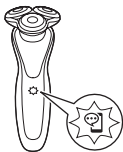

- 1 Switch off the shaver. Pull the click-on shaving unit from the handle.
- 2 Discard the old click-on shaving unit and attach the new click-on shaving unit to the handle. ('click').
- 3 After replacing the click-on shaving unit, you can reset the replacement reminder in the app. If you do not reset the replacement reminder, the app resets automatically after 9 shaves.

Storage

Note: We advise you to let the shaver and its attachments dry before you store the shaver in the pouch.



- Store the shaver in the pouch supplied.

Ordering accessories

To buy accessories or spare parts, visit **www.philips.com/parts-and-accessories** or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

If the text 'Call for replacement head' is indicated on your shaver, please call the Philips Consumer Care Center in your country when you have to replace the shaving heads. You can find the telephone number in the international warranty leaflet.

The following accessories and spare parts are available:

- SH70 Philips click on shaving unit
- HQ110 Philips shaving head cleaning spray
- RQ111 Philips beard styler attachment
- RQ585 Philips cleansing brush attachment
- RQ563 Philips cleansing brush attachment 3-pack
- CP0253 Philips SmartClean cleaning station
- HQ8505 Philips supply unit

Note: Availability of the accessories may differ by country.

Recycling


- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the rechargeable shaver battery


Only remove the rechargeable battery when you discard the appliance. Before you remove the battery, make sure that the appliance is disconnected from the mains and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the appliance.


Be careful, the battery strips are sharp.

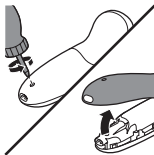


- 1 Remove the screw in the back of the shaver.
- 2 Remove the back panel.

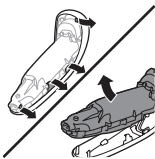


3 Take out the power unit.

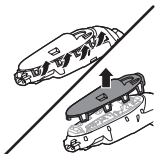

4 Bend the snap hooks aside and remove the transparent cover of the power unit.

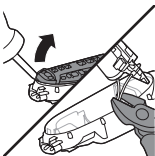

5 Lift out the battery holder and cut the wires with a pair of cutting pliers or scissors.

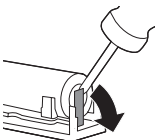

6 Bend the battery tags aside with a pair of cutting pliers or a screw driver.

7 Remove the rechargeable batteries.

Warranty and support

If you need information or support, please visit
www.philips.com/S7000-support

Warranty restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international warranty because they are subject to wear.

Registration

To fully benefit from the support that Philips offers, register your product easily via the GroomTribe or SkinAnalyst app or at
<http://www.philips.com/s7000-support>.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the shaver. If you are unable to solve the problem with the information below, visit
www.philips.com/s7000-support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Possible cause	Solution
I cannot connect the shaver.	You have not downloaded the app.	Download the GroomTribe or SkinAnalyst app from your App store.
	Your shaver and smartphone are not paired yet.	Make sure the shaver and smartphone are paired (see 'Preparing for use').
	The first pairing attempt failed.	Reset/unpair the shaver and smartphone and try to pair them again.
	The smartphone cannot find the shaver.	Make sure your smartphone is equipped with Bluetooth 4.1 or higher.
		Make sure Bluetooth is activated on the shaver and the smartphone.
		Make sure the shaver is charged.
I want to use the shaver without the app.		You do not have to connect your shaver with your phone before each shave. Just make sure that you connect it at least once per 20 shaves to allow synchronization of your shave data.

Problem	Possible cause	Solution
I cannot change the sensitive shave settings on the shaver.		You can only change your shaver settings via the app, so be sure to download it. Make sure there is a good connection between the shaver and your smartphone.
The shaver does not shave as well as it used to.	The shaving heads are damaged or worn. Hairs or dirt obstruct the shaving heads.	Replace the shaving heads (see 'Replacement'). Clean the shaving heads in the regular way (see 'Cleaning the shaver under the tap') or clean them thoroughly.
The shaver does not work when I press the on/off button.	The shaver is still attached to the wall socket. For safety reasons, the shaver can only be used without cord. The rechargeable battery is empty.	Unplug the shaver and press the on/off button to switch on the shaver. Charge the battery.
	The travel lock is activated.	Press the on/off button for 3 seconds to deactivate the travel lock.
	The shaving unit is soiled or damaged to such an extent that the motor cannot run.	Clean the shaving heads thoroughly or replace them (see 'Replacing the shaving heads').

Problem	Possible cause	Solution
Water is leaking from the bottom of the shaver.	During cleaning, water may collect between the inner body and the outer shell of the shaver.	This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.

SmartClean

Problem	Possible cause	Solution
The SmartClean does not work when I press the on/off button.	The SmartClean is not connected to the wall socket.	Put the small plug in the SmartClean and put the supply unit in the wall socket.
	The cleaning cartridge is empty. The replacement symbol flashes to indicate that you have to replace the cleaning cartridge.	Place a new cleaning cartridge in the SmartClean.
The shaver is not entirely clean after I clean it with the SmartClean.	You have not placed the shaver in SmartClean properly, so there is no electrical connection between SmartClean and the shaver.	Press down the top cap ('click') to ensure a proper connection between the shaver and the SmartClean.

Problem	Possible cause	Solution
	The battery of the shaver is not charged sufficiently.	If the battery of the shaver is not charged sufficiently, the SmartClean may not work properly. The shaver needs to be able to switch on briefly during the rinsing phase. Charge the shaver for a short time before you use the SmartClean to clean your shaver.
	The cleaning cartridge needs to be replaced.	Replace the cleaning cartridge.
	You have used another cleaning fluid than the original Philips Norelco cleaning cartridge.	Only use the original Philips Norelco cleaning cartridge.
	The hole of the drain of the cleaning cartridge is blocked.	Remove the cartridge from the SmartClean and push the hairs down the drain with a toothpick.
The shaver is not fully charged after I charge it in SmartClean.	You have not placed the shaver in SmartClean properly, so there is no electrical connection between SmartClean and the shaver.	Press down the top cap ('click') to ensure a proper connection between the shaver and SmartClean.

Apple, the Apple logo, iPad, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Android is a trademark of Google Inc. Google Play and the Google Play logo are trademarks of Google Inc.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Philips Personal Care is under license.

保証と アフターサービス

保証書と修理サービスについて
(必ずお読みください)

〈保証書・最終ページに付属〉

- 保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのあと大切に保管してください。

保証期間	お買い上げ日から2年間
対象部分	本体、充電アダプタ、洗浄充電器(シェービングユニット、トリマー、クリーニングブラシ、収納ケースを除く)

【補修用性能部品の保有期間】

- 補修用性能部品の保有期間は製造打ち切り後6年です。
- 性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】

- 修理に関するご相談ならびにご不明な点は、フィリップスサポートセンターにお問い合わせください。

【修理を依頼されるときは】

- 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、フィリップスサポートセンターにお問い合わせください。

【保証期間中は】

- 製品と保証書をご用意いただき、フィリップスサポートセンターにお問い合わせください。保証書の記載内容により無料修理いたします。

【保証期間が過ぎているときは】

- 修理によって製品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。

【海外での本製品の保証及びアフターサービスについて】

- 本製品の保証は海外においても有効です。(同シリーズ製品の取り扱いがある国に限ります)
- 日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
- 海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。

Philips Consumer Lifestyle Service Department P.O.Box 20100 9200 CA DRACHTEN
The Netherlands Fax:+31 51 259 2785

【お客様の個人情報のお取り扱いについて】

- お受けしましたお客様の個人情報は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

便利メモ

お買い上げ日	年 月 日	お買い上げ店名	TEL. ()
--------	-------	---------	----------

ご使用の時、このような症状はありませんか？

- 本体にさわると時々電気を感じる。
- こげくさい臭いがする。
- 電源コード部を動かすと通電したり、しなかったりする。
- その他の異常、故障がある。

このような症状の時は、故障や事故防止のため、電源をOFFにし、充電アダプタをコンセントから外して、必ずフィリップスサポートセンターにお問い合わせください。



仕 様

品 番	S7970/26	S7930/16,S7910/16
洗浄充電器品番	JC5107	—
電 源 方 式	充電式 (専用充電アダプタ使用)	
充電アダプタ品番	HQ8505	
消 費 電 力	9W (AC100V充電時)	
定 格 電 圧	AC100-240V (50/60Hz)	
本 体 質 量	約166g	
充 電 時 間	約1時間	
替 刃 品 番	SH70	
クリーニングカートリッジ	専用クリーニングカートリッジ (JC302/51)	—

※改良の為、仕様を予告なく変更することがあります。

株式会社 フィリップス・ジャパン

〒108-8507 東京都港区港南 2-13-37 フィリップスビル



無料修理規定

〈無料修理規定〉

1. 取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
 2. 保証期間内に故障して無料修理をお受けになる場合には、フィリップスサポートセンターにお問い合わせください。
 3. ご贈答品の修理に関するご相談は、フィリップスサポートセンターにお問い合わせください。
 4. 保証期間内でも次の場合には有料修理になります。
 - ① 使用上の誤り及び不当な修理や改造による故障及び損傷。
 - ② お買い上げ後の輸送、移動、落下等による故障及び損傷。
 - ③ 火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
 - ④ 一般家庭以外(例えば、業務用の長時間使用)に使用された場合の故障及び損傷。
 - ⑤ 保証書の提示がない場合。
 - ⑥ 保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。
- ※ 保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者(保証責任者)、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。
保証期間経過後の修理についてご不明の場合は、フィリップスサポートセンターにお問い合わせください。
- ※ 保証期間経過後の修理・補修用性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。
- ※ お客様にご記入いただいた個人情報(保証書の控え)は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただく場合がございます。ご了承ください。また個人情報は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

フィリップス 電動シェーバー 保証書

CERTIFICATE OF PURCHASE

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。お買い上げの日から下記期間中に故障が発生した場合は、フィリップスサポートセンターにお問い合わせください。

お客様にご記入いただいた個人情報(保証書の控え)は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/>に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

品名	電動シェーバー		
品番	S7970/26, S7930/16, S7910/16		
保証期間	お買い上げ日より2年		
対象部分	本体、充電アダプタ、洗浄充電器 (シェービングユニット、トリマー、クリーニングブラシ、収納ケースを除く)		
お買い上げ日	年	月	日
お客様	ご住所 〒		
	ご芳名		
	電話番号		
★ 販売店	販売店名・住所・電話番号		


- ★ 保証書は再発行しませんので、大切に保管してください。
- ★ ご販売店様へこの保証書はお客様へのアフターサービスの実施と責任を明確にするものです。贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。

★ **製品の使用方法や修理に関するお問い合わせ**

フィリップスサポートセンター

0120(944)859

受付時間:9:00~18:00(年末年始除く)

Webからの
お問い合わせ 



MyPhilips 登録のご案内



フィリップスでは、製品をより快適にご使用いただくために製品登録をおすすめしております。

- MyPhilipsでは製品の保証書や購入証明書の写真も保管でき、万が一購入証明書を紛失された場合にも安心です。

URL <http://www.philips.co.jp/myphilips-about>

