

www.philips.com

>75% recycled paper
>75% 循环再造纸

4222.100.5983.1



ENGLISH

Introduction

The Precision Brush is uniquely designed to cleanse hard-to-reach areas on your face, such as your nose and chin. Because of its smaller shape, it removes impurities which, if not removed, accumulate in the pores, making them more visible. Over time, if pores stay clean, there is a smaller chance that they will become enlarged.

Note: Please read all instructions for VisaPure Advanced before you use the Precision Brush.

Caution

- The Precision Brush is intended to cleanse hard-to-reach areas, only around the nose and mouth.
- Do not use the Precision Brush if it is damaged or broken, to avoid injuries.
- Do not use the Precision Brush around the eyes.
- Do not use the Precision Brush on the lips, on or inside the ears, or inside the nose.
- To treat the cheeks and forehead, always use a regular sized cleansing brush before you use the Precision Brush.

- Only treat the nose area with the Precision Brush once per treatment. If you use the Precision Brush, do not cleanse your nose with the Regular brush beforehand.
- Wear a headband or tie all your hair securely away from your face, to make sure that no loose hair gets trapped in the the Precision Brush during use.
- Do not use the Precision Brush on dry skin or on open wounds.
- Take out your (nose) piercing and take off your glasses before you use the Precision Brush.
- Do not overtreat your nose area; 15 seconds for each side of your nose is enough to clean both sides properly.
- Do not push too hard on your nose, let the brush do its work.
- Do not put the Precision Brush in the dishwasher.

Precision Brush

The Precision Brush is suitable for all skin types. We advise you to use it once a day.

The ideal sequence consists of the following steps:

- 1 Use the Deep Pore cleansing brush to cleanse your cheeks and forehead.
- 2 After step 1, ensure your make-up is removed and continue to use the Precision Brush to clean harder to reach areas such as your nose and chin area.

Note: Do not cleanse the nose and area around the mouth with the Deep Pore cleansing brush, if you intend to use the the Precision Brush afterwards.

- 3 Finalize with a massage treatment using the Revitalizing Massage attachment.

The 30-second Precision Brush program


Thanks to Intelligent brush head recognition, the VisaPure Advanced handle recognizes the brush head and will run the customized program. The program consists of 2 treatment periods of 15 seconds. Start on the right side of your nose or mouth. When the appliance pauses after 15 seconds, move to the left side of your nose or mouth. (fig. 1)

Note: cleansing the area around the mouth is optional. If you have hard to reach areas, you can use the Precision Brush there as well.

The Precision Brush has 2 intensity settings: intensity setting 1 for a gentle treatment and intensity setting 2 for a more intense treatment.

Note: If you attach the Precision Brush to a VisaPure Essential or a Basic VisaPure, the Intelligent brush is not recognized. The three times 20 seconds program will activate. Please stop using the brush after two times 20 seconds.

Note: It is normal for your nose to feel slightly tender after the first treatment. If you want to, you can reduce the treatment intensity and duration.

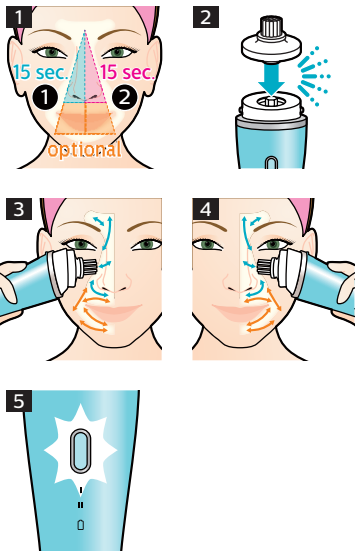

Using the Precision Brush

Make sure you only use the Precision Brush on wet skin. You can use it in combination with a cleanser.

- 1 First cleanse your face with a (Deep Pore) cleansing brush. Only cleanse the cheeks and the forehead. Consult the user manual of your VisaPure for general usage instructions for the cleansing brush head. You can leave the cleanser and water on your face, while you use the Precision Brush.
- 2 Put the Precision Brush onto the VisaPure Advanced, until it locks into position with a click (fig. 2).
- 3 Moisten the brush head and your face with water. Do not use the appliance with a dry brush head, as this can irritate the skin. If preferred, you can put a bit of cleanser onto the brush head. Push the cleanser slightly down in between the bristles, so it does not fall off.
- 4 Switch on the appliance.
- 5 Place the Precision Brush on the right side of your nose. Gently move the brush head up and down across the right side of your nose, and if preferred, also in the mouth area. (fig. 3)

Important: Make sure that you avoid the delicate skin around the eyes. Make sure you do not treat your lips, the inside of the nose and areas around your eyes with the brush head.

Note: Do not push the brush head too hard onto the skin, to make sure that the treatment remains comfortable.

- 6 After 15 seconds, the appliance pauses briefly to let you know that you have to move it to the other side of your nose. (fig. 4)
- 7 When the program is finished, clean the brush head with water (max. 40°C) and mild soap. Make sure you rinse the soap off properly.
- 8 Make sure you dry the clean brush afterwards. First shake the water off. Then dry it with a clean towel. Let the brush head dry on the appliance in the charging stand (without the protection cap), or on the storage pallet. Make sure you press the bristles back into shape, so they can dry properly and remain straight.

- 9 Once the brush head is dry, you can use the protection cap to protect the bristles (during traveling or for storage). Do not cover the brush head with other materials. Make sure the brush head is dry before traveling.

Note: When you attach a different brush head, the appliance recognizes it. You will hear a beep and the intensity setting indications flash alternately. (fig. 5)

Precision Brush replacement

We advise you to replace the Precision Brush after 3 months of use, or earlier if it is damaged. Replacement brush heads are available from www.shop.philips.com or from the shop where you purchased your Philips VisaPure Advanced.

日本語

はじめに

この度は「インテリジェントブラシ小鼻用」をお買い上げいただき、誠にありがとうございます。

長い間ご愛用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。「インテリジェントブラシ小鼻用」は、「ビザピュアドバンス」シリーズに対応しています。「ビザピュアドバンス」本体の取扱説明書も併せてお読みください。

ご使用上の注意

- 目の周りの敏感な部分や、唇、耳の中や鼻の中には使用しないでください。
- ブラシ毛が破損した場合は使用しないでください。ケガの原因となります。
- 刺激の強い化学物質や粗い粒子を含んだ洗顔料、スクラブ入りまたはピーリング
- 作用のある洗顔料などを使用しないでください。
- ブラシを肌に強く押し付けすぎないように気を付けてください。
- 毛穴ディーブクレンジングブラシと同じ部分に使用しないでください。

洗顔プログラム

- 「インテリジェントブラシ小鼻用」は、ヘッド自動認識機能搭載の家庭用美顔器/洗顔ブラシ「ビザピュアドバンス」専用です。「ビザピュアドバンス」本体に取り付けるだけで、デリケートな肌に合わせて開発されたプログラムを自動的に選択します。
- ジェントルモード（低速設定）を選択すると、従来モデル*に比べてブラシの回転数や振動数を抑え、繊細な肌もよりやさしく洗顔することができます。

*「ビザピュア」および「ビザピュアドバンス」でノーマル肌用ブラシを使用した場合の回転数・振動数との比較。

ブラシの使用法について

詳細はフィリップス「ビザピュアドバンス」本体の取扱説明書またはフィリップスホームページをご覧ください。
ホームページアドレス
<http://www.philips.com/>

ブラシの交換

ブラシが磨耗した状態で使用すると肌にダメージを与える恐れがあります。ブラシの洗浄力を保つため、また衛生上の理由から、ブラシは定期的に交換してください。「インテリジェントブラシ小鼻用」の推奨される交換目安は、3ヶ月ごとです。万が一ブラシが破損した場合は、交換目安期間内でも新品を購入の上、交換してください。

株式会社フィリップス エレクトロニクス ジャパン
フィリップスサポートセンター 0120-944-859
日本販売代理店：小泉成器株式会社

한국의

소개

프리시전 브러쉬는 코, 턱 주변의 닿기 힘든 부위까지 세안할 수 있도록 특수 제작되었습니다. 더 작아진 브러쉬 형태로, 꼼꼼히 제거하지 않으면 모공에 누적되어 더 잘 보이는 불순물을 제거합니다. 장기간 사용하면 모공을 깨끗하게 유지해 모공이 확장될 확률을 줄일 수 있습니다.

참고: 프리시전 브러쉬를 사용하기 전 비자퓨어 어드밴스드(VisaPure Advanced) 사용 설명서를 주의 깊게 읽으십시오.

주의

- 프리시전 브러쉬는 클렌징 시 사용할 수 있습니다.
- 프리시전 브러쉬가 손상되거나 고장 난 경우 사용하지 마십시오. 부상의 위험이 있습니다.
- 눈가 주변에는 프리시전 브러쉬를 사용하지 마십시오.
- 입술, 귀, 귀 안 또는 코 안은 프리시전 브러쉬를 사용하지 마십시오.
- 볼과 이마는 프리시전 브러쉬를 사용하기 전, 반드시 일반 크기의 클렌징 브러쉬로 먼저 세안하십시오.
- 클렌징 시 프리시전 브러쉬는 한번만 사용해 코 주변을 클렌징하십시오. 프리시전 브러쉬를 사용하는 경우에는 일반 브러쉬로 코를 먼저 클렌징하지 마십시오.
- 세안 시 머리카락이 프리시전 브러쉬에 걸리지 않도록 머리카락을 착용하거나 머리를 묶으십시오.
- 건조한 피부나 상처 부위에는 프리시전 브러쉬를 사용하지 마십시오.
- 프리시전 브러쉬를 사용하기 전에 피어싱(코)을 제거하고 안경을 벗으십시오.
- 코 주변을 과도하게 클렌징하지 마십시오. 코 양쪽을 15초만 사용해도 클렌징 할 수 있습니다.
- 코에 대고 너무 꼭 누르지 말고 브러쉬를 자연스럽게 사용하십시오.
- 프리시전 브러쉬를 식기세척기에 넣지 마십시오.

프리시전 브러쉬

프리시전 브러쉬는 모든 피부 타입에 적합합니다. 하루에 한 번 사용하는 것이 좋습니다. 올바른 순서는 다음과 같은 단계로

이루어집니다.

- 1 볼과 이마 클렌징 시에는 딥 포어 클렌징 브러시를 사용하십시오.
- 2 단계 후에는 메이크업이 제거되었는지 확인하고, 프리시전 브러시를 계속 사용하여 코, 턱 등 브러시가 닿기 힘든 부위를 철저히 클렌징 하십시오.

참고: 만약 프리시전 브러시를 사용할 시에는 딥 포어 클렌징 브러쉬로 코와 입 주변을 클렌징하지 마십시오.

- 3 생기 회복 마사지 헤드를 사용하여 마사지 후 클렌징을 마무리하십시오.

30초 프리시전 브러쉬 프로그램

VisaPure Advanced는 지능형 브러쉬 헤드 인식 기능으로 헤드를 인식하고 맞춤프로그램을 작동합니다. 이 프로그램은 15초씩 두 번의 클렌징으로 이루어집니다. 코나 입의 우측부터 클렌징을 시작하시고, 15초 후 제품이 작동을 멈추면 다른 쪽으로 이동하십시오 (1).

참고: 입 주변 클렌징은 선택 사항입니다. 닿기 힘든 부위가 있는 경우 그 부분에도 프리시전 브러쉬를 사용할 수 있습니다.

프리시전 브러쉬는 2가지 세기 설정, 즉 부드러운 클렌징 세기 설정 1과 강한 클렌징 세기 설정 2가 있습니다.

참고: 프리시전 브러쉬를 VisaPure Essential 또는 Basic VisaPure에 연결하면 지능형 브러시가 인식되지 않습니다. 20초씩 세 번 진행되는 프로그램이 활성화 될 것입니다. 20초씩 두 번 사용 후 멈추십시오.

참고: 첫 번째 클렌징 후 코가 약간 뜨거울 수 있습니다. 원한다면 클렌징 세기와 시간을 줄일 수 있습니다.

프리시전 브러쉬 사용

프리시전 브러쉬는 젖은 피부에만 사용해야 하며, 클렌저와 함께 사용할 수 있습니다.

- 1 먼저 (딥 포어) 클렌징 브러쉬로 얼굴을 클렌징하십시오. 볼과 이마만 클렌징하십시오. 클렌징브러쉬 헤드의 사용 방법에 대한 기본지침은 VisaPure 사용 설명서를 참조하십시오. 프리시전 브러시를 사용하는 동안 얼굴에 클렌저와 물이 묻어 있어도 괜찮습니다.
- 2 프리시전 브러쉬가 '딱딱' 소리를 내며 제자리에 고정될 때까지 VisaPure Advanced 위에 끼우십시오 (2).
- 3 브러시 헤드와 얼굴을 물에 적셔 주십시오. 피부에 자극을 줄 수 있으므로 브러시 헤드가마른 상태에서는 제품을 사용하지

- 4 마십시오. 원하는 경우, 약간의 클렌저를 브러쉬 헤드에 묻혀도 됩니다. 클렌저가 브러쉬 모 사이 안쪽으로 묻어나게끔 하십시오.
- 5 제품의 전원을 켜십시오.
- 6 프리시전 브러쉬를 코 우측에 댄 후, 브러쉬 헤드를 우측 전체에서 부드럽게 위아래로 움직이십시오. 원하는 경우 입 주변에도 사용하십시오 (3).

중요 사항: 눈 주변같이 섬세한 부위는 피하십시오. 브러쉬 헤드로 입술, 코 안, 눈 주변을 클렌징하지 않도록 하십시오.

참고: 피부에 자극을 줄 수 있으므로 브러시 헤드를 피부에 대고 너무 세게 누르지 마십시오.

- 6 15초 후가 지나면 제품이 잠깐 멈추며 다른 쪽으로 이동을 하도록 알려줍니다 (4).
- 7 프로그램 작동이 끝나면 물(최대 40° C)과 중성 비누로 브러쉬 헤드를 세척합니다. 비누를 깨끗하게 행귀냈는지 확인합니다.
- 8 다 씻은 브러쉬를 말리십시오. 먼저 흔들어 물기를 털어낸 후, 깨끗한 수건으로 닦습니다. 제품은 충전대 또는 보관거치대에 놓은 상태에서 보호 캡을 벗긴 상태로 말리십시오. 브러쉬 모가 올바르게 마르고 원래의 형태로 돌아올 수 있도록 브러쉬 모를 눌러 모양을 잡아주십시오.
- 9 브러쉬 헤드가 마르면 보호 캡을 사용하여 브러쉬 모를 보호합니다 (여행 또는 보관). 브러쉬 헤드를 다른 것으로 덮지 마십시오. 여행하기 전에 브러쉬 헤드가 마른 상태인지 확인하십시오.

참고: 다른 브러쉬 헤드를 부착하면 제품이 이를 인식합니다. 신호음이 들리고 세기 설정 표시등이 번갈아 깜박입니다 (5).

교체용 프리시전 브러쉬

프리시전 브러쉬는 3개월마다 교체해야하며, 손상된 경우에는 이보다 일찍 교체하시는 것이 좋습니다. 교체용 브러시 헤드는 www.shop.philips.com 또는 필립스 VisaPure Advanced를 구입한 매장에서 구매할 수 있습니다.

제조번호 부여기준 : 본 제품의 제조번호는 4자리,5자리,6자리,9자리로 표기될 수 있습니다. **(1) 4자리일 경우** : 앞의 두 자리는 연도를, 뒤의 두 자리는 생산된 주를 의미합니다. 예) 0632 → 2006년 32번째 주에 생산 **(2) 5자리일 경우** : 앞의 두 자리는 연도를, 다음 두 자리는 생산된 주를, 마지막 자리는 생산된 요일을 의미합니다. 예)06243 → 2006년 24번째 주의 수요일 생산 **(3) 6자리일 경우** : 앞의 두 자리는 연도를, 다음 두 자리는 월을, 마지막 두 자리는 일을 의미합니다. 예) 061125 → 2006년 11월 25일 생산 **(4) 9자리일 경우** : 앞의 한 자리는 제조국을, 다음 두 자리는 연도를, 다음 두 자리는 생산된 주를, 다음 한 자리는 공장의 생산라인을, 마지막 3자리는 그 주에 생산된 제품의 일련번호를 의미합니다. 예)507402001 → 네덜란드에서 2007년 40번째 주에 2번 생산라인에서 첫 번째 생산 **(5) 기타제조번호**에 대한 문의사항은 (02)709-1200 으로 연락바랍니다.