

Philips TV Software Upgrade with Portable Memory

Introduction

Philips continuously tries to improve its products, and we recommend that you update the TV software when updates are available. Software update files can be obtained from your dealer or can be downloaded from the www.philips.com/support.

Preparing a USB portable memory for software upgrade

You require the following:

- A personal computer connected to the Internet.
- An archive utility that supports the ZIP-format (e.g. WinZip for Windows or StuffIt for Mac OS).
- A USB flash drive (preferably empty).

NOTE

* Only FAT/DOS-formatted flash drives are supported.

* Only use software update files that can be found on the www.philips.com/support web site.

Check the current TV software version

Before starting the software upgrade procedure, it is advised to check that what the current TV software:


1. Press the Home button on your remote control.
2. Select [Setup] > [Software update] > [Current software info].

If the current software version of your TV is the same as the latest update file found on www.philips.com/support, it is not necessary to update the TV software.


Download the latest software

1. Point your web browser to www.philips.com/support.
2. Find information and software related to your TV.
3. Select the latest software update file and download it to your PC.
4. Insert a USB flash drive into one of the USB ports of your PC.
5. Decompress the downloaded ZIP file and copy the autorun file to the root directory of the USB flash drive.


Update the TV software

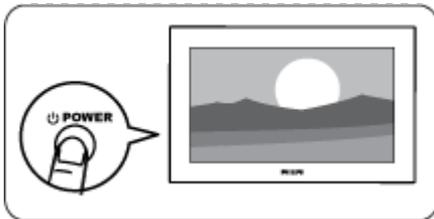

1. Power on your TV.

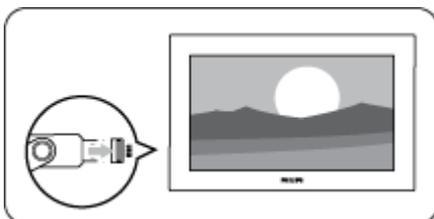


2. Insert the USB flash drive that contains the software update file in the USB port of the TV.

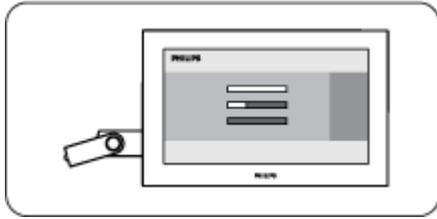


3. The TV will scan for the software update file in the USB flash drive. If the software version is higher than the current TV software, the upgrade will start automatically and the status of the updating progress will be displayed.

NOTE

If the USB flash drive is not detected, disconnect it and reinsert it.

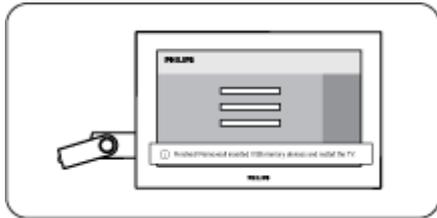

4. When the TV software is updated, a message "Finished" appear on the screen.

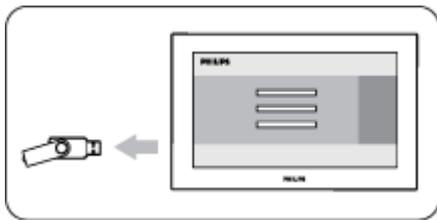

5. Remove the USB flash drive from the TV and restart the TV.

NOTE

* Do not remove the USB flash drive during the software update.

* If a power failure occurs during the update, do not remove the USB flash drive from the TV. The TV will continue the software update as soon as power comes back.

* If an error occurs during the update retry the procedure or contact the Philips Consumer Care centre.

* We do not recommend downgrading to an older version.

Note: Once the upgrade is finished, use your PC to remove the TV software from your USB portable memory.