

Register your product and get support at
www.philips.com/welcome

SE 7450



EN Telephone Answering Machine



Warning

Use only rechargeable batteries.
Charge the handset for 24 hours before use.

PHILIPS

Table of contents

1	Safety information	3	4	Your phone	11
1.1	Equipment Approval Information	3	4.1	What's in the box	11
1.2	Interference Information	4	4.2	Overview of your phone	12
1.3	Hearing Aid Compatibility (HAC)	5	5	Getting started	15
1.4	FCC RF Radiation Exposure Statement	5	5.1	Install your phone	15
2	Important	6	6	Use more of your phone	16
2.1	Power requirements	6	6.1	Using the Intercom	16
2.2	Conformity	7	7	Personal settings	18
2.3	Electric, Magnetic and Electromagnetic Fields ("EMF")	7	7.1	Handset Tones	18
2.4	Recycle your batteries	8	7.2	Set Wallpaper	19
2.5	Service Centers	8	7.3	Set Contrast Level	19
3	Configure your SE7450	9	7.4	Change the Handset Name	19
3.1	Install battery	9	7.5	Change the Display Language	19
3.2	Change the Display Language	9	7.6	Babysit mode	20
3.3	Registration	9	7.7	Set Backlight time	20
			7.8	Set Theme Colour	20

8	Advanced settings	21
8.1	Registration	21
8.2	Unregister a handset	21
9	Games	22
9.1	Play Snake game	22
9.2	Play Tetris game	22
10	Technical data	23
11	Frequently asked questions	24
12	Index	27

1 Safety information

1.1 Equipment Approval Information

Your telephone equipment is approved for connection to the Public Switched Telephone Network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA.

1.1.1 Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating, among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company. The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company. A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and

requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.
- If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this product does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

US Number is located on the cabinet bottom.

REN Number is located on the cabinet bottom.

1.1.2 Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall,

where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

1.2 Interference Information

This equipment generates and uses radio frequency energy which may interfere with residential radio and television reception if not properly installed and used in accordance with instructions contained in this manual. Reasonable protection against such interference is

ensured, although there is no guarantee this will not occur in a given installation. If interference is suspected and verified by switching this equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient the radio/television receiver's antenna, relocate the equipment with respect to the receiver, plug the equipment and receiver into separate circuit outlets. The user may also wish to consult a qualified radio/television technician for additional suggestions. This equipment has been fully tested and complies with all limits for Class B computing devices pursuant to part 15 FCC Rules and Regulations. This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

Privacy of Communications may not be ensured when using this product. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is “receiving” the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, “How To Identify and Resolve Radio/TV Interference Problems.” This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number

004-000-00345-4 when ordering copies. Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

1.3 Hearing Aid Compatibility (HAC)

This telephone system meets FCC/ Industry Canada standards for Hearing Aid Compatibility.

1.4 FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter. For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with the belt clip supplied with this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

2 Important

Take time to read this user manual before you use your phone. It contains important information and notes regarding your phone.

NOTICE: This product meets the applicable Industry Canada technical specifications.

The equipment must be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe systems, if present, are connected together. This precaution may be particularly important in rural areas.

CAUTION: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

NOTES: This equipment may not be used on coin service provided by the telephone company.

2.1 Power requirements

- This product requires an electrical supply of 220-240 volts AC. In case of power failure, the communication can be lost.
- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.
- The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard UL 60950.



Warning

To avoid damage or malfunction:

- Do not allow the charging contacts or the battery to come into contact with metal objects.
- Do not open it as you could be exposed to high voltages.
- Do not allow the charger to come into contact with liquids.
- Never use any other battery than the one delivered with the product or recommended by Philips: risk of explosion.
- Always use the cables provided with the product.
- Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear.

- This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Do not use the product in places where there are explosive hazards.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.
- Active mobile phones in the vicinity may cause interference.

About operating and storage temperatures:

- Operate in a place where temperature is always between 0 and 35° C (32 to 95° F).
- Store in a place where temperature is always between -20 and 45° C (-4 to 113° F).
- Battery life may be shortened in low temperature conditions.

2.2 Conformity

We, Philips declare that the product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. This product can only be connected to the analogue telephone

networks of the countries mentioned on the packaging.

You can find the Declaration of Conformity on www.p4c.philips.com.

2.3 Electric, Magnetic and Electromagnetic Fields ("EMF")

1. Philips Royal Electronics manufactures and sells many consumer oriented products which usually, as with any electronic apparatus, have the ability to emit and receive electro magnetic signals.
2. One of Philips' leading Business Principles is to take all necessary health and safety precautions for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.
3. Philips is committed to develop, produce and market products that cause no adverse health effects.
4. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.
5. Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

2.4 Recycle your batteries

Do not dispose your rechargeable batteries. Call the toll free number 1-800-822-8837 to get instructions on how to recycle your batteries.



The RBRC[®] Seal on the nickel metal hydride battery indicates that Philips Royal Electronics is voluntarily

participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada.

The RBRC[®] program provides a convenient alternative to placing used nickel metal hydride batteries into the trash or municipal waste, which may be illegal in your area.

Philips's participation in RBRC[®] makes it easy for you to drop off the spent battery at local retailers participating in the RBRC[®] program or at authorized Philips product service centers.

Please call 1-800-8-BATTERY for information on Ni-MH battery recycling and disposal bans/restrictions in your area. Philips's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

RBRC[®] is a registered trademark of Rechargeable Battery Recycling Corporation.

2.5 Service Centers

Call Center (USA and Canada):
800-233-8413

E-mail support:
accessorysupport@philips.com


3 Configure your SE7450

3.1 Install battery

Warning

Always use AAA rechargeable batteries supplied with your unit. There could be risk of battery leakage if you use alkaline batteries or other battery types.

- 1 Slide out the battery cover.

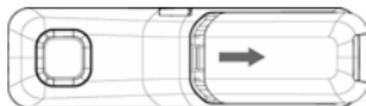

- 2 Place the batteries in the correct polarity as indicated and replace the cover.



3.2 Change the Display Language

Your handset can support different display languages, depending on your country selection during the WELCOME mode.

- 1 Press  **MENU** in idle mode, scroll  to **Personal Set** and press  **SELECT**, scroll  to **Language** and press  **SELECT**.

- 2 Scroll  to your desired language and press  **SELECT** to confirm.
 - A validation tone is emitted and the screen returns to previous menu.

Tip

Once the display language is set, the option menus on the handset will switch to display in the selected language immediately. However, it will not change the language of the predefined outgoing message of your answering machine.

3.3 Registration

The procedures described below are the procedures that you will find in your handset. The procedures may vary according to the handset you want to register. In this case, please refer to the manufacturer of the additional handset. Additional handsets must be registered to the base unit before you can use them. Up to 6 handsets can be registered to one base station.

The Master PIN is required before you can register or unregister handsets.

Note

By default, the Master PIN is 0000.

3.3.1 Register your SE7450

After charging it for a few minutes, the word WELCOME appears on a blue screen. Next, the idle screen appears. Follow these steps to register your handset:

- 1 In idle mode, the message “Press Base page key for 3 secs. Press and

hold ” will be prompted on the screen. Follow the screen instructions to start registration.

2 **Enter PIN** will be displayed on your screen. Enter the default Master PIN number - 0000.

3 Press  **OK** to confirm your registration.

 **Note**

All the handset keys (except the  key) are deactivated until the above registration process is completed.

4 Your phone

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

4.1 What's in the box



Handset



Charger



Battery door



Power supply



2 AAA rechargeable NiMH batteries




User manual



Guarantee

4.2 Overview of your phone

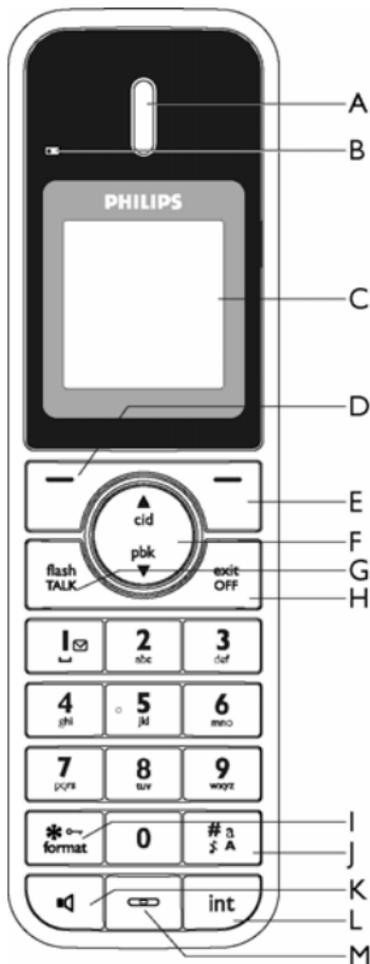

A Earpiece

B Event LED

Blinks when there is a new missed call or Voicemail or answering machine message. Turns off when there are no new events or when all new events have been read.

Note

If you have not subscribed to Caller Line Identification service, there will not be any alerts for new events except for new messages recorded on the answering machine. Hence, the event LED will not blink when there is a new call, or voicemail.

C Display

D Left Softkey

In idle mode: Go to the main menu.

In other modes: Select the function displayed on the handset screen directly above it.

During a call: Mute/unmute the handset microphone.

Switch on the backlight.

E Right Softkey

In idle mode: Access the Redial list.

In other modes: Select the function displayed on the handset screen directly above it.

During a call: Initiate a second call, consult phonebook, transfer a call or activate/deactivate XHD Sound mode.


Switch on the backlight.

F Navigation keys

In idle mode: Scroll up to access the Call log and scroll down to access the Phonebook.

During a call: Scroll up/down to increase or decrease earpiece and speaker volume.

In editing mode: Scroll up/down to go to the previous character or next character. In other modes: Scroll up/down a menu list or go to the previous or next record in the Phonebook, Redial list or Call log.

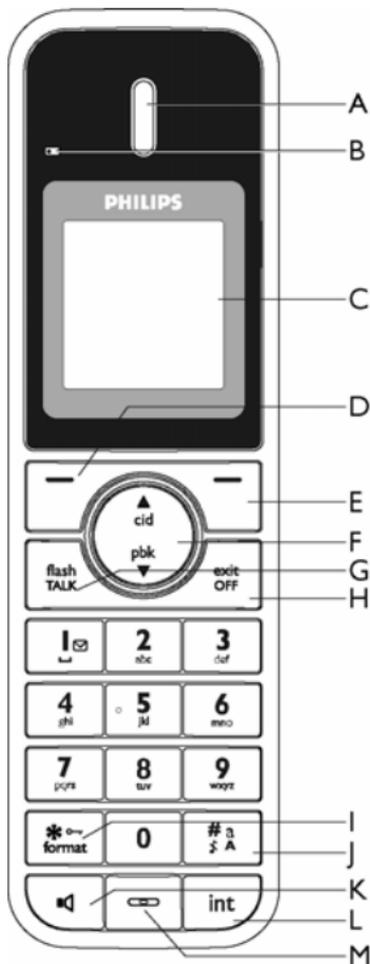

G Talk key

In idle mode: Answer an incoming external or internal call.

During a call: Activate the recall function.

In other modes: Dial the selected number in the Phonebook, Redial list or Call log.

H Hang-up key

In idle mode: *Long press* to switch off the handset, *Short press* to switch on the handset.

During a call: Hang up a call.

In other modes: Return to idle mode.

I Keypad lock/Format key

In idle mode: Insert *. *Long press* to lock/unlock the keypad.

During a call: Insert *.

In call log reviewing mode: Press repeatedly

to view the alternate dialing sequences.

J Ringer on/off key & Pause key

In idle mode: Insert #. *Long press* to turn the ringer on/off.

During a call: Insert #.

When predialling: *Long press* to insert a pause marked "P".

In editing mode: *Long press* to switch between upper and lower case.

K Loudspeaker key

In idle mode: Turn on the loudspeaker and dial the number. Answer an incoming call using handsfree mode.


During a call: Toggle the loudspeaker on/off.

L Call transfer key & Intercom key

In idle mode: Initiate an internal call.

During a call: Hold the line and page another handset.

M Microphone

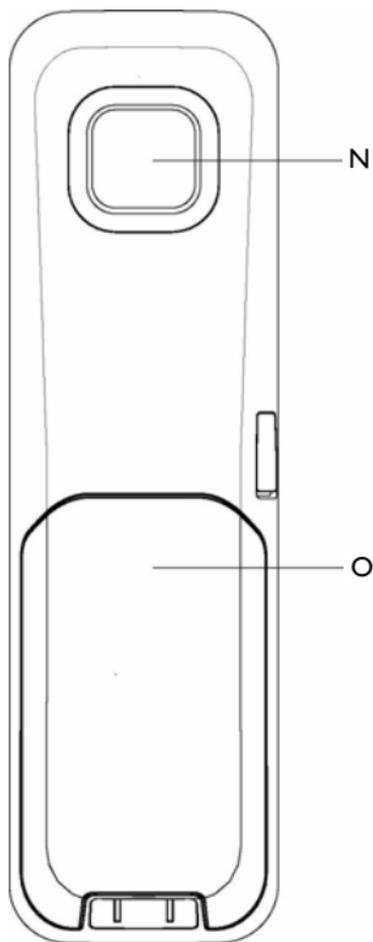

N Loudspeaker

O Battery door

⚡ Danger

Handsfree activation can suddenly increase the volume in the earpiece to a very high level. Make sure the handset is not too close to your ear.

5 Getting started

5.1 Install your phone

Before using the handset, the batteries have to be installed and fully charged.

5.1.1 Install battery

See page 9.

5.1.2 Charge battery

Warning

The handset must be charged for at least 24 hours before using it for the first time. When the battery level becomes low, an empty battery icon is displayed on the screen.

If the battery level becomes exceedingly low, the phone automatically switches off and any function in progress will not be saved.

- 1** Place the handset on the charging cradle of the base station. A melody is emitted if the handset is placed correctly.
- 2** The battery icon  on the display blinks during charge.
- 3** The battery icon  becomes steady when the handset is fully charged.

Note

Optimal battery life is reached after 3 cycles of complete charging (over 15 hours) and discharging, allowing approximately 12 hours of talk-time and 150 hours of stand-by time.

6 Use more of your phone

6.1 Using the Intercom

Warning

Intercom and call transfer is only possible with handsets registered to the same base station.

This feature is only available when there are at least 2 registered handsets. It allows you to make free internal calls, transfer external calls from one handset to another and use the conference option.

6.1.1 Intercom another handset

Note

If the handset does not belong to SE740/745 range, this function may not be available.

- 1 Press  key in idle mode.
 - *Intercom is established immediately if there are only 2 registered handsets.*
- 2 If there are more than 2 registered handsets, the handset numbers which are available for intercom will be displayed. Scroll  to **All Handsets** and press  **SELECT** to call all the handsets or scroll  to the specific handset you want to call and press  **SELECT**.

6.1.2 Transfer an external call to another handset

- 1 During the call, press and hold  key to put the external call on hold (the caller can no longer hear you).
 - *Intercom is established immediately if there are only 2 registered handsets.*
- 2 If there are more than 2 registered handsets, the handset numbers which are available for intercom will be displayed. Scroll  to **All Handsets** and press  **SELECT** to call all the handsets or scroll  to the specific handset you want to call and press  **SELECT**.
 - *The called handset rings.*
- 3 Press  key on the called handset to answer the internal call, where both internal callers can talk.
 - *Intercom is established.*
- 4 Press  key on the first handset to transfer the external call to the called handset.
 - *The external call is transferred.*

Note

If there is no answer from the called handset, press  key to resume the external call.

6.1.3 Answer an external call during intercom

- 1 When there is an incoming external call during an intercom, a new call tone is emitted.

- 2** To answer the external call and end the intercom, press .
- *Connection with the external call is established.*

*** Tip**

To put the internal call on hold and answer the incoming external call, press  key.

6.1.4 Switch between an internal and external call

To switch between an internal or external call, press  key.

6.1.5 Establish a three-party conference call

The conference call feature allows one external call to be shared with two handsets (in intercom). The three parties can share the conversation and no network subscription is required.

- 1** During the call, long press  key to put the external call on hold (the caller can no longer hear you).
- *Intercom is established immediately if there are only 2 registered handsets.*
- 2** If there are more than 2 registered handsets, the handset numbers which are available for intercom will be displayed. Scroll  to **All Handsets** and press  **SELECT** to call all the handsets or scroll  to the specific handset you want to call and press  **SELECT**.
- *The called handset rings.*

- 3** Press  key on the called handset to answer the internal call, where both internal callers can talk.
- *Intercom is established.*
- 4** Press and hold  key for 2 seconds on the first handset to start the three-party conference.
- **CONFERENCE** will be displayed on the screen once the conference call is established.

*** Tip**

If **CONFERENCE** mode is activated, a three-party conference call is automatically established if the second handset takes the line when there is already an external call in progress.

7 Personal settings

7.1 Handset Tones

7.1.1 Set the Ring Volume

Danger

When setting the ring volume of your phone or when the handset rings during an incoming call, please do not hold the handset too close to your ear as the volume of the ringing tone may damage your hearing.

There are 6 ringer volume options (**Silence, Low, Medium, High, Boost and Progressive**). The default level is **Medium**.

- 1 Press  **MENU** in idle mode, scroll  to **Personal Set** and press  **SELECT** press  **SELECT** to enter **Handset Tones** and press  **SELECT** again to enter **Ring Volume**.
- 2 Scroll  to your desired volume level and press  **SELECT** to confirm.
 - A validation tone is emitted and the screen returns to previous menu.

Note

When **Silence** is activated, the icon  will be displayed on the screen.

7.1.2 Set the Ring Melody

There are 10 polyphonic ring melodies available on your handset.

- 1 Press  **MENU** in idle mode, scroll  to **Personal Set** and press  **SELECT**, press  **SELECT** to enter **Handset Tones**, scroll  to **Ring Melody** and press  **SELECT**.
- 2 Scroll  to your desired melody to play the melody.
- 3 Press  **SELECT** to set the ring melody.
 - A validation tone is emitted and the screen returns to previous menu.

7.1.3 Set the Group Melody

To benefit from this feature, you must subscribe to the Caller Line Identification service.

This feature enables you to select and set the melodies to be played when there is an external incoming call from a contact whose name is stored in your phonebook and belongs to a phonebook group. You can associate 1 ring melody to each group. There are three phonebook groups (Group A, B and C) available for you to organise your contacts. Each group can be assigned a unique melody.

- 1 Press  **MENU** in idle mode, scroll  to **Personal Set** and press  **SELECT**, press  **SELECT** to enter **Handset Tones**, scroll  to **Group Melody** and press  **SELECT**.

- 2 Scroll  to the group for which you wish to set melody and press  **SELECT**.
- 3 Scroll  to the desired melody to play the melody.
- 4 Press  **SELECT** to set the group melody.
 - A validation tone is emitted and the screen returns to previous menu.

7.1.4 Activate/Deactivate Key Beep

A single beep is emitted when a key is pressed. You can enable or disable the key beep. By default, the key beep is **On**.

- 1 Press  **MENU** in idle mode, scroll  to **Personal Set** and press  **SELECT**, press  **SELECT** to enter **Handset Tones**, scroll  to **Key Beep** and press  **SELECT**.
- 2 Scroll  to **On** or **Off** and press  **SELECT** to confirm.
 - A validation tone is emitted and the screen returns to previous menu.

7.2 Set Wallpaper

This feature allows you to select the wallpaper to be displayed in idle mode. There are 5 wallpapers pre-installed on your handset. The 5th wallpaper is a blank wallpaper.

- 1 Press  **MENU** in idle mode, scroll  to **Personal Set** and press  **SELECT**, scroll  to **Wallpaper** and press  **SELECT**.
- 2 Scroll  to your desired wallpaper and press  **SELECT** to confirm.
 - A validation tone is emitted and the screen returns to previous menu.

7.3 Set Contrast Level

There are 3 contrast level options (**Level 1**, **Level 2** or **Level 3**). The default contrast level is **Level 2**.

- 1 Press  **MENU** in idle mode, scroll  to **Personal Set** and press  **SELECT**, scroll  to **Contrast** and press  **SELECT**.
- 2 Scroll  to your desired contrast level (**Level 1**, **Level 2** or **Level 3**) and press  **SELECT** to confirm.
 - A validation tone is emitted and the screen returns to previous menu.

7.4 Change the Handset Name

You can name the handset and display the handset name in idle mode. The default handset name of your handset is **PHILIPS**.

- 1 Press  **MENU** in idle mode, scroll  to **Personal Set** and press  **SELECT**, scroll  to **Handset Name** and press  **SELECT**.
- 2 Edit the handset name (maximum 14 characters) and press  **OK** to confirm.
 - A validation tone is emitted and the screen returns to previous menu.

7.5 Change the Display Language

See page 9.

7.6 Babysit mode

You must have at least 2 handsets registered to your base station to be able to use this feature (see page 9 "Registration"). This feature allows you to monitor, e.g. the baby's room.

To use the Babysit feature you need to activate it (e.g. on handset 1) and enter the number of the handset to be called (e.g. handset 2) in the event that there are noises in the monitored room. Place the handset which is in Babysit mode (e.g. handset 1) in the room to be monitored. If this handset detects a sound level greater than a certain threshold, it will automatically initiate an internal call to the selected handset (e.g. handset 2).

7.6.1 Activate Babysit Mode

Note

In Babysit mode, all keys are deactivated except for  **MENU** key. The handset cannot perform any normal operation (making an outgoing call, receiving an incoming call, intercom another handset, paging, etc.) once this function is activated.

- 1 Press  **MENU** in idle mode, scroll  to **Personal Set** and press  **SELECT**, scroll  to **Babysit mode** and press  **SELECT**.
 - **Babysit mode** is displayed on the screen.
- 2 Scroll  through the list of handsets available and press  **SELECT** to select the handset to be called.

7.6.2 Deactivate Babysit Mode

- 1 Press  **MENU** in idle mode, select **Off** and press  **SELECT**.
-

7.7 Set Backlight time

- 1 Press  **MENU** in idle mode, scroll  to **Personal Set** and press  **SELECT**, scroll  to **Backlight Time** and press  **SELECT**.
- 2 Scroll  to **20s**, **40s** or **60s** and press  **SELECT** to confirm.
 - A validation tone is emitted.

Note

By default, the backlight remains on for 20 seconds after each activation such as an incoming call, key presses, lifting the handset off the base station, etc.

7.8 Set Theme Colour

- 1 Press  **MENU** in idle mode, scroll  to **Personal Set** and press  **SELECT**, scroll  to **Theme Colour** and press  **SELECT**.
- 2 Scroll  to **Theme Colour 1**, **Theme Colour 2** or **Theme Colour 3** and press  **SELECT** to confirm.
 - A validation tone is emitted.

8 Advanced settings

8.1 Registration

See page 9.

8.2 Unregister a handset

- 1 Press  **MENU** in idle mode, scroll  to **Advanced Set** and press  **SELECT**, scroll  to **Unregistration** and press  **SELECT**.
- 2 Enter the Master PIN when prompted and press  **OK** to confirm.

Note

By default, the Master PIN is 0000.

- 3 Scroll  to select the handset number to unregister and press  **SELECT**.
 - A validation tone is emitted to indicate successful unregistration and the screen shows **UNREGISTERED**.

Note

If no action is taken on the handset within 15 seconds, the unregistration procedure will be aborted and the handset returns to idle mode.

To unregister a handset that does not belong to the SE740/745 range, you can only use the SE740/745 handset to unregister it.

9 Games

9.1 Play Snake game

The objective of this game is to move the snake and eat as many "food blocks" as possible. When the food is eaten, the snake grows in length and the score increases. Once you hit the body of the snake itself, the game is over. .

- 1 Press  **MENU** in idle mode, scroll  to **Games** and press  **SELECT**, scroll  to **Snake** and press  **SELECT**.

- An instruction screen is displayed.

Note

Press  /  /  /  keys to move up / move left / move right / move down respectively.

Press  to pause/continue with the game. Press  to select the difficulty level.

- 2 To start the game, press  **SELECT** or  key.
- 3 To exit from the game, press .

9.2 Play Tetris game

You can rotate each shaped block as they fall such that they fit neatly into horizontal blocks. The more blocks you can gather within the same level, the more you will score.

- 1 Press  **MENU** in idle mode, scroll  to **Games** and press  **SELECT**, scroll  to **Tetris** and press  **SELECT**.

- An instruction screen is displayed.

Note

Press  /  /  /  keys to rotate / move left / move right / move down respectively.

- 2 To start the game, press  **SELECT**.
- 3 To exit from the game, press .

10 Technical data

Display

- Progressive LCD backlight

General telephone features

- Dual mode caller name & number identification
- 10 polyphonic ringer melodies

Battery

- 2 x HR AAA NiMh 600 mAh batteries

Power Consumption

- Power consumption at idle mode:
around 800mW

Temperature range

- Operation: Between 0 and 35° C (32 to 95° F).
- Storage: Between -20 and 45° C (-4 to 113° F).

Relative humidity

- Operation: Up to 95% at 40°C
- Storage: Up to 95% at 40°C

11 Frequently asked questions

www.philips.com/support

In this chapter, you will find the most frequently asked questions and answers about your phone.

Connection

The handset does not switch on!

- Charge the batteries: Put the handset on the base station to charge. After a few moments, the phone will switch on.

The handset does not charge!

- Check charger connections.

icon is not blinking during charge!

- Battery is full: There is no need to charge the battery.
- Bad battery contact: Adjust the handset slightly.
- Dirty contact: Clean the batteries contact with a dry cloth.
- Wrong batteries installed: Use only AAA rechargeable batteries supplied with your unit. There could be risk of battery leakage if you use alkaline batteries or other battery types.

Communication is lost during a call!

- Charge the battery
- Move closer to the base station.

The phone is "Out of range"!

- Move closer to the base station.

Warning batt. is displayed on handset!

- Use only AAA rechargeable batteries supplied with your unit. There could be risk of battery leakage if you use alkaline batteries or other battery types.

Set-up

Searching... is displayed on handset and icon is blinking!

- Move closer to the base station.
- Make sure that your base station is on.
- Reset your unit and restart handset registration (see "Registration" on page 9).

Sound

Handset does not ring!

Check that the **Ring Volume** is not set to **Silence**, and make sure  icon is not displayed on the screen (see "Set the Ring Volume" on page 18).

Caller cannot hear me at all!

Microphone may be muted: During a call, press  **UNMUTE**.

There's no dialling tone!

- No power: Check the connections.
- Batteries are empty: Charge the batteries.
- Move closer to the base station.
- Wrong line cable used: Use the line cable provided.
- Line adaptor is required: Connect the line adaptor to the line cord.

Caller cannot hear me clearly!

- Move closer to the base station.
- Move the base station at least one metre away from any electronic appliances.

Frequent noise interference on my radio or television!

- Move the base station as far away as possible from the electrical appliances.

Product behaviour

Keypad does not work!

- Unlock your keypad: Long press  in idle mode.

The handset warms up when making a long call!

- This is a normal behavior. The handset consumes energy while calling.

The handset cannot be registered to the base station!

- Maximum number of handsets has been reached. To register a new

handset, unregister an existing handset.

- Remove and replace the handset batteries.
- Try again by disconnecting and connecting the base station power supply and follow the procedure to register a handset.
- Make sure that you have entered the correct PIN code. If you have not changed it, by default it is 0000.

Caller's number is not displayed!

- Service is not activated: Check your subscription with your network operator.

Poor audio quality and the antenna icon is blinking!

- The indoor and outdoor range of the phone is up to 50 metres and 300 metres respectively. When the handset moves beyond the operation range, the antenna icon  will blink.

My handset keeps going into idle mode!

- If there are no key presses for 30 seconds, the handset will automatically return to idle mode. It will also return to idle mode automatically when you place the handset back on the base station.

Phonebook entry cannot be stored and MEMORY FULL is displayed!

- Delete an entry to free memory before saving your contact again.

The copy from my mobile phone SIM card to SE7450 is not complete!

- Only phonebook entries from your mobile phone SIM card will be transferred. If you have phonebook entries on your mobile phone memory, transfer them to your mobile phone SIM card before transferring to your SE7450.

The Master PIN code is wrong!

- The default master PIN is 0000.
- If it has been changed before, and you cannot remember the new one, reset the handset to revert to the default master PIN code.

12 Index

A

- Accessories 11
- Answer an external call 16

B

- Backlight time 20

C

- Charge battery 15
- Conference call 17
- Connect base station 15

D

- Display icons 14

H

- Handset Name 19
- Handset Tones 18

I

- Install battery 9
- Install phone 15
- Intercom 16

K

- Key Tone 19

L

- Language 9

O

- Overview of your phone 12

R

- Recycle your batteries 8
- Registration 9
- Ring Melody 18
- Ring Volume 18

S

- Switch handset on/off 16

U

- Unregister 21



Copyright © 2007 Koninklijke Philips Electronics N.V. All rights reserved.

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

Specifications are subject to change without notice.

Document order number: 3111 285 37421 (EN/ES/FR)

Printed in China.

